

Montpellier

THE PERFECT BALANCE OF FUNCTION AND STYLE

LAUNDRY - DISHWASHING - COOKING - COOLING

Installation and Operating Instructions



70cm Curved Glass Hood CHG713MSS - Stainless Steel

Please read these instructions carefully before attempting to install or use this appliance.
We recommend that you keep these instructions in a safe place for future reference.

Welcome

Thank you for choosing this Montpellier Curved Glass Cooker Hood.

Our Hoods has been designed to provide you with the best combination of style, reliability and performance to give you years of trouble-free use.

You may be familiar with a similar product, but please take time to read these instructions carefully before installing or using your Cooker Hood to ensure you get the most from your purchase.

We recommend that you keep this manual in a safe place for future reference.



Your Cooker Hood is covered by a comprehensive two year Parts & Labour Guarantee. In the unlikely event that you experience a problem with your Hood, you can rest assured that you are fully protected against the cost of repairs for the first 24 months . Please note that any claim must be accompanied by the model reference number, serial number and proof of purchase.

To activate your guarantee, you will need your product serial number. This can be found on the rear of the machine.


There are two ways to register your Guarantee:

- **Online:** Visit the Support page on our website and complete the online Product Registration form. www.montpellier-appliances.com
- **By Post:** Simply detach and fill in the form provided, attach a stamp and send it in the post. Don't forget to include your e-mail address so that we can send confirmation through to you.



Note: We are unable to take registrations over the phone.

Description of the Appliance

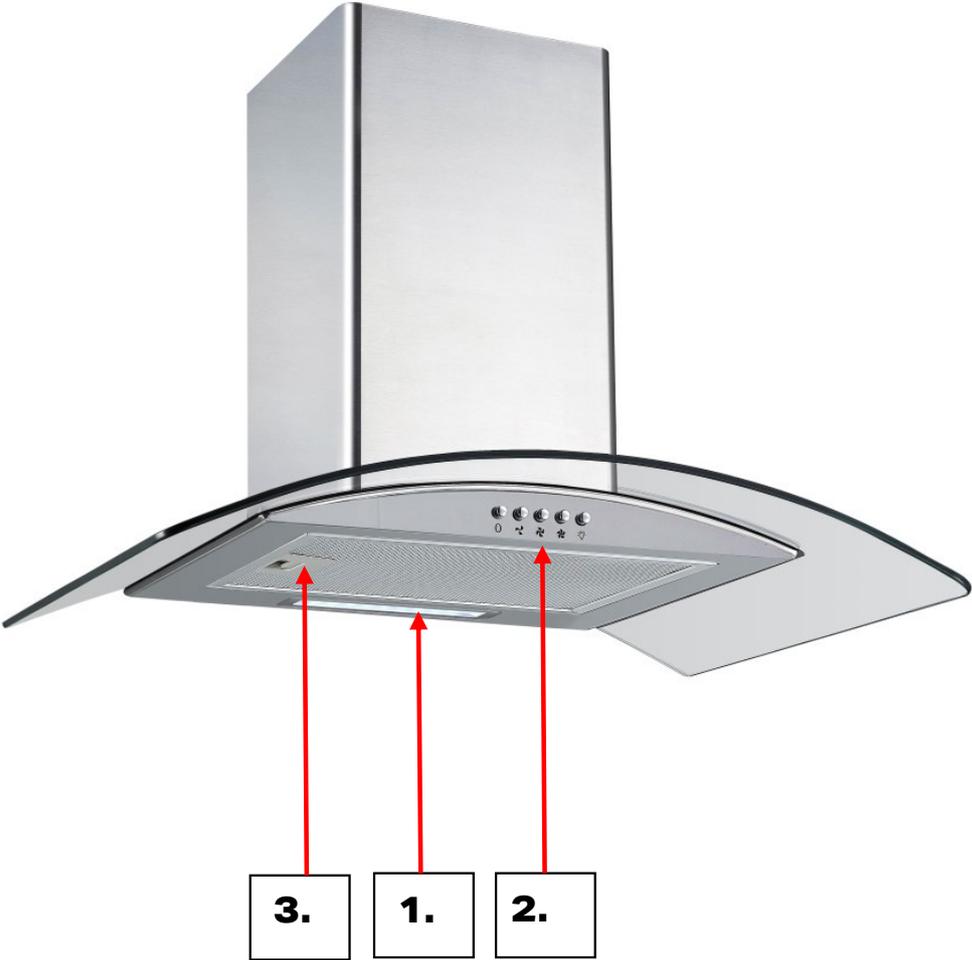

- 1. Light
- 2. Function Control Panel
- 3. Filter

CONTENTS:

Section 1. Installation

Section 2. Safety Advice

Section 3. Operating the Appliance

Section 4. Maintenance

Section 5. Circuit Diagram

Section 1. Installation

A qualified installer must carry out the installation.

This appliance can be used fully 'vented' via a ducting hose and external wall vent, or in 're-circulation' mode by using the charcoal filter provided.

You must ensure that the appliance is horizontal (See Fig. 1 below).

The cooker hood should ideally be installed between 65-75cm above the work surface/cooker hob. DO NOT INSTALL BELOW 65cm.

Fit the installation plate and chimney installation plate to the wall (See Pic. 2 below).

Fit the exhaust pipe, chimney and glass to the main body (See Pic.3 below).


Hang the hood onto the installation plate (See Pic. 5 below).

Connect the exhaust hose and then secure to the chimney installation plate.


Connect the chimney extension to the hood (See Pic. 6 below).

Ensure that the appliance has been attached to the wall securely!

The mains lead/plug should be connected to a suitably positioned fused electrical spur, protected by a 13amp fuse.

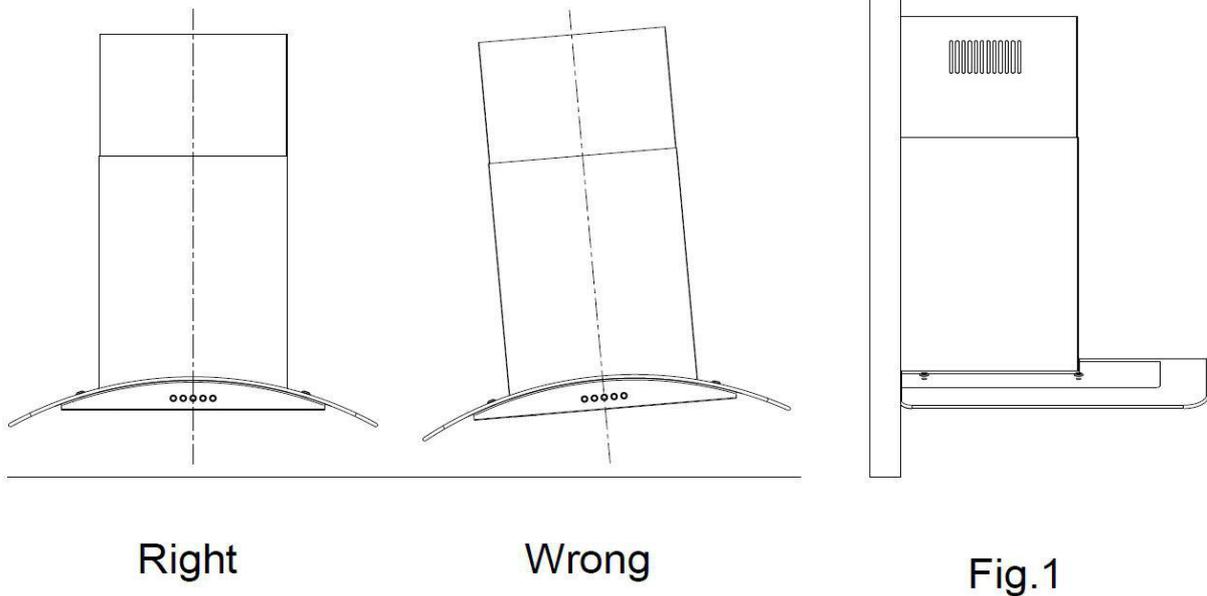


Measure the position of the holes for hanging the chimney hood bracket. Drill 4 $\phi 8$ holes, 2 for inside chimney bracket and 2 for hanging the hood and keep the hood level. The fixed position of the inside chimney bracket is the highest place of chimney. See pic 2.

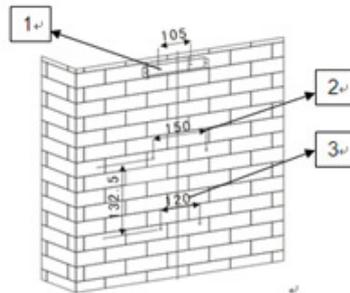

Pic 2

Screw two 4 x 30mm screws on the wall with wall plugs to fix the hood then use two 4mm x 40mm screws to fix the chimney bracket. See Pic 2. Position the glass on the cooker hood and then use the screws to fix the glass. Attach the expansion pipe onto the one-way-valve as shown below and fix the pipe on the valve using a cable tie, then fix the expansion pipe to the wall outlet. See pic 3.

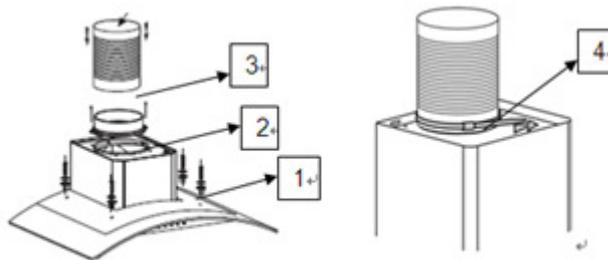


Pic 3

Install the inner section into the outer section. See Pic 4.


Fix the hood hang on the wall in the final position using the screws provided.

See Pic 5.


Put the two chimney sections together onto the cooker hood body, meanwhile adjust the height of the inside chimney into the suitable height, and fix the inside chimney to the inside chimney bracket using the screws provided. See Pic 6.

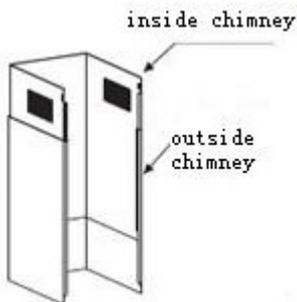

Pic 4

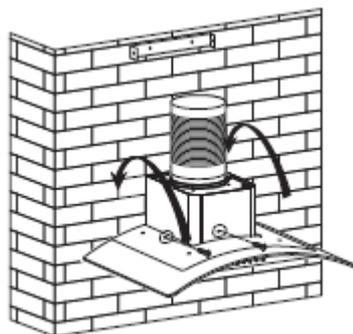

Pic 5

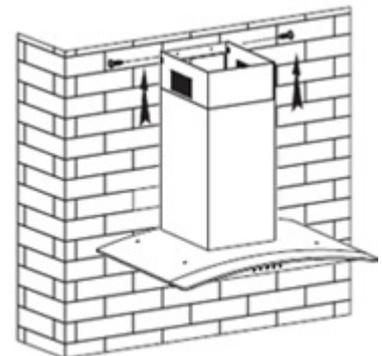

Pic 6

Section 2. Safety Advice

This appliance is manufactured and intended for DOMESTIC use only. Any guarantee offered with the appliance is not valid for any installation in a commercial environment.

This appliance incorporates stainless steel. Handle with care as some of the edges may be sharp.

The main filter must be cleaned on a regular basis in order to help maintain the appliance in good working order.

Always turn off the electricity supply before cleaning the filter or the appliance exterior.


When replacing the bulbs or charcoal filter, ensure that you fit a 'like for like' replacement.

We recommend that this appliance is installed by a professional installer.

This appliance shall not be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction on how to use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the power supply cord is damaged, it must be replaced by the manufacturer, it's service agent or similarly qualified persons in order to avoid a hazard.

Section 3. Operating the Appliance

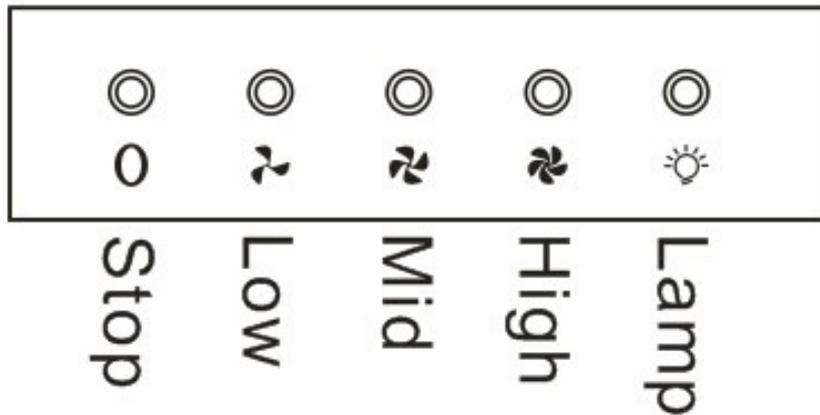

To operate the Cooker Hood, proceed as follows:

Press the **Stop** button to switch off the motor

Press the **Low** button for low speed

Press the **Mid** button for medium speed

Press the **High** button for high speed

Press the **Lamp** button to switch the light on and off

For best results, we recommend that the Cooker Hood is switched on at least 10 minutes prior to cooking and left to run for a period of 10 minutes after cooking is finished.

(N.B. The control buttons shown are for indicative purposes only – actual model supplied may differ slightly).

Section 4. Maintenance

4.1. Cleaning the Main Filter

If your cooker hood has aluminium filters, simply remove the filter panels and wash them in clean soapy water, ensuring that they are dry prior to refitting.

If you have charcoal filters, remove the aluminium filter panel and replace the charcoal filter(s) with like for like replacements.

4.2. Replacing the LED Light Unit

The LED unit must be replaced by a qualified electrician/service agent.

4.3. What to do if something goes wrong

The light bulb does not work:

- The LED unit has probably failed. Refer to Section 4.2. above
Please note that LED units are not covered by any guarantee offered with this appliance.



Motor operates but level of extraction appears to be poor:

- Check and clean the filter as detailed in Section 4.1. Dirty filters will cause a noticeable drop in performance. If you are using the appliance on 're-circulation' mode the charcoal filter may require changing as detailed in Section 4.3.

There is no power to the appliance:

- Check there is not a power cut
- Check there is power to the electric socket/appliance
- Check the fuse in the plug and/or spur (Must be 13amp)

Section 5. Circuit Diagram

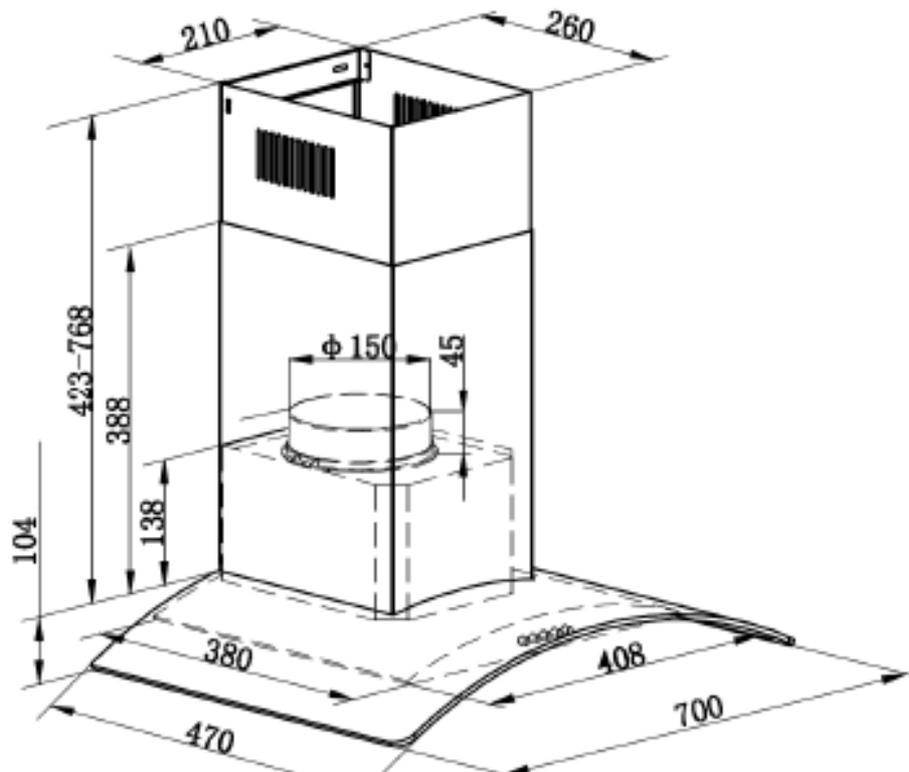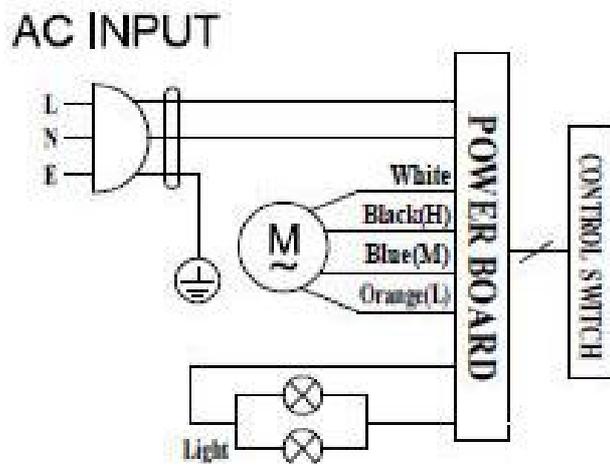

Here For You

After-sales assistance

If you continue to experience problems with your Cooker Hood, please call the Montpellier customer service helpline on: **01759 487839**.

Please have all your product details available, including the model number, serial number, date of purchase, and your retailer's details before registering a fault.

The service call cannot progress without this information.

Your 2 year Manufacturer's guarantee

THIS DOES NOT AFFECT YOUR STATUTORY RIGHTS.

Your new Montpellier appliance carries a free guarantee which protects you against the cost of repairs during the first 24 months from date of purchase provided that:

Any claim is accompanied by evidence of the model reference, model serial number and proof of purchase, such as a Sales Receipt, showing that the appliance was purchased within the 24 months prior to the date of claim.

What is not covered under the Guarantee

- Any appliance not correctly installed and operated in accordance with the manufacturer's instructions.
- Any appliance that is used for anything other than domestic purposes.
- Any defect caused by accident, misuse, unauthorised modification or inexpert repair.
- Cost of Call-out where a fault cannot be found with the appliance.
- Cost of Call-out for work covering routine maintenance, such as, but not exclusively, cleaning of filters or defrosting.
- Cost of Call-out for work required to correct the alignment of doors following door reversal procedures carried out by you.
- Use of the appliance by anyone other than the Householder.
- Use in any commercial environment.
- Consumable items, such as, but not exclusively, fuses in plugs, bulbs and breakable items which require routine replacement.
- Repair costs incurred that have not been authorised by Montpellier and/or carried out by a non-approved Montpellier engineer.

YOUR GUARANTEE IS VALID ONLY IN THE UK & ROI.

To register your appliance simply complete the card in your appliance pack and return it with a stamp affixed or alternatively you can register online at **www.montpellier-appliances.com/support**

SERVICE HELP-LINE

Should your appliance develop a fault, please call the Montpellier customer service helpline on: **01759 487839**.

Please remember to have all your product details available, including the model number, serial number, date of purchase and your retailer's details before registering a fault.

Your service call cannot progress without this information.

Montpellier Domestic Appliances Ltd.

Unit 1, Tewkesbury Retail Park, Northway Lane,
Tewkesbury, Gloucestershire GL20 8JU

www.montpellier-appliances.com



The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.