

montpellier

Installation and Operating Instructions

MODEL: MON-M604DDAP

92cm A+ SIDE BY SIDE FRIDGE FREEZER



(Picture shown for indicative purposes only, model supplied may differ).

Please read these instructions carefully before attempting to install or use this appliance.

It is advisable to keep these instructions in a safe place for future reference.

N.B. Should your appliance require attention, our service agents will not be able to book a service call without your unique serial number which can be found on the last page of this manual.

Introduction

Thank you for choosing this **montpellier** appliance. It has been designed to give years of trouble-free use provided it is installed and maintained correctly.

Please read these instructions carefully before installing or using your appliance. It is advisable to keep your purchase and installation receipts with these instructions in a safe place for future reference. Included is some important safety information in addition to guidelines and recommendations that will enable you to take full advantage of all the functions available.

This quality appliance has been tested and certified to meet all applicable UK electrical and safety standards.

This appliance must be installed and connected in accordance with current regulations by a qualified electrician.

After unpacking the appliance ensure that there is no visible damage. If the appliance has been damaged during transit, do not use it, contact your retailer immediately.

Your 2 year Manufacturer's guarantee

THIS DOES NOT AFFECT YOUR STATUTORY RIGHTS.

Your new **montpellier** appliance carries a free guarantee which protects you against the cost of repairs during the first 24 months from date of purchase provided that:

Any claim is accompanied by evidence of the model reference, model serial number and proof of purchase, such as a Sales Receipt, showing that the appliance was purchased within the 24 months prior to the date of claim.

What is not covered under the Guarantee:

- Any appliance not correctly installed and operated in accordance with the manufacturer's instructions.
- Any appliance that is used for anything other than domestic purposes.
- Any defect caused by accident, misuse, unauthorized modification or inexpert repair.
- Cost of Call-out where a fault cannot be found with the appliance.
- Cost of Call-out for work covering routine maintenance, such as, but not exclusively, cleaning of filters or defrosting.
- Cost of Call-out for work required to correct the alignment of doors following door reversal procedures carried out by you.
- Use of the appliance by anyone other than the Householder.
- Use in any commercial environment.
- Consumable items, such as, but not exclusively, fuses in plugs, bulbs and breakable items which require routine replacement.
- Repair costs incurred that have not been authorised by Repairtech and/or carried out by a non-approved Repairtech engineer.

YOUR GUARANTEE IS VALID ONLY IN THE UK.

To Register your Appliance simply complete the card in your appliance pack and return it with a stamp affixed or Alternatively you can Register online at www.repairtechuk.com

SERVICE HELP-LINE

Should your appliance develop a fault, please call the


Repairtech Service Helpline on:

01527-888133

Please remember to have all your product details available, including the model number, serial number, date of purchase and your retailer's details before registering a fault.

Your service call cannot progress without this information.

Description of the Appliance

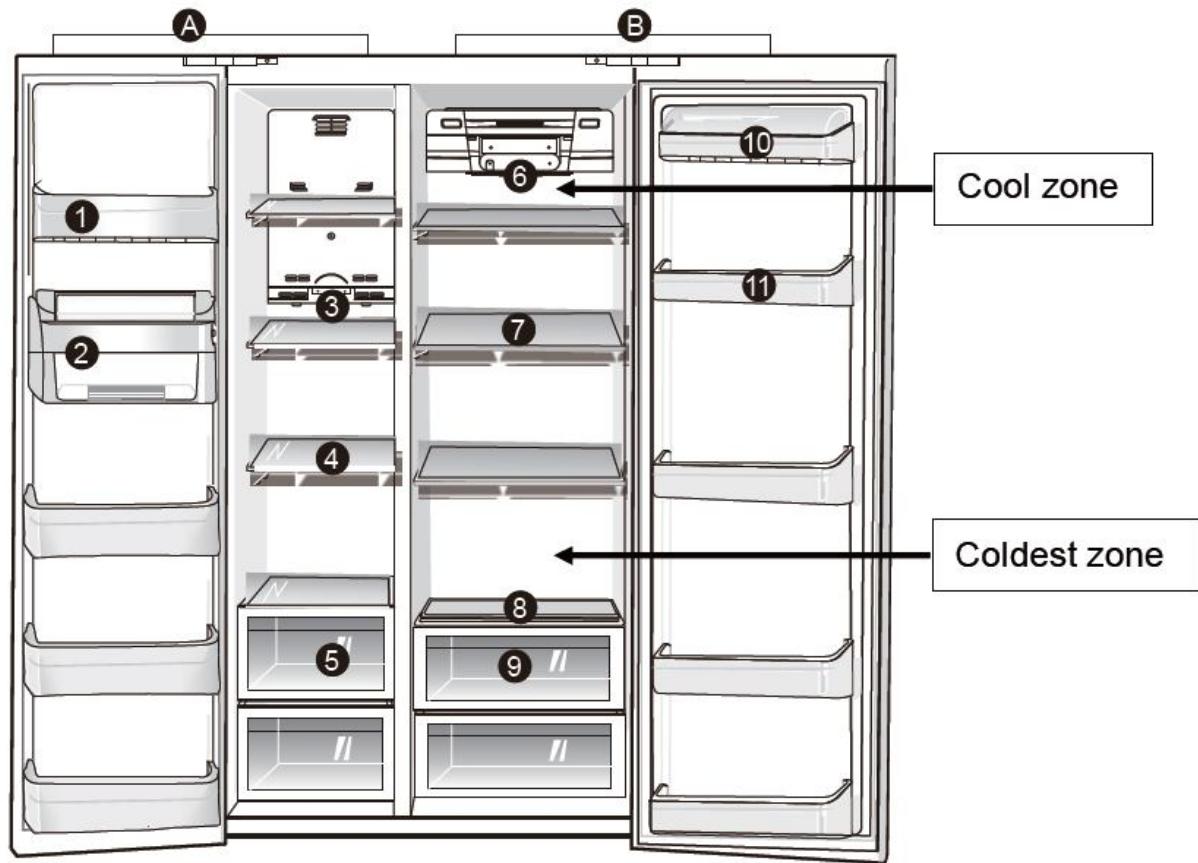

A - Freezer Compartment

B - Fridge Compartment

- 1. Freezer Door Rack**
- 2. Twist Ice-Maker**
- 3. Freezer Compartment Light**
- 4. Freezer Shelf**
- 5. Freezer Storage Box**
- 6. Fridge Compartment Light**
- 7. Fridge Shelf**
- 8. Fridge Storage Box Cover**
- 9. Fridge Storage Box**
- 10. Fridge Door Rack**
- 11. Fridge Door Rack**

(Picture shown for indicative purposes only, model supplied may differ).

CONTENTS:

Section 1. Installation


Section 2. Safety Advice

Section 3. Operating the Appliance

Section 4. Maintenance


Section 1. Installation

- **IMPORTANT!** This appliance must be left to stand in an upright position for at least 4 hours before being switched on for the first time.
- This appliance has been designed for Domestic Use Only.
- Remove all packaging and securing tape from the appliance.
- The exterior stainless steel surfaces may be covered with a protective film which should be removed prior to use. Carefully peel the film from the surfaces and then clean any marks left on the surface with a dry cloth. **DO NOT USE A BLADE OR SHARP IMPLEMENT TO CUT or REMOVE THE FILM** as this will damage the surface of the stainless steel. Damage to the stainless steel surface is not covered under the 2 year guarantee offered with this appliance.
- Wash the interior of the appliance with luke warm water containing a small amount of bicarbonate soda (5ml to 0.5 litres of water).
- Position the appliance in a dry atmosphere and out of direct sunlight.
- Do not position next to a cooker or other sources of heat, i.e. radiator.
- **This appliance should not be sited in a cold atmosphere, i.e. garage or shed. Doing so may cause the freezer unit to underfreeze.**
- If positioned next to another fridge or freezer, leave a minimum gap of 10cm between the appliances in order to avoid condensation.
- A clearance of 30mm should be left above the appliance. If this cannot be achieved you should ensure a clearance of 20mm is maintained on each side of the appliance.
- You must ensure a clearance of at least 10mm between the appliance and the wall.
- Do not place or store heavy items on the top of this appliance.
- Ensure that the appliance is positioned on a firm flat floor.
- This appliance must be level. Adjust the level by using the leveling facility at the base of the appliance.
- Ensure that the appliance is upright and in firm contact with the floor so that the cabinet is stable.
- Connect the plug to an adjacent 13amp socket outlet and ensure that the appliance is not standing on the supply cable.
- Ensure the appliance has sufficient air circulation as follows:

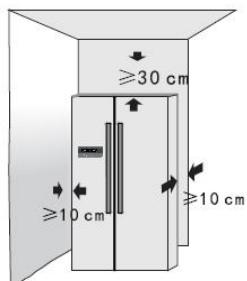

Your Appliance may arrive with the door handles already fitted or packed safely inside the appliance/carton. If they do require installation, simply proceed as follows:

- Install the door handles as follows:

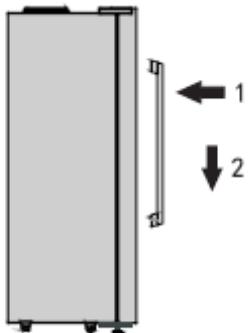

To install, locate each handle into the holes on the door (1) and then slide the handle in a downwards direction to lock in place (2).

To remove the handle, reverse the above procedure.

Please note that the illustration shows a short handle, however the same principal applies to the long door handles. Simply line the handle up with the pre-drilled fixing holes on the door.

- Adjust the feet as follows:



Section 2. Safety Advice

- Please read this booklet thoroughly before installing and switching on the appliance. The manufacturer accepts no responsibility for incorrect installation and usage.
- If this appliance is to replace an old refrigerator with a lock, as a safety measure break or **remove the lock and/or door** before disposal.
- Your old appliances contain insulation gases and refrigerant that must be disposed of correctly. Please ensure that the refrigerant circuit is not damaged before the appliance is taken away for correct disposal in line with current legislation. If there is any doubt contact your Local Authority for instructions.
- This appliance may contain the refrigerant isobutene (R600a). This is a natural gas with a high level of environmental compatibility; however, caution is required as isobutene is a flammable gas. It is essential to ensure that refrigerant tubes are not damaged during transportation and the installation of the appliance. In the event that the refrigerant circuit is damaged, avoid naked flames or sources of ignition and ventilate the room in which the appliance is situated.
- Do not damage the refrigerant circuit.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- If using an adaptor, this must be used in accordance with the manufacturers instructions and ensure that the electrical circuit is not overloaded as this could cause overheating.
- Do not twist or bend the cables, and keep them away from hot surfaces.
- Do not plug in or unplug this appliance with wet hands.
- Following installation make sure that the power cable is not trapped underneath the appliance.
- Ensure the appliance is left in an upright position for at least 4 hours before you switch it on.
- The plug supplied with this appliance must be fitted with a 13 Amp fuse.
- If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.


Section 3. Operating the Appliance

3.1. Switching on the Appliance

- Allow the appliance to stand upright for a minimum of 4 hours before you switch it on.
- Plug in the appliance and switch on at the mains supply.
- Set the thermostat control panel to the required setting as detailed in the Temperature Control section (3.2.).
- Leave the appliance for approximately 4 hours for the correct temperature to be reached.

3.2. Temperature Control


The temperature control panel (LED) is located on the outer face of the freezer door.

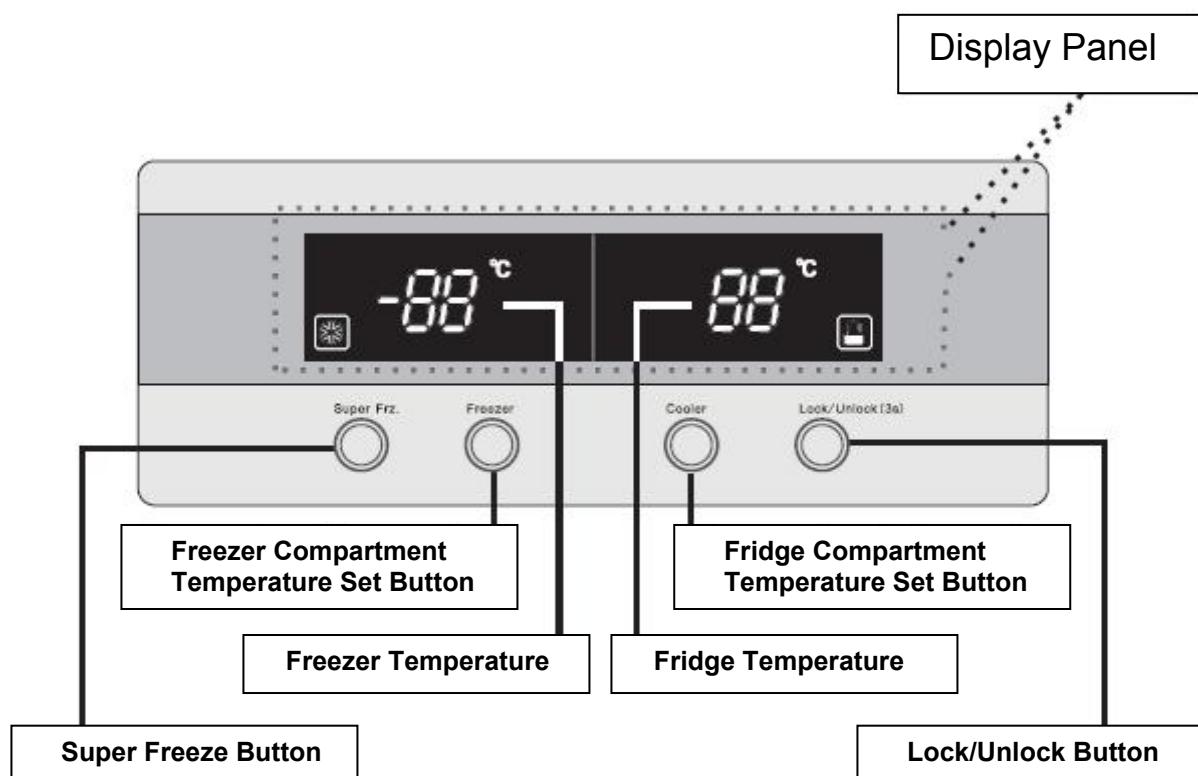

- When initially connected to the power supply the display will automatically go into Energy Saving mode and the display will go off after approximately 30 seconds
- To show the display, press the Super Freeze button for approximately 5 seconds. The LED display will now remain on.


3.2.1. Freezer Temperature Settings

When initially connected to the power supply the temperature of the Freezer compartment temperature will be automatically set at -18°C. This is the normal temperature setting for a freezer, however you can change the setting between -15°C and -23°C as follows:

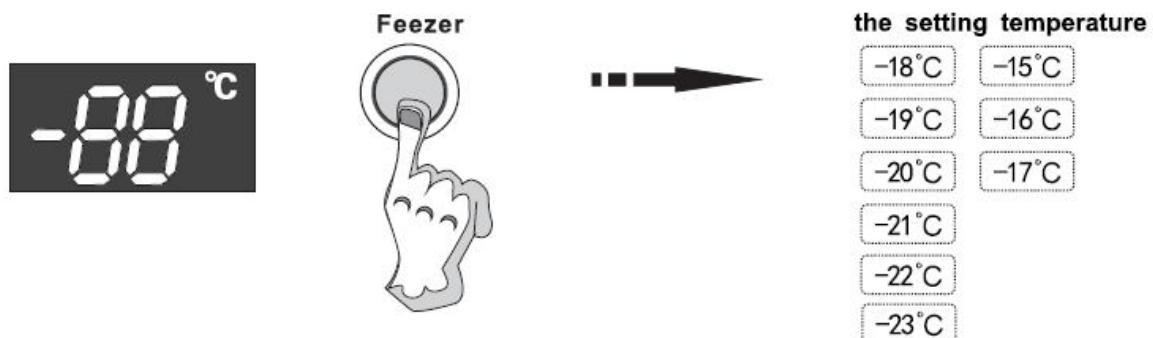

3.2.2. Fridge Temperature Settings

When initially connected to the power supply the temperature of the Fridge compartment will be automatically set at 5°C. This is the normal temperature setting for a fridge, however you can change the setting between 0°C and 6°C as follows:

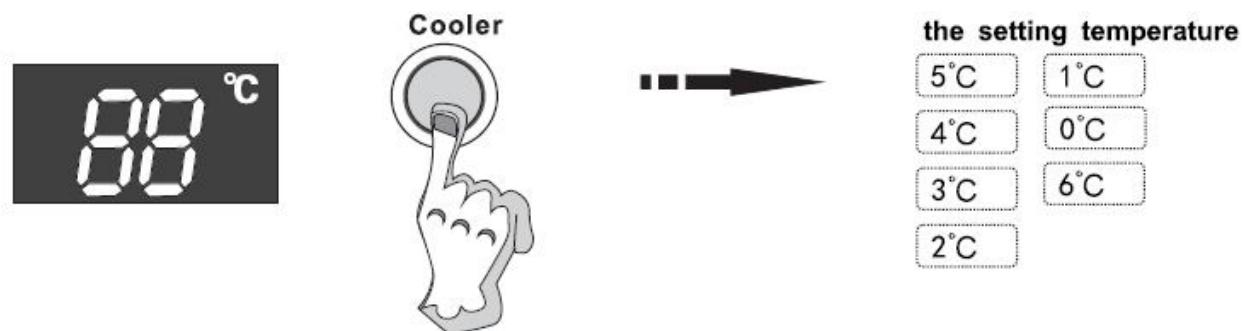

3.2.3. Super Freeze.

In order to fast freeze fresh food items added to your freezer compartment, press the Super Frz button. The following indicator will be shown in the



display panel. The super freeze function will remain in operation for approximately three hours. It will switch off automatically, however you can turn it off at any time by simply pressing the Super Frz button again.

3.2.4. Lock/Unlock Function

To lock the settings, simply press the Lock/Unlock button until the  symbol is displayed in the panel. To unlock, simply press the Lock/Unlock button again.

3.2.5. Super Cool Setting

Your fridge compartment has a Super Cooling function that automatically operates should the temperature inside the compartment rise rapidly, i.e. when a large amount of fresh foods items have been added. The facility will switch off automatically when the compartment temperature has stabilized.


3.2.6. Door Open Warning

Should you inadvertently leave either of the doors open for approximately 1 minute or longer, a warning sound will be activated. It will stop as soon as you close the door(s).

Important!

During high ambient temperatures e.g. on hot summer days, it may be necessary to set the thermostat to the coldest setting. This may cause the compressor to run continuously in order to maintain a low temperature in the cabinet.

3.3. Storing Food In the Fridge Compartment

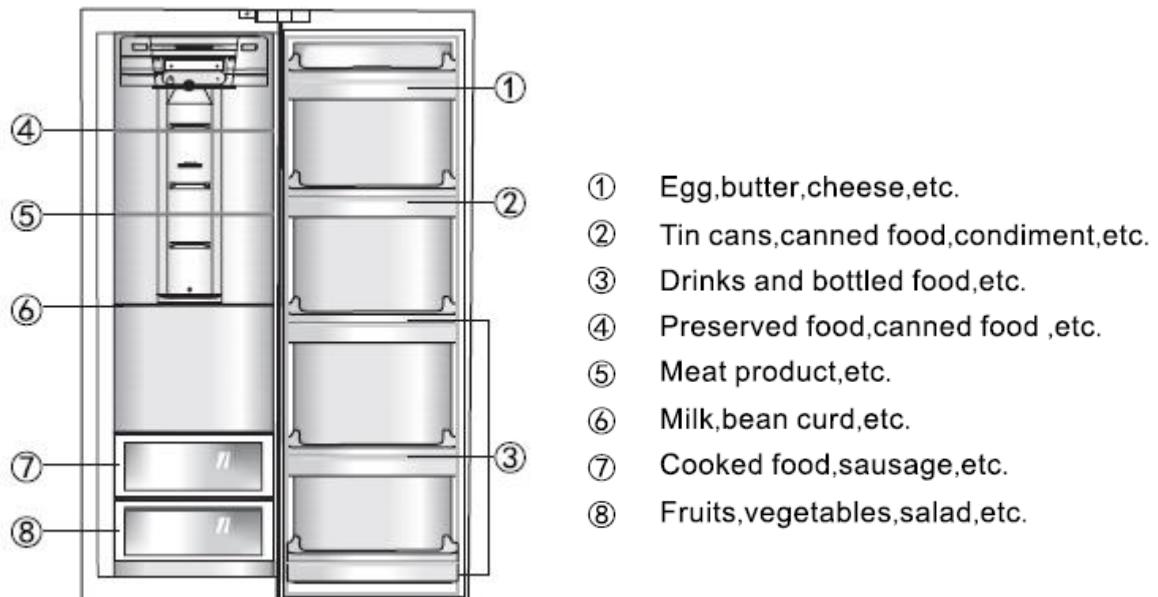

3.4. Storing & Freezing Food in the Freezer

This appliance has a four star freezer that is suitable for the long-term storage of frozen food items. It can also be used for freezing and storing fresh food items.

You should always follow the storage guidelines printed on each food producers packaging, however the following information is provided as a general guide for the maximum storage life of frozen items:


- Fresh Meat and Poultry – up to 12 months
- Cooked Meats – up to 2 months
- Fresh Fish – up to 6 months
- Fruit and Vegetables – up to 12 months
- Bread and Cakes – up to 6 months

3.5. Operating the Twist Ice-Maker



Open the ice-maker lid and fill the unit with fresh cold water. Take care not to spill water into the freezer door or the interior of the freezer compartment.

N.B. You must only use this unit to freeze water!

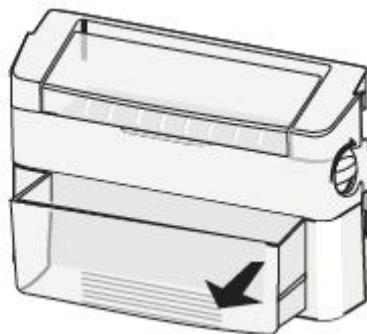

When the water is frozen (minimum 3 hours) turn the small control knob on the r/hand side of the unit in a clockwise direction. The ice will then fall into the container, ready for use. Slide the drawer out to extract the ice.

3.6. Normal Operating Sounds

You may hear faint gurgling or bubbling sounds when the refrigerant is pumped to the cooling system and through the coils or tubing at the rear of the appliance. When the compressor is in operation you may hear a slight whirring sound or pulsating noise. The thermostat controls the operation of the compressor, and you may hear a slight click as it cycles in and out.

3.7. Energy Saving Advice

- Do not install the appliance close to sources of heat, such as a cooker, dishwasher or radiator.
- Locate the appliance in a cool well-ventilated room and make sure that the air vents are clear
- Try to avoid keeping the doors open for a long time, warm air will enter the cabinet and may cause a build-up of ice as well as affecting the energy consumption. Ensure there are no obstructions preventing the doors from closing properly
- Ensure that the door seals are clean and there are no tears or splits.
- Keep the most perishable foods, (those with a short shelf-life, such as cooked meats), in the coldest part of the fridge. The Salad Crisper Box is the warmest part of your fridge and should be used for vegetables, salads and fruits etc. (see Description of Appliance on Page 2)
- Do not overload the fridge: the cooling air that circulates to keep the fridge cold gets blocked and pockets of warm air form.
- Do not put hot food into the fridge or freezer – let it cool down first.

3.8. In the Event of a Power Failure

If there is a power failure, keep the doors closed. When the power has been restored the appliance will start to operate but it may take some time to achieve the pre-set operating temperature. Check the condition of your stored food items and liquids.

Section 4. Maintenance

Before any maintenance or cleaning work is carried out, DISCONNECT the appliance from the ELECTRICITY supply.

4.1. Internal Cleaning

Clean the interior and accessories with warm water and bicarbonate of soda (5ml to 0.5 litre of water). Rinse and dry thoroughly. Do not use detergents, abrasive powders, highly perfumed cleaning products, wax polishes or cleaning products containing bleach or alcohol.

4.2. External Cleaning

Wash the outer cabinet with warm soapy water. Do NOT use abrasive products. There may be sharp edges on the underside of the product, so care should be taken when cleaning. Once or twice a year dust the rear of the appliance and the compressor at the back of the appliance, with a brush or vacuum cleaner, as an accumulation of dust will affect the performance of the appliance and cause increased energy consumption.

4.3. Defrosting

Your new appliance is 'Frost Free' and will, under normal circumstances defrost automatically. However, should ice build up in the freezer exceed 3-5mm, empty the contents and switch off the appliance, leave the door open and allow the ice to melt. Place the frozen foods items in a cool-bag or wrap them in thick newspaper. **Do not use sharp objects to scrape the ice away.** Clean and dry the interior, close the door and turn on the power to the appliance. When the power has been restored the appliance will start to operate but it may take some time to achieve the pre-set operating temperature.

4.4. When the appliance is not in use

When the appliance is not in use for long periods, remove the contents, disconnect from the electricity supply and clean the appliance, leaving the door ajar until you wish to use the appliance again.

4.5. Changing the Interior Lights

- Switch off the power supply to the appliance
- Remove the plastic light cover
- Remove the LED from the light unit.
- Replace the LED with a suitable replacement
- Refit the cover and switch the appliance back on.

4.6. What to do if something goes wrong

There is no power to the appliance:

- Check there is not a power cut
- Check there is power to the electric socket/appliance
- Check the fuse in the plug (Must be 13 amp)
- Check that the Temperature Control(s) has been set correctly (see section 3.2.)

The compressor runs continuously:

- Are the doors closed correctly?
- Have large quantities of food recently been added to the appliance? – if yes, allow the interior temperature to recover
- Have the appliance doors been opened frequently? – if yes, allow the interior temperature to recover
- Check that the Thermostat Control(s) has not been set to maximum

There is excessive frost/ice build up:

- Ensure that the doors have been closed correctly
- Ensure that the door seals are clean and sealing correctly
- Check that the Temperature Control(s) has not been set to maximum

The appliance is making a noise:

- Refer to Normal Operating Sounds, section 3.6
- Ensure that the appliance has been installed correctly (see section 1).




SERVICE HELP-LINE

Should your appliance develop a fault, please call the
Repairtech Service Helpline on:

01527-888133

Please remember to have all your product details available, including the model number, serial number, date of purchase and your retailer's details before registering a fault.
Your service call cannot progress without this information.

Appliance Dimensions:

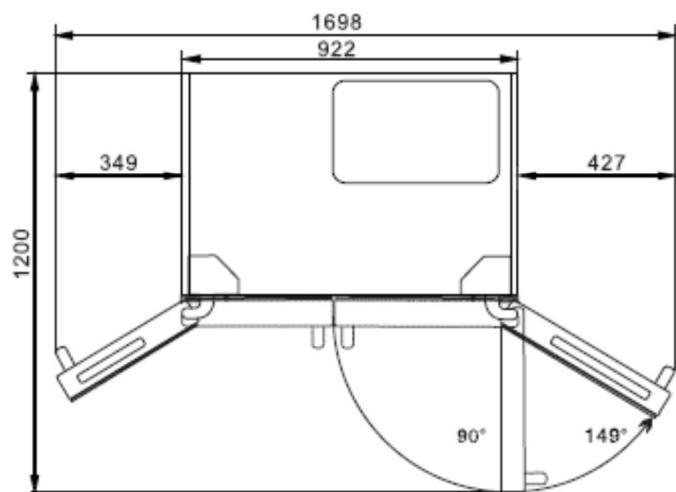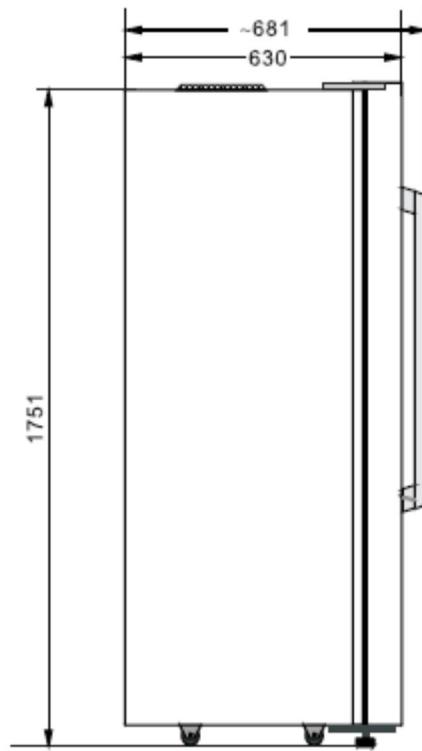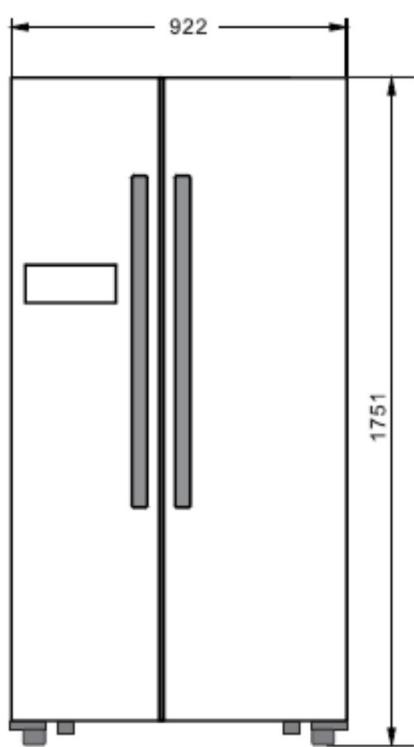

Insurance

**! Any warranty provided with this product does not cover loss of !
fridge/freezer content.**

Any claim for loss, damage, costs or expenses of an indirect or consequential nature including any economic loss or damage to foodstuffs or any other goods is excluded. We recommend that you inspect your fridge/freezer regularly to check that it is working correctly, losses can result from deterioration following breakdown or accidental failure of the appliance, fuses, plugs or public electricity supply, these can be covered by your standard home insurance or might require extra cover. Check with your insurance provider.

Important Note:

This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol on the product, or on the documents accompanying the product, the Crossed Out Wheelie Bin, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local authority, your household waste disposal service or the retailer where you purchased the product.



We continuously try to improve our products for the benefit of our customers. For this reason we reserve the right to make changes to any product at any time, without notice

Issue: 02/15-12-2014