
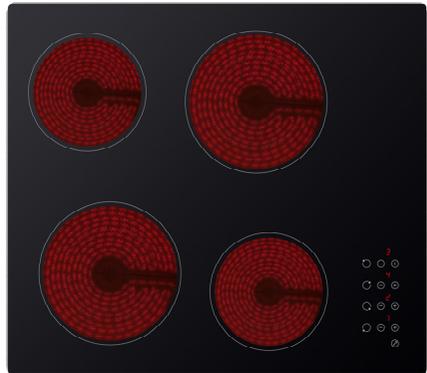


montpellier

Installation and Operating Instructions

MODEL: MON-SFOP60MC

Ceramic Hob & Oven Pack

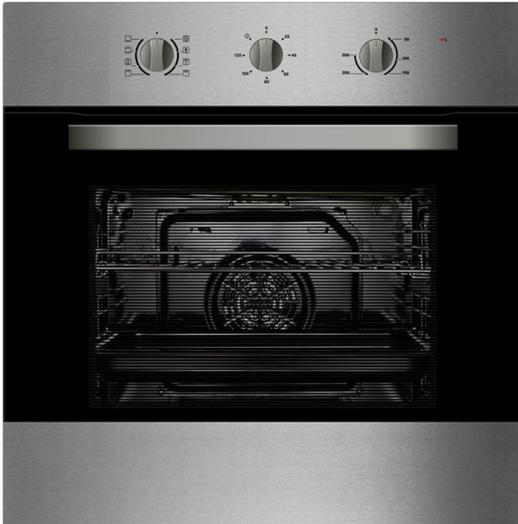

(Pictures indicative of model supplied)

Please read these instructions carefully before attempting to install or use this appliance.

It is advisable to keep these instructions in a safe place for future reference.

N.B. Should your appliance require attention, our service agents will not be able to book a service call without your unique serial number which can be found on the last page of this manual.

Introduction

Thank you for choosing this Montpellier branded appliance. It has been designed to give years of trouble-free use provided it is installed and maintained correctly.

Please read these instructions carefully before installing or using your appliance. It is advisable to keep your purchase and installation receipts with these instructions in a safe place for future reference. Included is some important safety information in addition to guidelines and recommendations that will enable you to take full advantage of all the functions available.

This quality appliance has been tested and certified to meet all applicable UK electrical and safety standards.

This appliance must be installed and connected in accordance with current regulations.

After unpacking the appliance ensure that there is no visible damage. If the appliance has been damaged during transit, do not use it, contact your retailer immediately.

Your 2 year Manufacturer's guarantee

THIS DOES NOT AFFECT YOUR STATUTORY RIGHTS.

Your new **montpellier** appliance carries a free guarantee which protects you against the cost of repairs during the first 24 months from date of purchase provided that:

Any claim is accompanied by evidence of the model reference, model serial number and proof of purchase, such as a Sales Receipt, showing that the appliance was purchased within the 24 months prior to the date of claim.

What is not covered under the Guarantee:

- Any appliance not correctly installed and operated in accordance with the manufacturer's instructions.
- Any appliance that is used for anything other than domestic purposes.
- Any defect caused by accident, misuse, unauthorized modification or inexpert repair.
- Cost of Call-out where a fault cannot be found with the appliance.
- Cost of Call-out for work covering routine maintenance, such as, but not exclusively, cleaning of filters or defrosting.
- Cost of Call-out for work required to correct the alignment of doors following door reversal procedures carried out by you.
- Use of the appliance by anyone other than the Householder.
- Use in any commercial environment.
- Consumable items, such as, but not exclusively, fuses in plugs, bulbs and breakable items which require routine replacement.
- Repair costs incurred that have not been authorised by Repairtech and/or carried out by a non-approved Repairtech engineer.

YOUR GUARANTEE IS VALID ONLY IN THE UK.

To Register your Appliance simply complete the card in your appliance pack and return it with a stamp affixed or *Alternatively* you can Register online at www.repairtechuk.com

SERVICE HELP-LINE


Should your appliance develop a fault, please call the Repairtech Service Helpline on:

01527-888133

Please remember to have all your product details available, including the model number, serial number, date of purchase and your retailer's details before registering a fault.


Your service call cannot progress without this information.

Description Of The Appliances

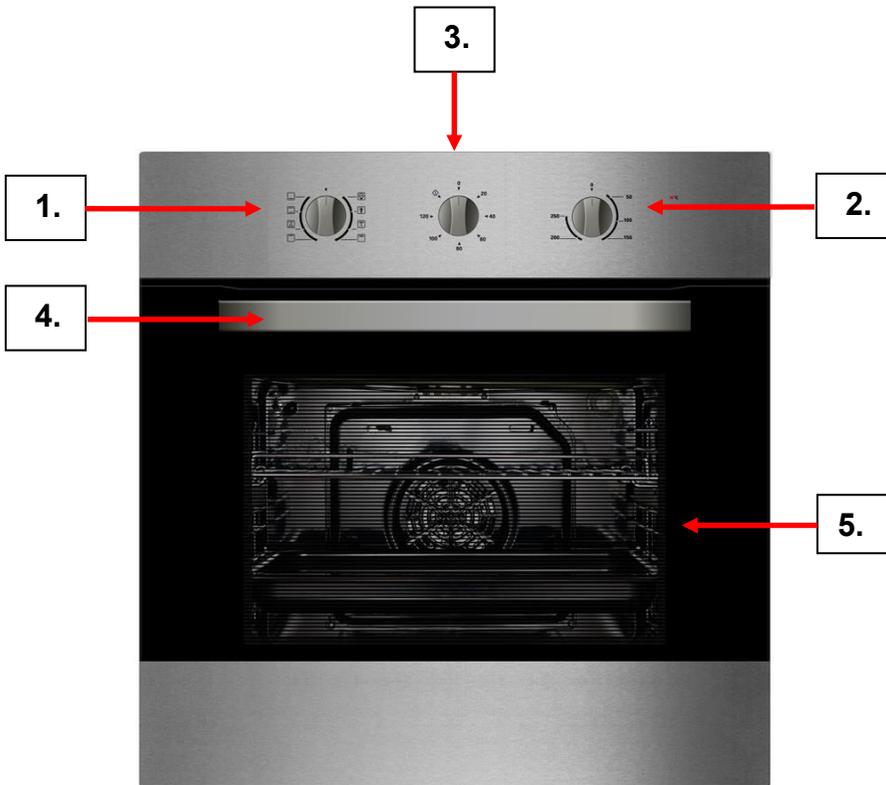

- 1. Oven Function Control**
- 2. Oven Thermostat Control**
- 3. 120 Minute Timer**
- 4. Door Handle**
- 5. Glass Oven Door**

(Picture indicative of model supplied)

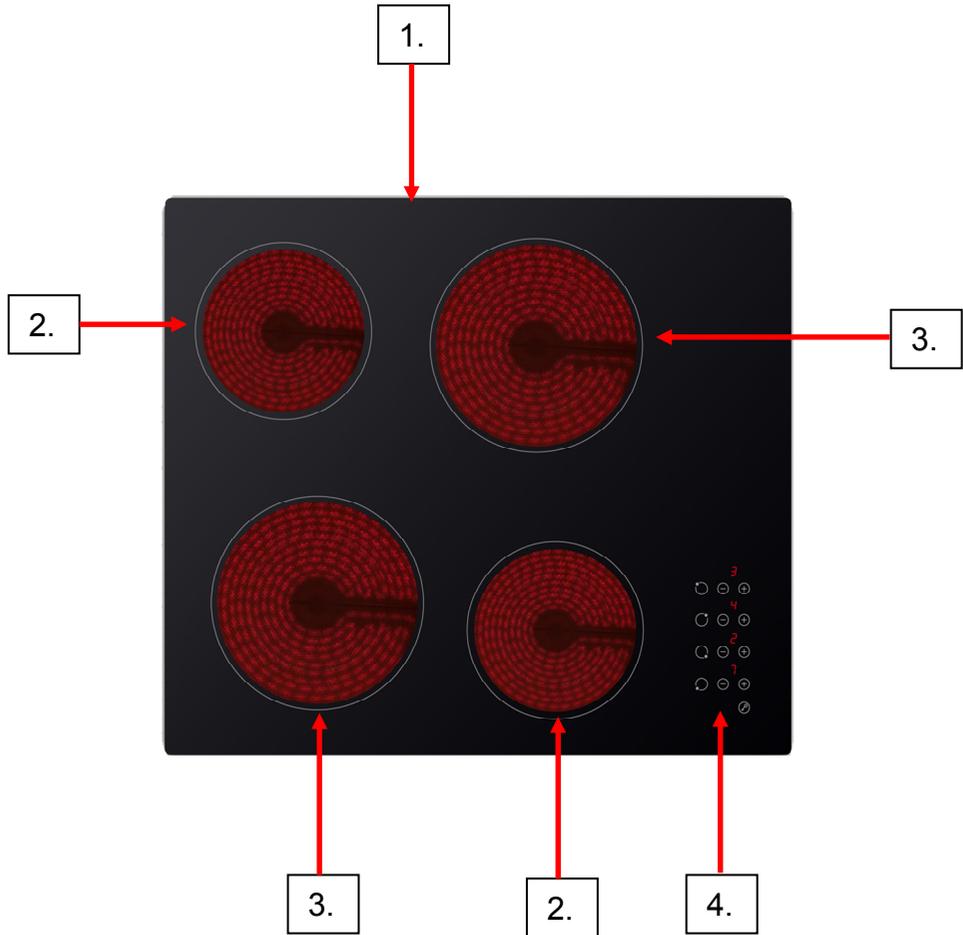

- 1. Ceramic Glass**
- 2. 1200w Heat Zone (x 2)**
- 3. 1800w Heat Zone (x 2)**
- 4. 'Touch' Control Panel**

(Picture indicative of model supplied)

CONTENTS:

Section 1. Installation

Section 2. Safety Advice

Section 3. Operating the Appliance


Section 4. Maintenance

Section 1. Installation


- **This appliance must be installed by a Qualified Electrician!**
- Remove all packaging, protective film and securing tape from the appliances.
- Position the appliances in a dry atmosphere.
- The following dimensions are provided as a guide for installation – your installer will carry out the installation in accordance with the current regulations.
- Your installer will connect the power cables in accordance with the current regulations.

1.1. Kitchen Furniture Cut-Out



1.1.1. Oven:

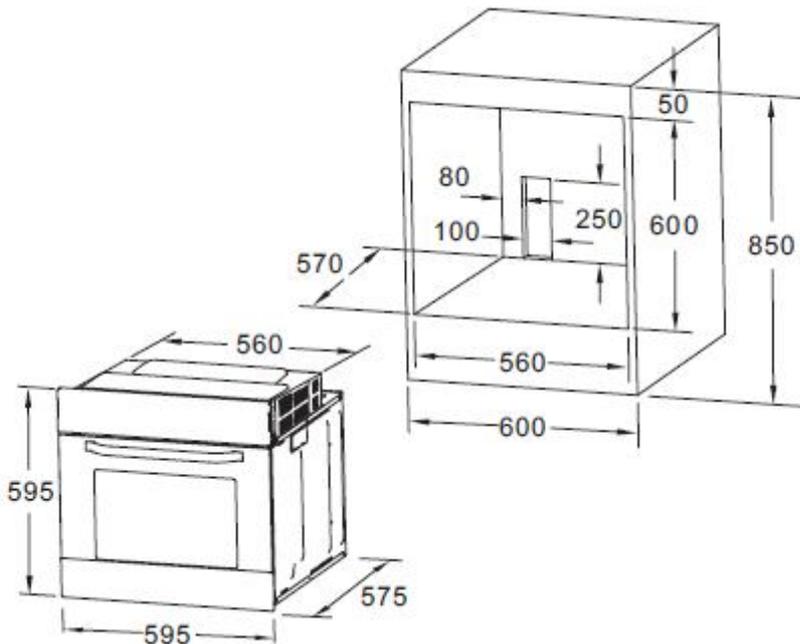

1.1.2. Hob:

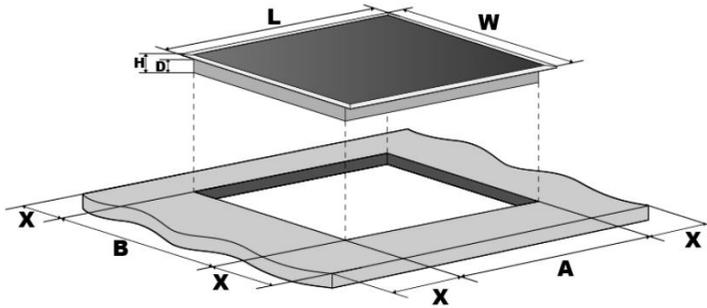

L(mm)	W(mm)	H(mm)	D(mm)	A(mm)	B(mm)	X(mm)
590	520	50	46	560+4 +1	490 +4 +1	50 mini

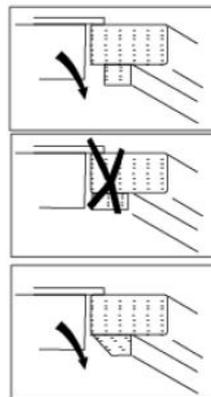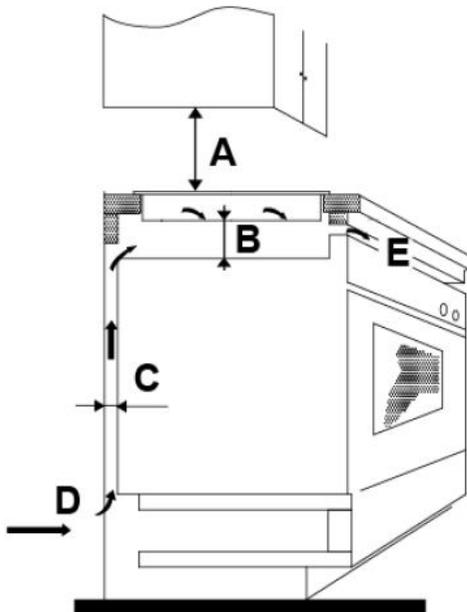


1.2. Electrical Connection


These appliances must both be 'hard wired' into a suitable fused spur adjacent to the appliance housing, by a **Qualified Electrician**. Please note that a switchable spur should be accessible above the work surface in order that the power can be turned off by the consumer.

Your installer will supply and use the appropriate diameter of electrical cable based on the Power Rating of the appliance as shown on the Rating Label affixed to the appliance.

Electrical Connection Diagram:

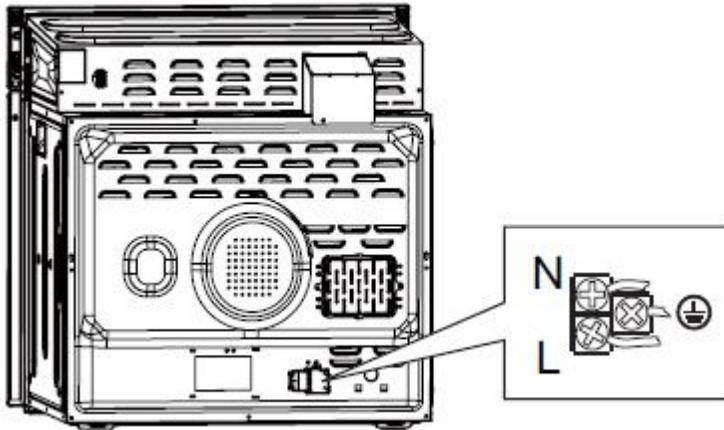




(1. Oven)

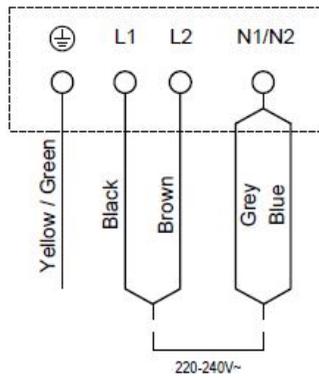

(2. Hob)


1.3. Secure the Oven & Hob in Position

Finally, use the screws to secure the oven to the kitchen cabinetry and the clips/screws to secure the hob to the work surface (as shown below).

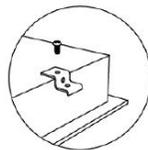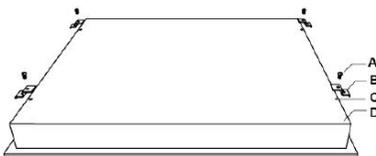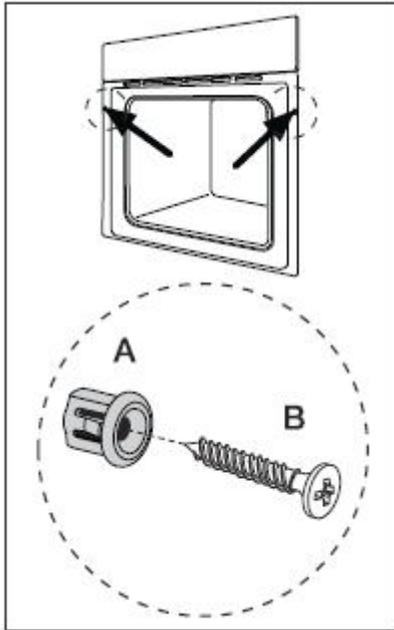

A	B	C	D
screw	bracket	Screw hole	base

Adjust the bracket position to suit for different work surface's thickness.

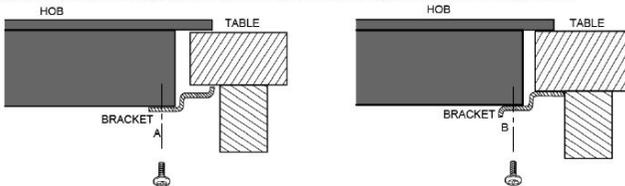


Section 2. Safety Advice

- **These appliances must both be 'hard wired' into a suitable fused spur adjacent to the appliance housing, by a Qualified Electrician.**
- Please read this booklet thoroughly before installing and switching on the appliance. The manufacturer accepts no responsibility for incorrect installation and usage.
- These appliances are guaranteed for Domestic Use Only.
- The appliances are not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliances by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliances.
- These appliances must only be used for cooking/heating food items. Do not use them for any other purpose.
- **It is important that you use only metal pans specifically designed and/or approved for use with Halogen Hobs. Never allow melamine or plastic containers to come in contact with the heat zones.**
- **It is important that you use only 'oven proof' pans and dishes when using the appliance for cooking or grilling. Never allow cookware and/or utensils to come into contact with the top heating element/grill. Do not use melamine or plastic containers when cooking or grilling. Always take care when removing ovenware from the oven and in particular avoid touching the Grill Element.**
- If using an adaptor, this must be used in accordance with the manufacturers instructions and ensure that the electrical circuit is not overloaded as this could cause overheating.
- Do not twist or bend the cables, and keep them away from hot surfaces.

- Following installation make sure that the power cable is not trapped underneath the appliance.
- Keep the appliance surfaces clean. Failure to do this could lead to the appliance malfunctioning.
- The surface of this appliances will get extremely hot during use. Take care when using the appliances and keep children well away. The interior and surface of this appliance will remain hot after it has been turned off. Do not touch or clean the appliance until it has completely cooled down.
- Never lift this appliance using the door handle or 'open' door.
- If the power supply cord is damaged, it must be replaced by the manufacturer, it's service agent or similarly qualified persons in order to avoid a hazard.
- If the power supply cord(s) is damaged, it must be replaced by the manufacturer, it's service agent or similarly qualified persons in order to avoid a hazard.

Section 3. Operating the Appliance

3.1. Oven Control Panel

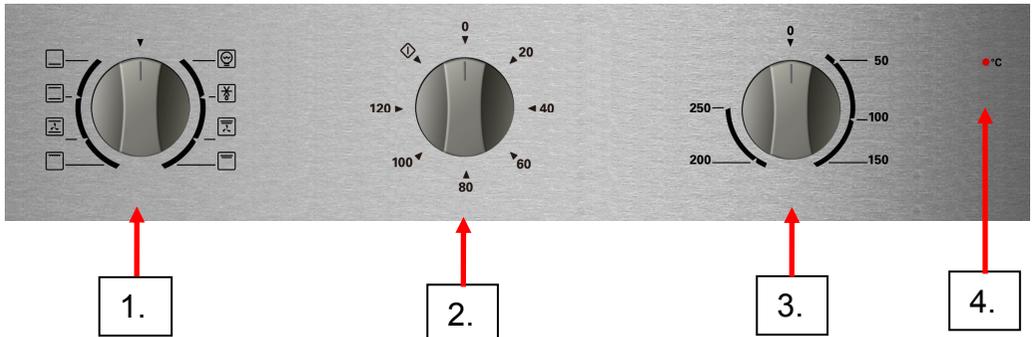

1. Function Control Knob (8 Functions)
2. Timer Control Knob (Maximum 120 Minutes)
3. Temperature Control Knob (0 to 250 Degrees C)
4. Temperature Indicator Light

3.2. Cooking & Functions

To use the Oven you must set the Timer, select the Function and set the required Temperature as follows:

It is important that you use only ‘oven proof’ pans and dishes when using the appliance for cooking or grilling. Never allow cookware and/or utensils to come into contact with the top heating element/grill.

Do not use melamine or plastic containers when cooking or grilling.

Always take care when removing ovenware from the oven and in particular avoid touching the Grill Element.

3.2.1. Setting The Timer

You must set the Timer in order to use the oven:

- Either set the Timer Control Knob to the  position for 'continuous' use, or
- Select a time between the '0' and '120' minutes setting. (When the set time has elapsed you will hear an audible signal and the oven will cut off).

3.2.2. Cooking Functions

- Turn the Function Control Knob to the required Oven function as shown in the table below.


Symbol	Function description
	Oven Lamp: which enables the user to observe the progress of cooking without opening the door.
	Defrost: The circulation of air at room temperature enables quicker thawing of frozen food, (without the use of any heat). It's a gentle but quick way to speed up the defrosting time and thawing of ready-made dishes and cream filled produce etc.
	Bottom heat: A concealed element in the bottom of the oven provides a more concentrative heat to the base of food without browning. This is ideal for slow cooking dishes such as casseroles, stews, pastries and pizzas where a crispy base is desired. The temperature can be set within the range of 60-120°C. The default temperature is 60°C.
	Conventional cooking: The top and bottom work together to provide convectional cooking. The temperature can be set within the range of 50-250°C. The default temperature is 220°C. This is optional function that can be work with rotisserie motor.
	Convention with fan: Combination of the fan and both heating element provides more even heat penetration, saving up to 30-40% of energy. Dishes are lightly browned on the outside and still moist on the inside. Note: This function is suitable for grilling or roasting big pieces of meat at a higher temperature. The temperature can be set within the range of 50-250°C. The default temperature is 220°C.
	Radiant grilling: The inner grill element switches on and off to maintain temperature. The temperature can be set within the range of 180-240°C. The default temperature is 210°C. This is optional function that can be work with rotisserie motor.
	Double grill: The radiant heating element and the top heating element are working. The temperature can be set within the range of 180-240°C. The default temperature is 210°C.
	Double grill with fan: The radiant heating element and top heating element are working with fan. The temperature can be set within the range of 180-240°C. The default temperature is 210°C.

3.2.3. Oven Temperature

Turn the Oven Thermostat Control Knob to the required oven temperature. A red indicator light will show whilst the oven is reaching temperature. When the set temperature has been achieved, the light will go out.

When you have finished using the oven, you must turn the thermostat and function control knobs back to the off position.

3.3. Hob Control Panel

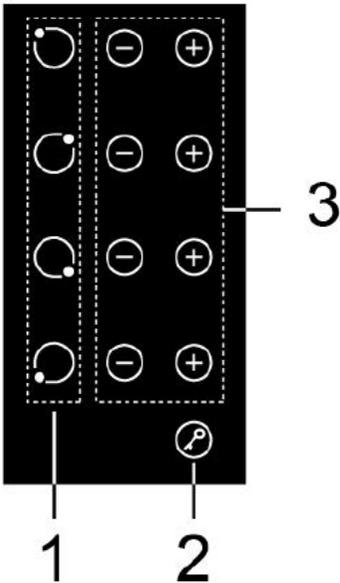

1. On/Off Controls
2. Child Lock Control
3. Power/Heat Control

3.4. Operating the Hob

It is important that you use only metal pans specifically designed and/or approved for use with Halogen Hobs. Never allow melamine or plastic containers to come in contact with the heat zones.

- Touch the required Heat Zone On/Off button until all indicators light up.
- Now press the '+' and '-' buttons (opposite the required heat zone on/off) until the required temperature is achieved. This will be between 1 (minimum) and 9 (maximum).
- When you have finished using the hob, press the '-' button until the heat zone is back to zero.
- Finally, press the On/Off button until all indicators go out.
- Please note that a 'H' indicator will show when one or more of the Heat Zones are hot. This will continue to be displayed until the zone(s) has completely cooled.
- To set the Child Lock, press the Child Lock button until the key is displayed. To unlock, press the button again.

Section 4. Maintenance

Before any maintenance or cleaning work is carried out, DISCONNECT the appliance from the ELECTRICITY supply and ensure that the appliance is completely cool.

4.1. Cleaning the Oven

Clean spillages from inside the oven as soon as possible after use. Always ensure that the surface has cooled down before cleaning.

Use a cloth with warm soapy water to clean the surface. If the spillage has dried on the surface you may need to use a specialist oven cleaner, available from all good supermarkets.

Clean the glass door with warm soapy water – always ensure the glass is cool before you clean it!

4.2. Cleaning the Hob

Clean spillages from the hob surface as soon as possible after use. Always ensure that the surface has cooled down before cleaning.

Use a soft cloth or kitchen paper to clean the surface. If the spillage has dried on the surface you may need to use a specialist vitroceraamic glass cleaner, available from all good supermarkets.

Do not use other abrasive cleaners and/or wire wool etc as this may scratch the surface of the hob.

4.3. Changing the Oven Bulb

Proceed as follows when the glass is cold:

- Unscrew the glass cover
- Remove the bulb
- Fit new **like for like** bulb (*)
- Replace glass cover




Oven light bulb

(*) Must be a 300° like for like replacement oven bulb available from specialist hardware & lighting shops

4.4. Removing the Oven Door

If your oven is fitted with a removable door, proceed as follows:

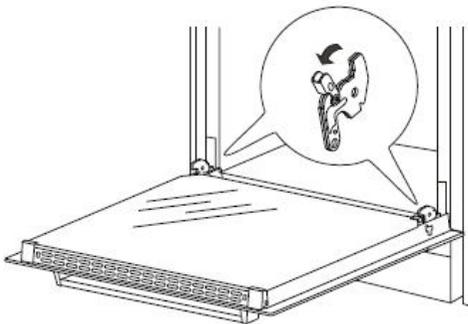

In order to improve access when cleaning the oven, you can remove the door as follows:

Lift the two safety catches up then close the oven door partially. Now lift the door upwards and away from the oven. To refit the door carry out the above in reverse order, ensuring the safety catches are lowered back into place.



If you need to clean in between the glass door panels, remove the door and remove the 2 screws and the end panel at the bottom of the door (as shown left) and then carefully slide the glass out of the door frame.

Clean the glass panels and carefully slide the glass back into the door frame. Refit the end panel and ensure that the 2 screws are in place.

N.B. Your guarantee does not cover damaged or broken glass on the oven door.

4.5. What to do if something goes wrong

There is no power to the appliance:

- Check there is not a power cut
- Check there is power to the electric socket/appliance.

The oven operates but the oven light is not working:

- Replace the oven bulb as described in section 4.3. above.
Please note that bulbs are not covered under the guarantee.

The oven will not operate:

- Have you set the Oven Timer? (See section 3.2.1.)

There is an 'H' showing on the Hotplate display:

- This is showing that one or more heat zones are still hot.

The Hotplate will not operate:

- Is the Child Lock set? (See section 3.4.)

YOUR GUARANTEE IS VALID ONLY IN THE UK.

To Register your Appliance simply complete the card in your appliance pack and return it with a stamp affixed or *Alternatively* you can Register online at www.repairtechuk.com

SERVICE HELP-LINE

Should your appliance develop a fault, please call the Repairtech Service Helpline on:

01527-888133

Please remember to have all your product details available, including the model number, serial number, date of purchase and your retailer's details before registering a fault.

Your service call cannot progress without this information.

DOMESTIC APPLIANCE DISTRIBUTORS;

HENRY JOHN HOUSE
NORTHWAY LANE
ASHCHURCH
TEWKESBURY
GLOUCESTERSHIRE
GL20 8JH

Important Note:

This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol on the product, or on the documents accompanying the product, the Crossed Out Wheelie Bin, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local authority, your household waste disposal service or the retailer where you purchased the product.



We continuously try to improve our products for the benefit of our customers.

For this reason we reserve the right to make changes to any product at any time, without notice

Issue: 04/09-03-2015