

montpellier

Installation and Operating Instructions

MODEL: MSG50W

Free-Standing 50cm x 60cm Gas Oven



(Model shown for indicative purposes only)

Please read these instructions carefully before attempting to install or use this appliance. It is advisable to keep these instructions in a safe place for future reference.

N.B. Should your appliance require attention, our service agents will not be able to book a service call without your unique serial number which can be found on the last page of this manual.

Introduction

Thank you for choosing this Montpellier branded appliance. It has been designed to give years of trouble-free use provided it is installed and maintained correctly.

Please read these instructions carefully before installing or using your appliance. It is advisable to keep your purchase and installation receipts with these instructions in a safe place for future reference. Included is some important safety information in addition to guidelines and recommendations that will enable you to take full advantage of all the functions available.

This quality appliance has been tested and certified to meet all applicable UK electrical and safety standards.

This appliance must be installed and connected in accordance with current regulations.

After unpacking the appliance ensure that there is no visible damage. If the appliance has been damaged during transit, do not use it, contact your retailer immediately.

Your 2 year Manufacturer's guarantee

THIS DOES NOT AFFECT YOUR STATUTORY RIGHTS.

Your new **montpellier** appliance carries a free guarantee which protects you against the cost of repairs during the first 24 months from date of purchase provided that:

Any claim is accompanied by evidence of the model reference, model serial number and proof of purchase, such as a Sales Receipt, showing that the appliance was purchased within the 24 months prior to the date of claim.

What is not covered under the Guarantee:

- Any appliance not correctly installed and operated in accordance with the manufacturer's instructions.
- Any appliance that is used for anything other than domestic purposes.
- Any defect caused by accident, misuse, unauthorized modification or inexpert repair.
- Cost of Call-out where a fault cannot be found with the appliance.
- Cost of Call-out for work covering routine maintenance, such as, but not exclusively, cleaning of filters or defrosting.
- Cost of Call-out for work required to correct the alignment of doors following door reversal procedures carried out by you.
- Use of the appliance by anyone other than the Householder.
- Use in any commercial environment.
- Consumable items, such as, but not exclusively, fuses in plugs, bulbs and breakable items which require routine replacement.
- Repair costs incurred that have not been authorised by Repairtech and/or carried out by a non-approved Repairtech engineer.

YOUR GUARANTEE IS VALID ONLY IN THE UK.

To Register your Appliance simply complete the card in your appliance pack and return it with a stamp affixed or *Alternatively* you can Register online at www.repairtechuk.com

SERVICE HELP-LINE

Should your appliance develop a fault, please call the Repairtech Service Helpline on:

01527-888133

Please remember to have all your product details available, including the model number, serial number, date of purchase and your retailer's details before registering a fault. Your service call cannot progress without this information.

Description Of The Appliance



- 1. Hotplate with 4 x Burners**
- 2. Control Panel**
- 3. Oven/Grill with Glass Door**
- 4. Adjustable Feet**

(Picture indicative of model supplied)
(N.B. Model supplied may not have all features shown in this User Manual).

CONTENTS:

Section 1. Installation

Section 2. Safety Advice

Section 3. Operating the Appliance


Section 4. Maintenance

Section 1. Installation

- This appliance must be installed by a 'Gas Safe' gas engineer.
- Remove all packaging, protective film and securing tape from the appliance.
- Position the appliance in a dry atmosphere.
- The following dimensions are provided as a guide for installation – your installer will carry out the installation in accordance with the current regulations.
- Your 'Gas Safe' gas engineer will connect the cooker in accordance with the current regulations.


To install this appliance, please proceed as follows:

1.1. Positioning the Cooker

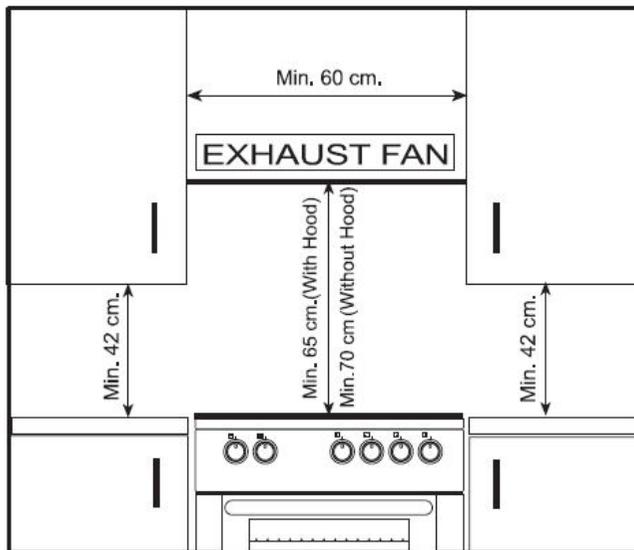

You must ensure a minimum gap of 2cm between the back of the appliance and the rear wall to allow for ventilation. You must ensure a minimum distance of 70cm between the hotplate and overhanging cupboards or a cooker hood (as shown above).

Adjust the height and stability of the cooker by adjusting the two front feet as shown below. Rotate in a clockwise direction to decrease the height and in an anti-clockwise direction to increase the height.

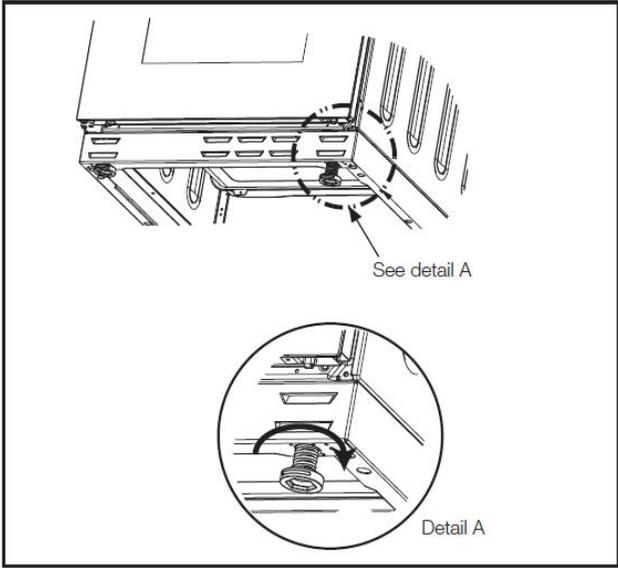


1.2. Electrical Connection

This appliance can be fitted with a 13 Amp plug and plugged into a standard, switchable 13 Amp socket.

Alternatively, the product can be 'hard wired' into a suitable fused spur adjacent to the appliance housing. In this case the product must be installed by a **Qualified Electrician**.

Please note that a switchable spur should be accessible above the work surface in order that the power can be turned off.

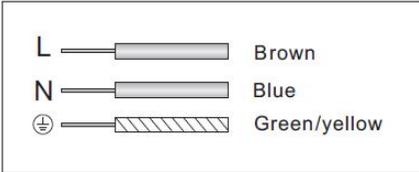

1.3. Gas Connection

THE GAS CONNECTION MUST BE CARRIED OUT BY A 'GAS-SAFE' REGISTERED GAS ENGINEER!

Connection to the gas supply should be with either rigid or semi-rigid pipe, i.e. steel or copper. The connection should be suitable for connecting to RC 1/2 (1/2 BSP male thread). When the final connection has been made, it is essential that a thorough leak test is carried out on the cooker and installation. Ensure that the main connection pipe does not exert any strain on the cooker. When a flexible tube is used, make sure that it does not come into contact with hot areas or adjacent housing units.

It is important to install the elbow correctly, with the shoulder on the end of the thread, fitted to the cooker connecting pipe. Failure to ensure the correct assembly will cause leakage of gas.

1.4. Technical Specifications

| G30 28-30mbar 10.3 kW 749 g/h II2H3+ GB Clase: 1 | NG G20 20 mbar | LPG G30/G31 28-30/37 mbar |
|---|-------------------|---------------------------------|
| LARGE BURNER | | |
| DIA. of INJECTOR (1/100mm) | 115 | 85 |
| NOMINAL RATING (KW) | 3 | 3 |
| CONSUMPTION | 285,7 l/h | 218,1 g/h |
| MEDIUM BURNER | | |
| DIA. of INJECTOR (1/100mm) | 97 | 65 |
| NOMINAL RATING (KW) | 1,75 | 1,75 |
| CONSUMPTION | 166,7 l/h | 127,2 g/h |
| MEDIUM BURNER | | |
| DIA. of INJECTOR (1/100mm) | 97 | 65 |
| NOMINAL RATING (KW) | 1,75 | 1,75 |
| CONSUMPTION | 166,7 l/h | 127,2 g/h |
| SMALL BURNER | | |
| DIA. of INJECTOR (1/100mm) | 72 | 50 |
| NOMINAL RATING (KW) | 1 | 1 |
| CONSUMPTION | 95,2 l/h | 72,7 g/h |
| OVEN BURNER | | |
| DIA. of INJECTOR (1/100mm) | 120 | 76 |
| NOMINAL RATING (KW) | 2,8 | 2,8 |
| CONSUMPTION | 266,7 l/h | 203,6 g/h |
| GRILL BURNER | | |
| DIA. of INJECTOR (1/100mm) | 110 | 68 |
| NOMINAL RATING (KW) | 2,2 | 2,2 |
| CONSUMPTION | 209,5 l/h | 160 g/h |

Power supply: 230v – 50Hz

Maximum Power: 10.3 kW

Oven Volume: 52.5 lt


Section 2. Safety Advice

- **This appliance must be installed by a 'Gas Safe' approved gas engineer.**
- Please read this booklet thoroughly before installing and switching on the appliance. The manufacturer accepts no responsibility for incorrect installation and usage.
- This appliance is guaranteed for Domestic Use Only.
- The appliance is not intended for use by persons (including children below 8 years of age) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- This appliance must only be used for cooking/heating food items. Do not use it for any other purpose.
- **It is important that you use only metal pans specifically designed and/or approved for use with Gas Hobs. Never allow melamine or plastic containers to come in contact with the gas burners.**
- **It is important that you use only 'oven proof' pans and dishes when using the appliance for cooking or grilling. Never allow cookware and/or utensils to come into contact with the oven/grill burners. Do not use melamine or plastic containers when cooking or grilling. Always take care when removing ovenware from the oven and in particular avoid touching the Grill burner.**
- Do not twist or bend the connection/power cable, and keep it away from hot surfaces.
- Following installation make sure that the power cable is not trapped underneath the appliance.
- Keep the appliance surfaces clean. Failure to do this could lead to the appliance malfunctioning.
- The surface of this appliance will get extremely hot during use. Take care when using the appliance and keep children well away.

- The interior and surface of this appliance will remain hot after it has been turned off. Do not touch or clean the appliance until it has completely cooled down.
- Never lift this appliance using the door handle or 'open' door.
- If the power supply cord is damaged, it must be replaced by the manufacturer, it's service agent or similarly qualified persons in order to avoid a hazard.

Section 3. Operating the Appliance

3.1. Control Panel (N.B. Model supplied may not have all features shown in this User Manual).

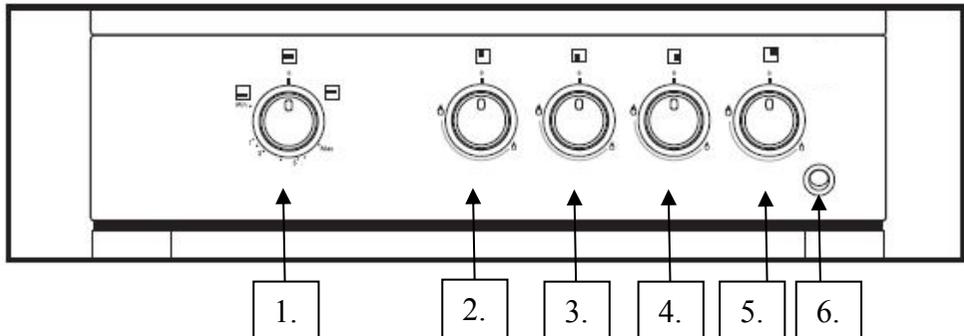


1. Oven/Grill/Thermostat Control Knob
2. Left Hand Rear Burner Control Knob
3. Left Hand Front Burner Control Knob
4. Right Hand Front Burner Control Knob
5. Right Hand Rear Burner Control Knob
6. Push Button Ignition

3.2. Using the Hotplate & Oven

3.2.1. Using The Hotplate Burners


Push & turn the required burner control knob (2, 3, 4 or 5) to the maximum heat setting whilst pressing the ignition button. Release the control knob once the burner has lit. Once the burner has lit, turn the control knob to the required heat level. When you have finished, turn the control knob back to the off position.

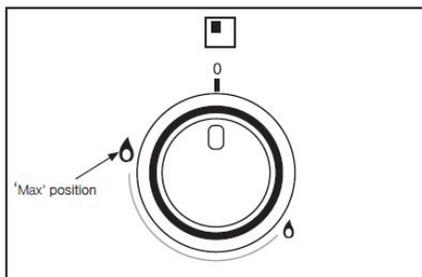

It is important that you use only metal pans specifically designed and/or approved for use with Gas Hobs. Never allow melamine or plastic containers to come in contact with the gas burners.

3.2.2. Operating the Oven/Grill

Push and turn the oven control knob (1) to the Oven Ignition position whilst pressing the ignition button. Release the control knob once the burner has lit. Now set the oven control knob to the required heat level. For the grill, turn the control knob to the grill position and continue as described above. When you have finished using the oven or grill, turn the control knob back to the off position.

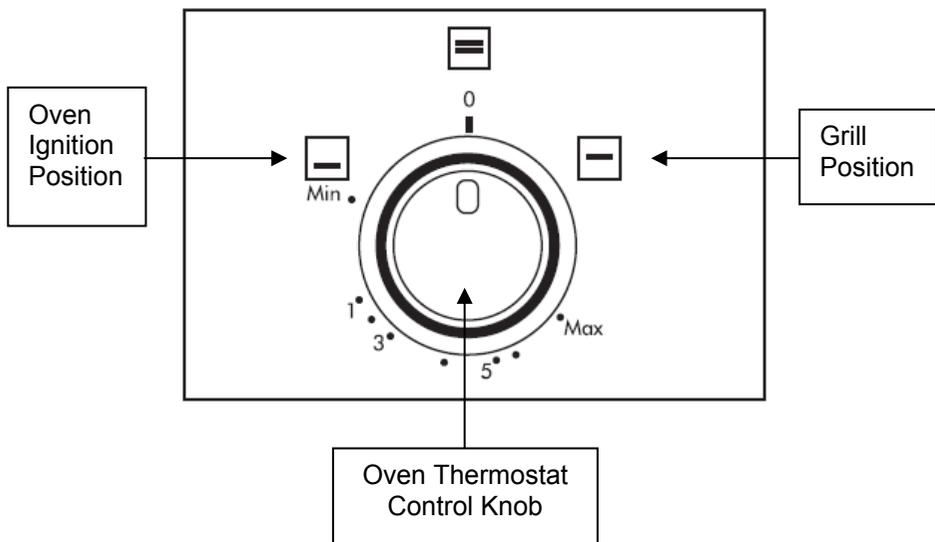

To set the temperature of the oven, turn the control knob between 1 and maximum noting the approximate temperature guide shown in the table below.

Also note that the Grill only has one heat setting – the temperature cannot be varied!

It is important that you use only 'oven proof' pans and dishes when using the appliance for cooking or grilling. Never allow cookware and/or utensils to come into contact with the oven/grill burners.


Do not use melamine or plastic containers when cooking or grilling.

Always take care when removing ovenware from the oven and in particular avoid touching the Grill burner.


When using either the Oven or Grill, you are strongly advised to use Oven Gloves!

| Oven | |
|------|-------------|
| Mark | Temperature |
| 1 | 140 °C |
| 2 | 150 °C |
| 3 | 170 °C |
| 4 | 180 °C |
| 5 | 190 °C |
| 6 | 200 °C |
| 7 | 220 °C |
| 8 | 230 °C |
| 9 | 240 °C |
| MAX | 270 °C |

When using the grill, you must fit the handle to the grill pan. You must also fit the heat shield as shown in the pictures below.

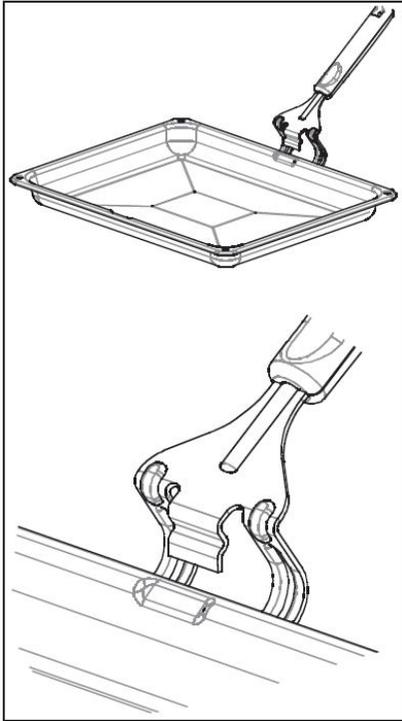

Hold the heat shield so that the fold in the metal is facing upwards. Now slide the heat shield into the two protruding screw heads between the top of the oven door and the bottom of the control panel – push the shield firmly into place.

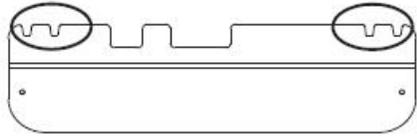

Section 4. Maintenance

Before any maintenance or cleaning work is carried out, DISCONNECT the appliance from the ELECTRICITY supply and ensure that the appliance is completely cool.

4.1. Cleaning the Oven

Clean spillages from inside the oven as soon as possible after use. Always ensure that the surfaces have cooled down before cleaning.

Use a cloth with warm soapy water to clean the surface. If the spillage has dried on the surface you may need to use a specialist oven cleaner, available from all good supermarkets.

Clean the glass door with warm soapy water – always ensure the glass is cool before you clean it!

4.2. Cleaning the Hob

Clean spillages from the hob surface as soon as possible after use. Always ensure that the surface has cooled down before cleaning.

Use a soft cloth or kitchen paper to clean the surface. If the spillage has dried on the surface you may need to use a mild paste cleaner.

Do not use other abrasive cleaners and/or wire wool etc as this may scratch the surface of the hob.

Remove and wash the pan supports with warm soapy water and dry before placing back onto the hob, making sure that they are level prior to placing any pans on the surface.

The burner caps and crowns can be removed for washing. Wash the burner caps and crowns using hot soapy water, and remove marks with a mild cream cleaner. A well moistened soap impregnated steel wool pad can be used with caution, if the marks are particularly

difficult to remove.

After cleaning, be sure to wipe dry with a soft cloth and ensure they are refitted correctly prior to igniting the burner.

The electric ignition is obtained through a ceramic "electrode" and a metal electrode. Keep these components very clean, to avoid lighting difficulties, and check that the burner crown holes are not obstructed.

4.3. What to do if something goes wrong

There is no power to the appliance:

- Check there is not a power cut
- Check there is power to the electric socket/appliance

YOUR GUARANTEE IS VALID ONLY IN THE UK.

To Register your Appliance simply complete the card in your appliance pack and return it with a stamp affixed or *Alternatively* you can Register online at www.repairtechuk.com

SERVICE HELP-LINE

Should your appliance develop a fault, please call the Repairtech Service Helpline on:

01527-888133

Please remember to have all your product details available, including the model number, serial number, date of purchase and your retailer's details before registering a fault.

Your service call cannot progress without this information.

Important Note:

This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol on the product, or on the documents accompanying the product, the Crossed Out Wheelie Bin, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local authority, your household waste disposal service or the retailer where you purchased the product.



We continuously try to improve our products for the benefit of our customers.

For this reason we reserve the right to make changes to any product at any time, without notice

Issue: 01/30-03-2015