

Montpellier

THE PERFECT BALANCE OF FUNCTION AND STYLE

LAUNDRY - DISHWASHING - COOKING - COOLING

Installation and Operating Instructions



Built in Induction Hob

INT785/INT901 - 77cm & 90cm Wide

Please read these instructions carefully before attempting to install or use this appliance.
We recommend that you keep these instructions in a safe place for future reference.

Welcome

Thank you for choosing this Montpellier Induction Hob.

Our Induction Hobs has been designed to provide you with the best combination of style, reliability and performance to give you years of trouble-free use.

You may be familiar with a similar product, but please take time to read these instructions carefully before installing or using your Hob to ensure you get the most from your purchase.

We recommend that you keep this manual in a safe place for future reference.



2
YEAR
GUARANTEE
— PARTS & LABOUR —
ACROSS ALL OUR MODELS
Montpellier
www.montpellier-appliances.com

Your Induction Hob is covered by a comprehensive two year Parts & Labour Guarantee. In the unlikely event that you experience a problem with your Hob, you can rest assured that you are fully protected against the cost of repairs for the first 24 months. Please note that any claim must be accompanied by the model reference number, serial number and proof of purchase.

To activate your guarantee, you will need your product serial number. This can be found on the rear of the machine.


There are two ways to register your Guarantee:

- **Online:** Visit the Support page on our website and complete the online Product Registration form. www.montpellier-appliances.com
- **By Post:** Simply detach and fill in the form provided, attach a stamp and send it in the post. Don't forget to include your e-mail address so that we can send confirmation through to you.



Note: We are unable to take registrations over the phone.

Description Of The Appliance

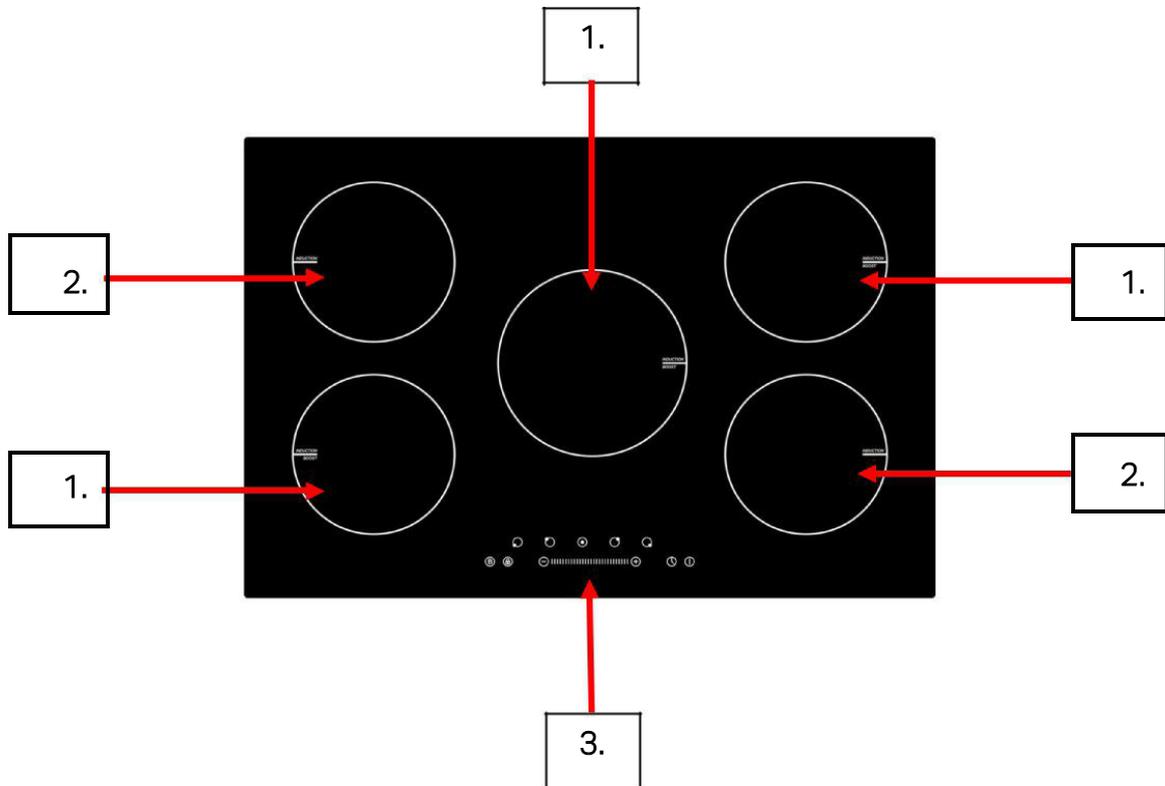

(INT-785 Shown for indicative purposes only)

- 1.) 2000W Cook Zone (With 'Boost' Function)
- 2.) 1500W Cook Zone (With 'Boost' - INT901 only)
- 3.) Main Function Controls

CONTENTS:

Section 1. Installation

Section 2. Safety Advice

Section 3. Operating the Appliance

Section 4. Maintenance


Section 1. Installation

- Remove all packaging, protective film and securing tape from the appliance.
- Position the appliance in a dry atmosphere.
- The following dimensions are provided as a guide for installation – your installer will carry out the installation in accordance with the current regulations.
- Your installer will connect the power cable in accordance with the current regulations.

To install this appliance, please proceed as follows:


1.1. Work-Surface Cut-Out

- Cut out the work-top as shown in the drawing below, ensuring that the actual sizes used are as per the chart below.
- For installation and use, a minimum of 5cm must be maintained around the cut-out.
- The work surface must have a thickness of at least 30mm.
- The work surface must be heat resistant.

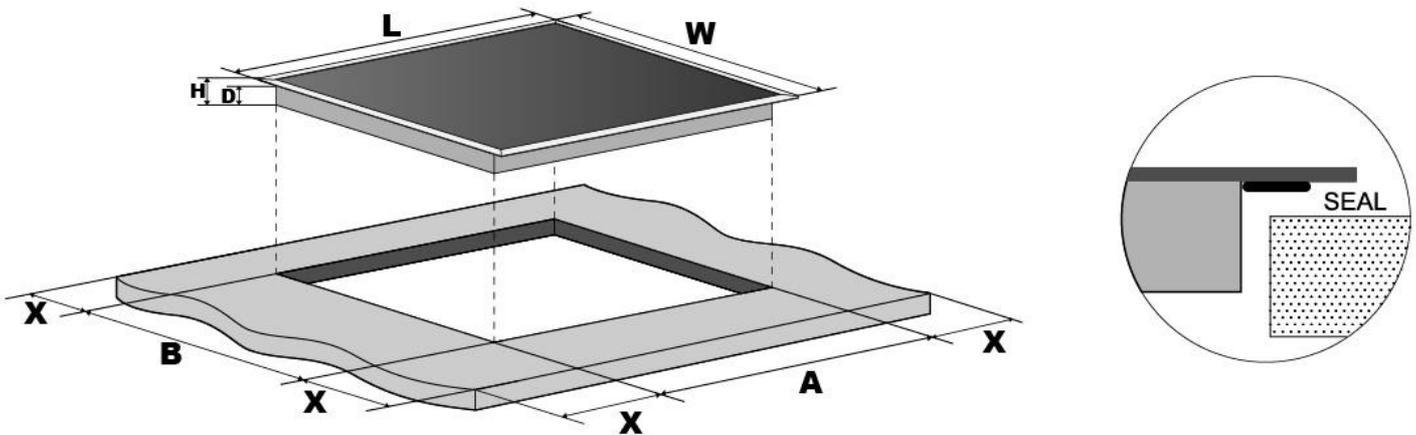

| Model | L(mm) | W(mm) | H(mm) | D(mm) | A(mm) | B(mm) | X(mm) |
|------------|------------|-------|-------|-------|-------|-------|---------|
| MON-INT785 | 770 | 520 | 62 | 58 | 740 | 490 | 50 mini |
| MON-INT901 | 900 | 520 | 62 | 58 | 740 | 490 | 50 mini |


1.2. Space to Rear or Side Wall

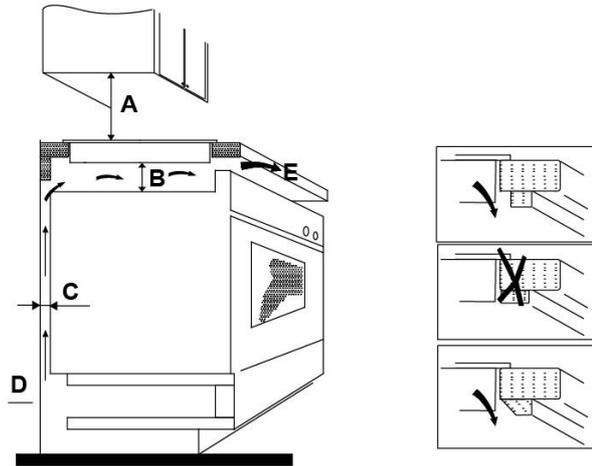


A = 760mm B = 50mm (min) D C = 20mm (min)
 = Air Gap/Intake E = Air Exit (5mm)

1.3. Fixing Brackets

- Fix the brackets as shown below:

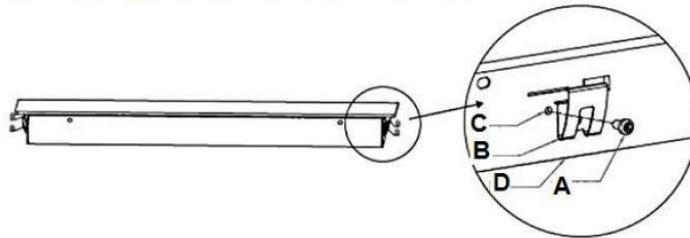


- a) Screw b) Bracket c) Screw Hole d) Base of hotplate

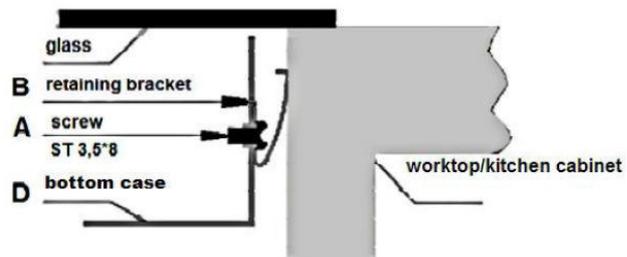

1.4.1. Electrical Connection

These appliances have a total Power Rating of 7200W and must be 'hard wired' into a suitable fused spur adjacent to the appliance housing. The product must be installed by a Qualified Electrician.

Please note that a switchable spur should be accessible above the work surface in order that the power can be turned off.

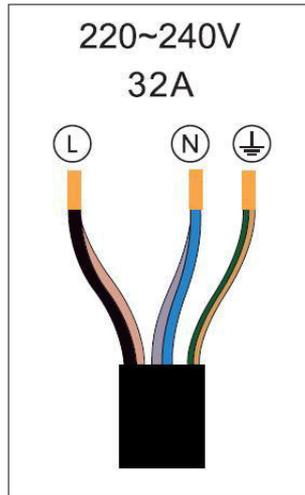

N.B. This hob uses a Power Management system – see 1.4.2. below.

| Hob | Voltage | Total power |
|--------|---------|-------------|
| 5 Zone | 220-240 | 7.2KW |


1.4.2. Power Management

Cooking zones are divided into two groups. Each group has a maximum electricity loading of 3700 W.

Group (b) has the power management function which activates when the total electricity loading of the cooking zones exceeds 3700W.

The power management function decreases the power to the

other cooking zones and changes the displayed power level accordingly. The heat setting display of the reduced zone(s) changes between four levels, e.g. if all zones are on, the highest power levels of three zones are decrease to level 5 (1000W), level 5 (1000W) and level 7 (1500W).

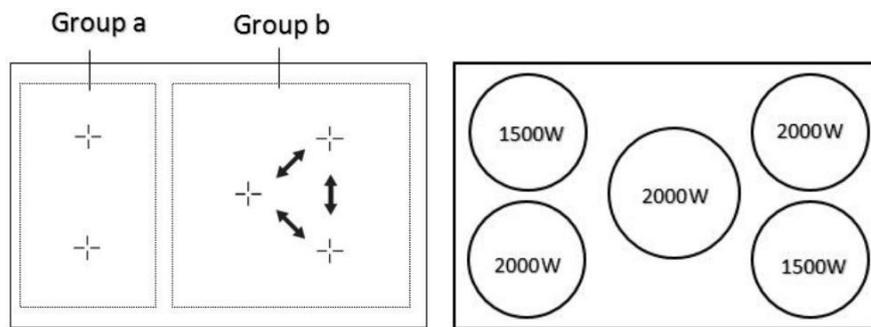

In Group (a) both cook zones can work at full power any time as the maximum combined power is 3500W.

In Group (b) if two zones are working and you switch on the third zone, the power of the third zone will be reduced to level 7 (1500W) and the other two zones will drop to level 5 (1000W) automatically. If you want the third zone to work at level 9 (2000W) you must turn off the other two zones.

Section 2. Safety Advice

- Please read this booklet thoroughly before installing and switching on the appliance. The manufacturer accepts no responsibility for incorrect installation and usage.
- This appliance is guaranteed for Domestic Use Only. This appliance shall not be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction on how to use the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- This appliance must only be used for cooking/heating foods and liquids. Do not use it for any other purpose.
- **It is important that you use only metal pans specifically designed and/or approved for use on Induction Hobs. Never allow melamine or plastic containers to come in contact with the heat zones.**
- If using an adaptor, this must be used in accordance with the manufacturers instructions and ensure that the electrical circuit is not overloaded as this could cause overheating.
- Do not twist or bend the cables, and keep them away from hot surfaces. Following installation make sure that the power cable is not trapped underneath the appliance.
- Keep the appliance surfaces clean. Failure to do this could lead to the appliance malfunctioning.
- The surface of this appliance will get extremely hot during use. The surface of this appliance will remain hot after it has been turned off. Do not touch or clean the heating zone until it has completely cooled down.
- If the power supply cord is damaged, it must be replaced by the manufacturer, it's service agent or similarly qualified persons in order to avoid a hazard.

Important Message for Cardiac Pacemaker Implant Patients!

THIS INDUCTION HOB GENERATES MAGNETIC FIELDS IN ITS IMMEDIATE SURROUNDINGS. Your pacemaker must be designed in compliance with the corresponding regulations in order for no interference to be caused between it and the hotplate. Consult the pacemaker manufacturer or your doctor to determine whether it complies with the regulations in force or whether any incompatibilities exist.

Section 3. Operating the Appliance

3.1. Cookware Suitable for Induction


Induction hobs are made from smooth, ceramic glass, the heat comes from a magnetic induction coil which heats the cookware but not the cooking surface. The heat from the cookware is transferred to the food.

Pans suitable for induction hob use must be made from magnetisable metal such as cast iron or steel. Pure aluminium, copper or glass pans will not work with this type of hob unless the base is bonded with a magnetic metal.

Check that pans are attracted to a magnet - this ensures that they are suitable for use with an induction hob.

It is important that you use only metal pans specifically designed and/or approved for use on Induction Hobs. Never allow melamine or plastic containers to come in contact with the cook zones.

3.2. Control Panel

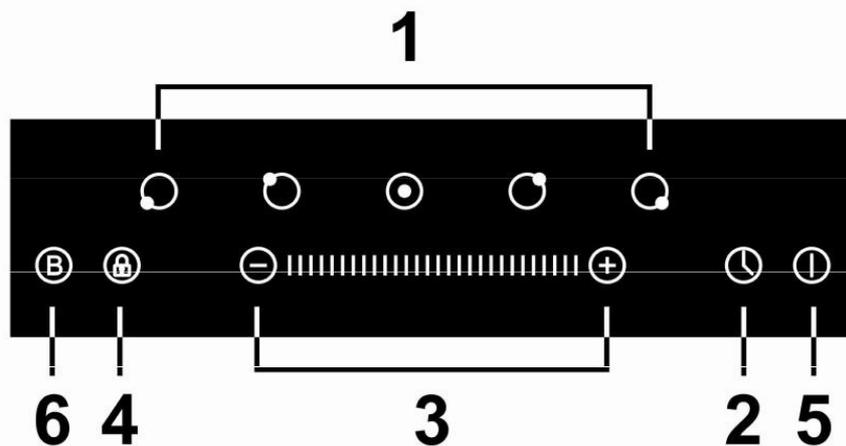

1. Cook Zone Selection Controls
2. Timer Control
3. Power & Timer Slide Control
4. Child Lock Control
5. Power On/Off Control
6. Boost Control

3.3. Power, Cooking & Timer Functions

3.3.1. On-Off

To turn the appliance on or off, press and hold the Power On/Off control (5) until you hear a 'beep'. When the appliance powers up, the cook zone indicators will display "-".

Place a suitable pan on the cook zone to be used.

3.3.2. Setting the Zone Temperature

Press the required zone (1) and then use the '+' or '-' (3) to increase or decrease the power for the required zone, or 'slide' your finger along the '+' or '-' bar, or touch any point along the slide bar. Power settings range from '0' lowest to '9' highest setting.

N.B. If the display flashes  your pan may not be positioned correctly on the cook zone, or positioned on the wrong cook zone or is not suitable for induction hob use.

Press the cook zone control 'Off' when you have finished and then turn the appliance off by pressing the Power Control (5).

N.B. The display will show  until the cook zone(s) has cooled completely.

[Note the Power Management notes in section 1.4.2. \(Page 8/9\)](#)

3.3.3. Power Boost


You can use the 'Boost' function to boost the power of the relevant cook zones for a maximum of 5 minutes. **N.B. The symbol 'P' will be displayed during the Boost function.**

- To operate, press the cook zone selection button (those fitted with boost zone only) and then press the Boost function control (6).
- The cook zone will operate at full power for 5 minutes.
- During operation the display will show 

- If you want to cancel the Boost function earlier than 5 minutes, simply press the relevant cook zone selection button and then press the Boost function button.

Points to note regarding the Boost Function:

- For group (a), if you want to boost the front cook zone you must switch off the other cook zone otherwise the symbols P & 9 will flash in the display and power level 9 will automatically be set. (See diagrams below).
- For group (b), if you want to boost the centre cook zone you must switch off one of the other two cook zones. If you want to boost the rear right cook zone you must first switch off the front right cook zone. (See diagrams below).

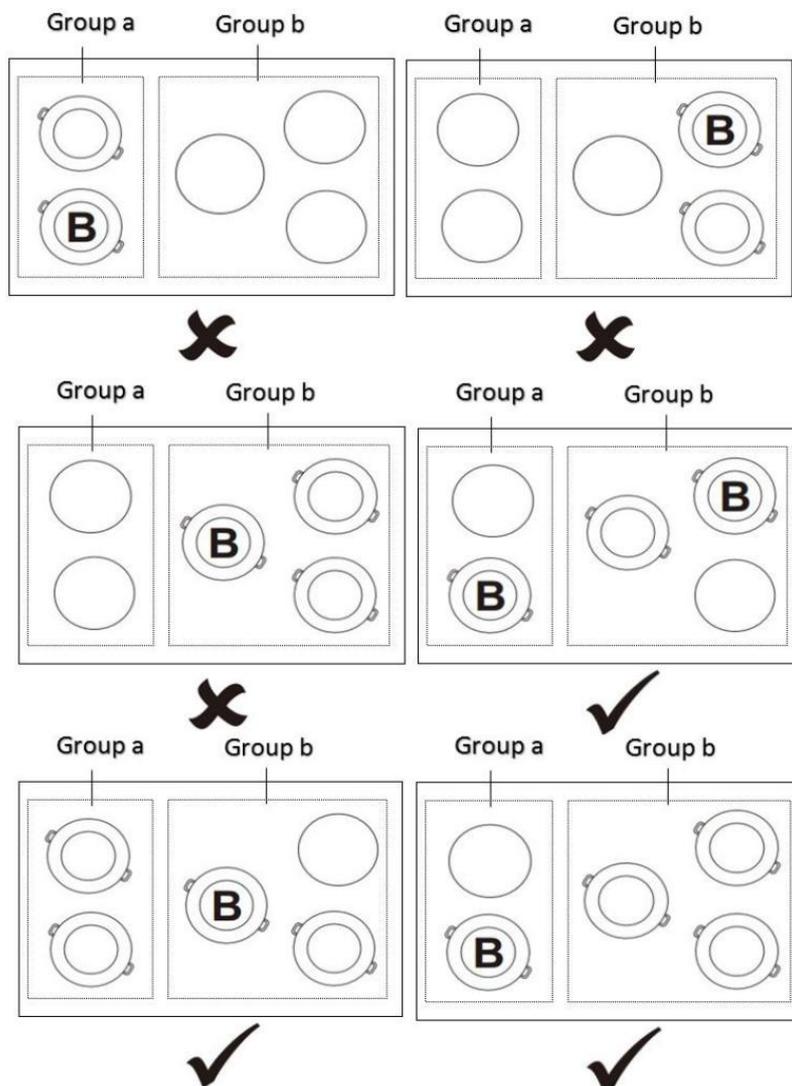

3.3.4. Timer (1 to 99 Minutes) & Minute Minder

You can use the Timer to operate one or more of the cook zones for a time period of between 1 and 99 minutes:

- Press the cook zone button that you want to operate the timer on and select the heat setting level.
- Press the Timer Control (2).
- Select the required time between 1 and 99 minutes by using the '+' or '-' or slide bar controls (3).
- A display will show a 'count down' of the set time.
- Now the cook zone will operate for the selected time and automatically turn off at the end of the period. An audible signal will also be heard at the end of the time period.
- If you need to cancel prior to the end of the set time, simply press the cook zone control and then the Timer Control.

If you want to use the timer as a simple Minute Minder, proceed as follows:

- Ensure that the hob is tuned on
- Press the Timer control (2), the timer will start flashing and 30 will show in the display
- Set the required time by using the '+' or '-' or slide bar controls (3) to increase or decrease the time
- The timer will now count-down and an audible signal will sound when zero is reached.

3.3.5. Child Lock

To activate the Child Lock, press and hold the Child Lock control (4) until 'Lo' is displayed. The lock will now be set and the appliance will not operate. To unlock the Child Lock, simply press and hold the Child Lock control again until the display is removed.

3.3.6. Warning Indicators

Please note, a hot surface indicator (H) will show when one or more of the cook zones has been used – it will go out when the zone(s) is completely cool.

In addition, 'U' will be displayed if the pan is not positioned on the zone correctly, or if the pan is not suitable for Induction Hobs.

Section 4. Maintenance

Before any maintenance or cleaning work is carried out, **DISCONNECT** the appliance from the **ELECTRICITY** supply and ensure that the appliance is completely cool.

4.1. Cleaning the Hob Surface

Clean spillages from the hob surface as soon as possible after use. Always ensure that the surface has cooled down before cleaning.

Use a soft cloth or kitchen paper to clean the surface. If the spillage has dried on the surface you may need to use a specialist vitro-ceramic glass cleaner, available from all good supermarkets.

Do not use other abrasive cleaners and/or wire wool etc as this may scratch the surface of the hob.

4.2. What to do if something goes wrong

There is no power to the appliance:

- Check there is not a power cut
- Check there is power to the electric socket/appliance
- Has the auto time elapsed? – see section 3.3.4.

After cooking the letter 'H' is displayed:

- This is the hot surface indicator – it will remain on until the appropriate heat zone has completely cooled down.

The letter 'U' is displayed:

- The pan is not positioned on the zone correctly, or the pan is not suitable for Induction Hobs.

After switching off, the appliance sounds like it is still running:

- This is the cooling fan – it will remain on until the appliance has completely cooled down.

The display indicates E5:

- This indicates high temperature. Allow the hob to cool down then start again (For all other fault codes, switch off and call your service provider).

The display indicates P:

- This Boost function is operating.

The hob makes a 'clicking' noise during use:

- This is quite normal – it is the sound of the induction coils during operation.

Here For You

After-sales assistance

If you continue to experience problems with your Induction Hob, please call the Montpellier customer service helpline on: **01759 487839**.

Please have all your product details available, including the model number, serial number, date of purchase, and your retailer's details before registering a fault.

The service call cannot progress without this information.

Your 2 year Manufacturer's guarantee

THIS DOES NOT AFFECT YOUR STATUTORY RIGHTS.

Your new Montpellier appliance carries a free guarantee which protects you against the cost of repairs during the first 24 months from date of purchase provided that:

Any claim is accompanied by evidence of the model reference, model serial number and proof of purchase, such as a Sales Receipt, showing that the appliance was purchased within the 24 months prior to the date of claim.

What is not covered under the Guarantee

- Any appliance not correctly installed and operated in accordance with the manufacturer's instructions.
- Any appliance that is used for anything other than domestic purposes.
- Any defect caused by accident, misuse, unauthorised modification or inexpert repair.
- Cost of Call-out where a fault cannot be found with the appliance.
- Cost of Call-out for work covering routine maintenance, such as, but not exclusively, cleaning of filters or defrosting.
- Cost of Call-out for work required to correct the alignment of doors following door reversal procedures carried out by you.
- Use of the appliance by anyone other than the Householder.
- Use in any commercial environment.
- Consumable items, such as, but not exclusively, fuses in plugs, bulbs and breakable items which require routine replacement.
- Repair costs incurred that have not been authorised by Montpellier and/or carried out by a non-approved Montpellier engineer.

YOUR GUARANTEE IS VALID ONLY IN THE UK & ROI.

To register your appliance simply complete the card in your appliance pack and return it with a stamp affixed or alternatively you can register online at **www.montpellier-appliances.com/support**

SERVICE HELP-LINE

Should your appliance develop a fault, please call the Montpellier customer service helpline on: **01759 487839**.

Please remember to have all your product details available, including the model number, serial number, date of purchase and your retailer's details before registering a fault.

Your service call cannot progress without this information.

Montpellier Domestic Appliances Ltd.

Unit 1, Tewkesbury Retail Park, Northway Lane,
Tewkesbury, Gloucestershire GL20 8JU

www.montpellier-appliances.com



The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.