

montpellier

Installation and Operating Instructions

MODEL: CT400/CT450 **Built-In 4 Zone Ceramic Hob**



(Picture shown for indicative purposes only)

Please read these instructions carefully before attempting to install or use this appliance.
It is advisable to keep these instructions in a safe place for future reference.

Introduction

Thank you for choosing this **montpellier** branded appliance. It has been designed to give years of trouble-free use provided it is installed and maintained correctly.

Please read these instructions carefully before installing or using your appliance. It is advisable to keep your purchase and installation receipts with these instructions in a safe place for future reference. Included is some important safety information in addition to guidelines and recommendations that will enable you to take full advantage of all the functions available.

This quality appliance has been tested and certified to meet all applicable UK electrical and safety standards.

This appliance must be installed and connected in accordance with current regulations.

After unpacking the appliance ensure that there is no visible damage. If the appliance has been damaged during transit, do not use it, contact your retailer immediately.

Your 2 year Manufacturer's guarantee

THIS DOES NOT AFFECT YOUR STATUTORY RIGHTS.

Your new **montpellier** appliance carries a free guarantee which protects you against the cost of repairs during the first 24 months from date of purchase provided that:
Any claim is accompanied by evidence of the model reference, model serial number and proof of purchase, such as a Sales Receipt, showing that the appliance was purchased within the 24 months prior to the date of claim.

What is not covered under the Guarantee:

- Any appliance not correctly installed and operated in accordance with the manufacturer's instructions.
- Any appliance that is used for anything other than domestic purposes.
- Any defect caused by accident, misuse, unauthorized modification or inexperienced repair.
- Cost of Call-out where a fault cannot be found with the appliance.
- Cost of Call-out for work covering routine maintenance, such as, but not exclusively, cleaning of filters or defrosting.
- Cost of Call-out for work required to correct the alignment of doors following door reversal procedures carried out by you.
- Use of the appliance by anyone other than the Householder.
- Use in any commercial environment.
- Consumable items, such as, but not exclusively, fuses in plugs, bulbs and breakable items which require routine replacement.
- Repair costs incurred that have not been authorised by Repairtech and/or carried out by a non-approved Repairtech engineer.

YOUR GUARANTEE IS VALID ONLY IN THE UK.

To Register your Appliance simply complete the card in your appliance pack and return it with a stamp affixed or Alternatively you can Register online at www.repairtechuk.com


SERVICE HELP-LINE

Should your appliance develop a fault, please call the
Repairtech Service Helpline on:
01527-888133

Please remember to have all your product details available, including the model number, serial number, date of purchase and your retailers details before registering a fault.

Your service call cannot progress without this information.

Description of the Appliance

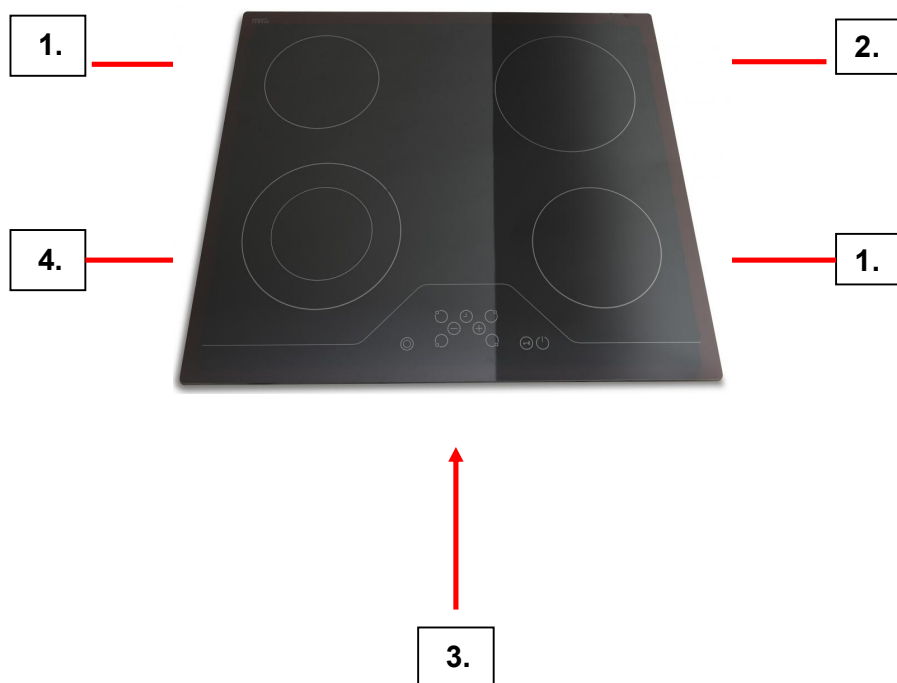

- 1. Small Cook Zone
- 2. Large Cook Zone
- 3. Touch Controls
- 4. Large Dual Cook Zone

(Picture shown is for indicative purposes only)

CONTENTS:

Section 1. Installation

Section 2. Safety Advice

Section 3. Operating the Appliance


Section 4. Maintenance

Section 1. Installation

- Remove all packaging, protective film and securing tape from the appliance.
- Position the appliance in a dry atmosphere.
- The following dimensions are provided as a guide for installation . your installer will carry out the installation in accordance with the current regulations.
- Your installer will connect the power cable in accordance with the current regulations.

To install this appliance, please proceed as follows:

1.1. Work-Surface Cut-Out & Position Near Walls

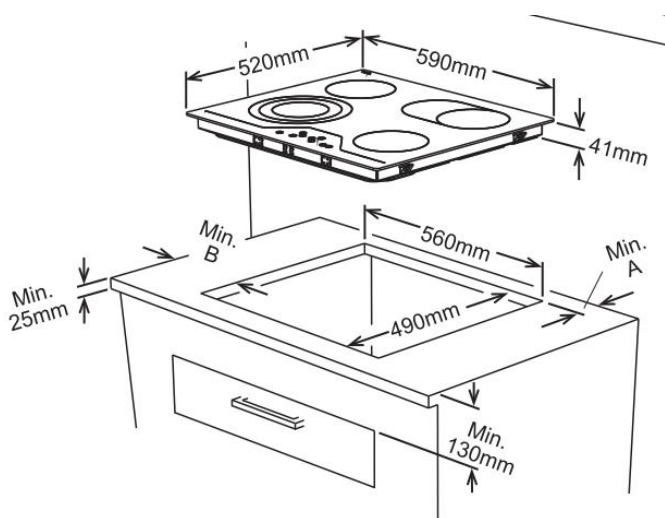


Adjoining Walls	A(mm)	B(mm)
Combustible	60	150
Non-combustible	25	40

1.2. Securing the Hob

Apply the self-adhesive sealing tape all the way around the lower edge of the cooking surface as seen in the below diagram.

Screw the 4 worktop mounting brackets on the side walls of product.

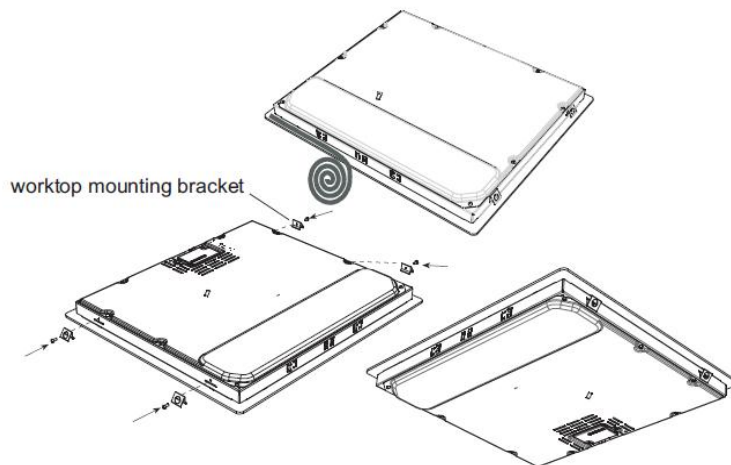

Now position the hob into the work surface cut-out to secure it into place.


1.3. Electrical Connection

This appliance must be hard wired to a suitable fused point adjacent to the appliance housing and protected with a 32 amp fuse. Please note that a switchable spur should be accessible above the work surface to allow the power to be turned off.

Note: This hob cannot be connected via a 3pin plug!

Your installer will connect this appliance in accordance with current regulations.

Electrical connection diagram:

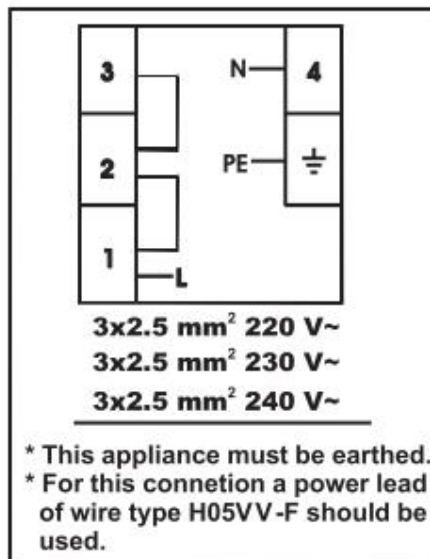


Section 2. Safety Advice

- Please read this booklet thoroughly before installing and switching on the appliance. The manufacturer accepts no responsibility for incorrect installation and usage.
- This appliance is guaranteed for Domestic Use Only.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- This appliance must only be used for cooking/heating foods and liquids. Do not use it for any other purpose.
- If using an adaptor, this must be used in accordance with the manufacturers instructions and ensure that the electrical circuit is not overloaded as this could cause overheating.
- Do not twist or bend the cables, and keep them away from hot surfaces.
- Following installation make sure that the power cable is not trapped underneath the appliance.
- Keep the appliance surfaces clean. Failure to do this could lead to the appliance malfunctioning.
- The surface of this appliance will get hot during use. The surface of this appliance will remain hot after it has been turned off. Do not touch or clean the heating zone until it has completely cooled down.
- If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



Section 3. Operating the Appliance

3.1. Control Panel

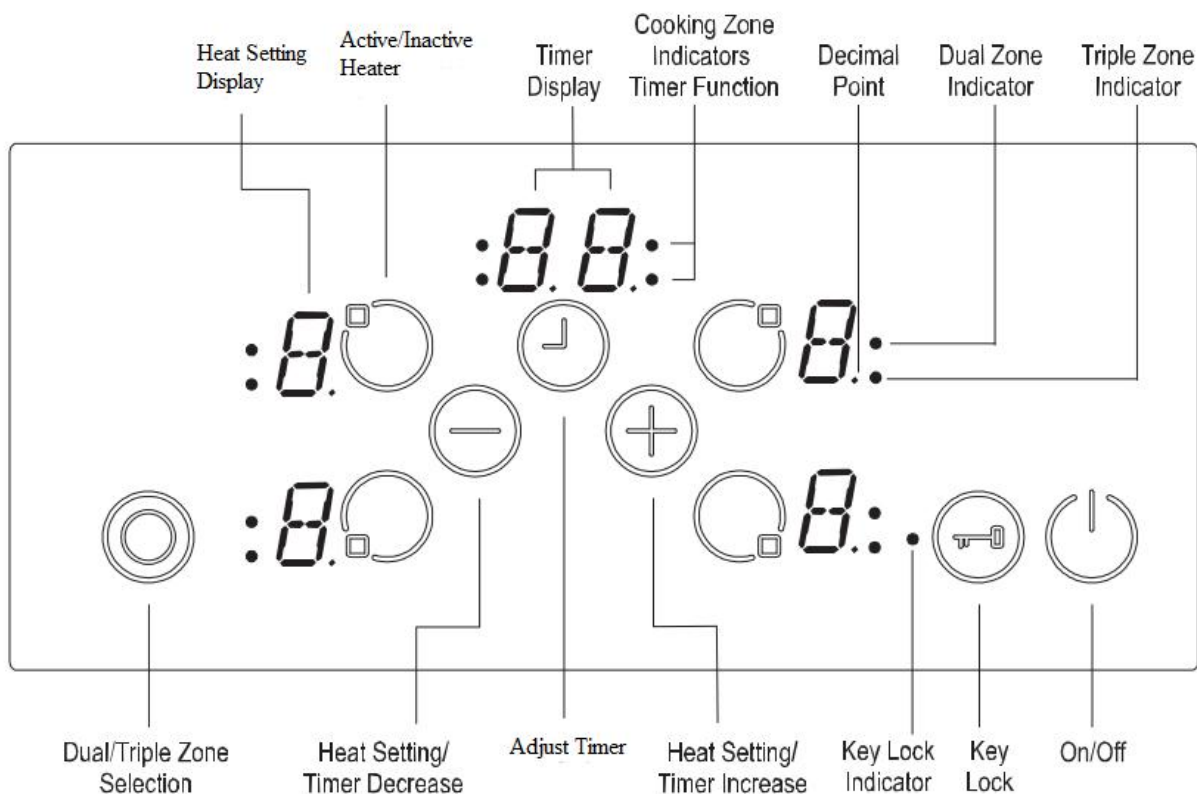


3.2. Timer, Power and Cooking Functions

  Switching the appliance on:



Switch the hob on by touching the ON/OFF key . All heater displays show a static  and the bottom right dot will blink. If no cooking zone is selected within 10 seconds, the hob will automatically turn off. If no heat level between 1-9 is selected within 3 seconds of activating a heater the selection is erased.

Switching the appliance off:

Switch the appliance off at any time by touching .

Switching the cooking zones on:

Touch the heater selection key corresponding to the zone you wish to cook on. There is a static dot indication of the selected heater display and a blinking dot on all other displays.

Select the temperature setting by using the increase setting key  or decrease setting key . The element is now ready to cook.

Switching the cooking zones off:

A cooking zone can be turned off in 3 different ways:

- Simultaneous operation of the \oplus and \ominus keys.
- Reducing the heat setting to $\%0+$ by operating \ominus key.
- Use of the timer turn off function.

If the cooking zone is hot, $\%H+$ will be displayed instead of $\%0+$.

Dual Zone Function:

The dual zone function can be activated by selecting the Dual Zone Selector key. The extension zone can only be activated after a heat level of 1-9 is selected.

Heat Boost Function:

All heat zones are equipped with a heat boost function.

If the heat boost function is active then the heater will operate with maximum power for the period of the heat boost time. This is indicated through a flashing $\%A+$, alternating with the heat setting value on the heater display. Once the heat boost time has ended only the heat setting will be shown.

If the heat boost is to be used for a heater, heat level 9 must be selected by pressing \ominus starting from level 0. After this $\%A+$ should alternately be displayed. The heat boost can be turned off by pressing \ominus until heat setting $\%0+$ appears. The heat boost can be activated again by pressing \oplus if the heat setting is set to 9. The display will flash $\%A/9+$.

Operating Time Limitation:

Every cooking zone will be switched off after a defined maximum operation time if the heat setting is not modified. Every change to the cooking zone resets the timer of the safety switch off function. The maximum operation time depends on the selected temperature level.

Sensor Safety Cut Off:

To prevent the appliance from unwanted, random sensor operation, a sensor monitor is included. In case one or more buttons are held for longer than 12 seconds, the appliance will make a sound and switch off. The safety turn off causes the display to flash $\%E+$ on all heaters displays.

Over Temperature Switch Off:

As the control panel is located fairly near a heater it is possible for an incorrectly placed pan to heat up the glass of the control panel and cause damage. If this area gets too hot it will switch off automatically and be indicated on the heater display with the letter $\%T+$ until the temperature decreases.

Child Lock:

After switching on the control, the child lock function can be activated. To activate the child lock, simultaneously operate the increase heat setting key \oplus and decrease heat setting key \ominus , and then operate the increase heat setting key \oplus again. $\%L+$ meaning LOCKED will appear in all the heater displays and the control cannot be changed.

To deactivate the child lock, simultaneously operate the increase heat setting key \oplus and decrease heat setting key \ominus , and then operate the decrease heat setting key \ominus again. The $\%L+$ symbol, meaning LOCKED should now have disappeared.

Key Lock:

While the Key Lock function is active it is only possible to switch the appliance off. If the key lock button \oplus is pressed and held for two seconds the lock will be activated and acknowledged by a buzzer. After this two second period the key lock indicator will flash and the heater will be locked.

Timer function:

The timer function is available for the following situations:

Minute minder timer (1-99 min):

Touching the \odot key once will activate the minute minder timer (no cooking zone display will be flashing). $\%00+$ will appear indicated that the timer is active.

Touch \oplus to increase the time or touch \ominus to decrease the time. You can adjust the timer between 0 and 99 minutes.

The sound signal will be stopped by operating any key.

Cooking zone timer (1-99 min):

When the hob is switched on, an independent timer can be programmed for every cooking zone. To set a timer for a cooking zone you must touch the \odot key. It is important to remember that the first time this key is selected it would operate the minute minder but by touching the key again it will then select an active cooking zone, touching this key additional times will allow you to scroll through the active heater zones indicated by the flashing Cooking Zone Indicator.

Touch \oplus to increase the time or touch \ominus to decrease the time. By touching \odot additional timers can be set and you can also toggle through your active timers. All timers will be erased by switching off the appliance but the minute minder will continue to operate.

To erase a timer you must toggle through the timers using the \odot key until you have found the correct one and then touch \ominus and decrease the time to $\%00+$. Alternatively you can touch \oplus and \ominus simultaneously until $\%00+$ is shown.

Touching any button will stop the timer alarm.

Section 4. Maintenance

Before any maintenance or cleaning work is carried out, DISCONNECT the appliance from the ELECTRICITY supply and ensure that the appliance is completely cool.

4.1. Cleaning the Hob Surface

Clean spillages from the hob surface as soon as possible after use. Always ensure that the surface has cooled down before cleaning.

Use a soft cloth or kitchen paper to clean the surface. If the spillage has dried on the surface you may need to use a specialist vitro-ceramic glass cleaner, available from all good supermarkets.

Do not use other abrasive cleaners and/or wire wool etc as this may scratch the surface of the hob.

4.2. What to do if something goes wrong

There is no power to the appliance:

- Check there is not a power cut
- Check there is power to the electric socket/appliance

After cooking the letter 'H' is displayed:

- This is the hot surface indicator . it will remain on until the appropriate heat zone has completely cooled down.

After switching off, the appliance sounds like it is still running:

- This is the cooling fan . it will remain on until the appliance has completely cooled down.

If after the previous checks there is still a fault, please contact the Repairtech Service Helpline below. Please ensure that you have the model number, serial number, date of purchase and retailers information available before you make the call.

**Should your appliance develop a fault, please call the Repairtech Service Helpline on:
01527-888133**

Important Note:

This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol on the product, or on the documents accompanying the product, the Crossed Out Wheelie Bin, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local authority, your household waste disposal service or the retailer where you purchased the product.



We continuously try to improve our products for the benefit of our customers. For this reason we reserve the right to make changes to any product at any time, without notice