

Montpellier

THE PERFECT BALANCE OF FUNCTION AND STYLE
LAUNDRY - DISHWASHING - COOKING - COOLING

Installation and Operating Instructions



7kg Vented Tumble Dryer **MVSD7W** - White

Please read these instructions carefully before attempting to install or use this appliance.
We recommend that you keep these instructions in a safe place for future reference.

Welcome

Thank you for choosing this Montpellier appliance.

Our appliances have been designed to provide you with the best combination of style, reliability and performance to give you years of trouble-free use.

You may be familiar with a similar product, but please take time to read these instructions carefully before installing or using your appliance to ensure you get the most from your purchase.



2
YEAR
GUARANTEE
— PARTS & LABOUR —
ACROSS ALL OUR MODELS
Montpellier
www.montpellier-appliances.com

We recommend that you keep this manual in a safe place for future reference.

Your appliance is covered by a comprehensive two year Parts & Labour Guarantee. In the unlikely event that you experience a problem with your appliance, you can rest assured that you are fully protected against the cost of repairs for the first 24 months. Please note that any claim must be accompanied by the model reference number, serial number and proof of purchase.

To activate your guarantee, you will need your product serial number. This can be found inside your appliance.

NB: Please make sure that you keep a copy of your original sales invoice as this will be needed if any service call is required.

There are three ways to register your Guarantee:

- **Online:** Visit the Support page on our website and complete the online Product Registration form. www.montpellier-appliances.com
- **By Post:** Simply detach and fill in the form provided, attach a stamp and send it in the post. Don't forget to include your e-mail address so that we can send confirmation through to you.
- **By Phone:** Contact our warranty registration department on **0808 1961388**

Thank you for choosing this product.

This User Manual contains important safety information and instructions on the operation and maintenance of your appliance.

Please take the time to read this User Manual before using your appliance and keep this book for future reference.

The design and specifications are subject to change without prior notice for product improvement.

CONTENTS

SAFETY INSTRUCTIONS

■ Safety Instructions	2
-----------------------------	---

INSTALLATION

■ Product Description	7
■ Installation	7

OPERATIONS

■ Quick Start	9
■ Before Drying	10
■ Control Panel	11
■ Drying Programmes Table	13

MAINTENANCE

■ Cleaning And Care	14
■ Troubleshooting	15
■ Technical Specifications	16
■ Product Fiches	17

SAFETY INSTRUCTIONS

■ Safety Instructions

- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the power cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- In EN standard countries, this appliance can be used by children from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
- The lint trap has to be cleaned frequently.
- Lint must not to be allowed to accumulate around the tumble dryer.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.

SAFETY INSTRUCTIONS

- Items such as foam rubber (latex form), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.

 **Warning!**

Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

- The exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.
- The appliance should not be installed behind a lockable door a sliding door or a door with a hinge.
- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.
- The appliance should not be overturned during normal use or maintenance.
- Remove all objects from pockets such as lighters and matches.

SAFETY INSTRUCTIONS

- For appliances with ventilation openings in the base, a carpet must not obstruct the openings.
- Children of less than 3 years should be kept away unless continuously supervised.
- The plug must be accessible after installation.
- **Warning:** The appliance must not be connected to an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- Remove all packaging before using the appliance. Otherwise, serious damage may result.

Correct disposal of this product:




This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Model	Rated capacity
MVSD7W	7.0kg

SAFETY INSTRUCTIONS

- **Power supply and grounding**

The dryer employs alternative current with the rated voltage and frequency. When the voltage fluctuates between 6% of rated voltage, the dryer can work normally. A standard 13A socket outlet should be situated beside the dryer for convenience and safety. The method of connection to the socket is as the diagram shown. If this is not possible then you will have to make improvements as soon as possible according to the rules and suggestions mentioned above.

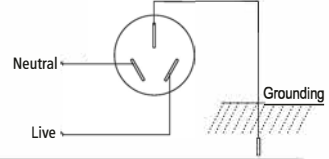

Warning!


The socket and the grounding wire must be installed by an electrician to prevent incorrect installation or use of the socket and to guarantee the safety of use of electricity. No connection of the grounding wire and the neutral wire is likely to cause the danger of electric shock from the appliance.

- **Precautions**

Do not install or store where it will be exposed to temperatures below freezing or exposed to water or weather which could cause permanent damage and invalidate the warranty



Keep the area around the exhaust opening and adjacent surrounding areas free from the accumulation of lint, dust and dirt. An obstructed exhaust will reduce the airflow.

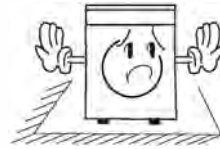

Thoroughly spin the laundry in a washing machine or spin dryer. High spin speed will reduce the drying time and save energy.



Make sure combustible fumes will not be close to the dryer when it is working. If any gas leaks, do not touch the plug or the start/pause button.



SAFETY INSTRUCTIONS


Do not wash or dry articles that have been cleaned in, washed in, soaked in or spotted with combustible or explosive substances (such as wax, oil, paint, gasoline, degreasers, dry-cleaning solvents, kerosene, etc.).



Never attempt to operate this appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug.



Do not allow children on or in the appliance. Close supervision of children is necessary when the appliance is used near children.

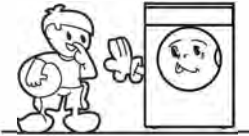


Please do not touch the machine if you have wet hands or feet !



Do not store plastic, paper or clothing that may burn or melt on top of the dryer during operation.



The exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.

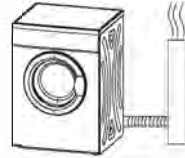

Do not dry articles containing rubber, plastic or similar materials such as padded bras, tennis shoes, galoshes, bath mats, rugs, bibs, baby pants, raincoats, plastic bags or pillows that may melt or burn. Some rubber materials, when heated, can under certain circumstances catch fire by spontaneous combustion.





It is advised to only open the door once the programme is complete and has done its cool down period. To avoid damage to the appliance as well as avoiding any risk of burning or scalding on hot surfaces or steam do not open the door during the cycle.



INSTALLATION

■ Product Description

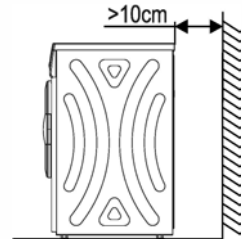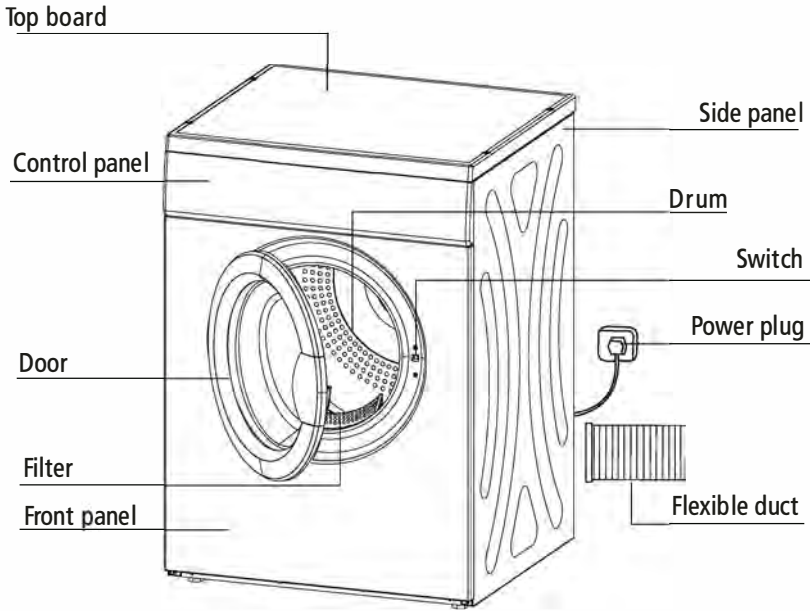

■ Installation

• Installation Position Selection


Dryer should be placed in a ventilated area with not less than 10cm distance from the wall. It is suggested there are no obstacles within 1.5m in front of dryer to keep the appliance well ventilated.

!! This appliance is not designed to be used in out buildings, garages or any place where the ambient temperature will drop below 5°C. Due to its use of sensors it will run but not heat therefore clothes will not dry **!!**

INSTALLATION

- **Level Adjusting**

Once in its permanent operating position, check that the dryer is absolutely level with the aid of a spirit level. If it is not, adjust the feet with a tool.

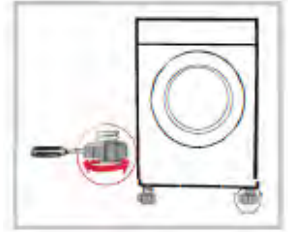

- **Note!**


If the dryer can't be placed horizontally (the lean angle is no more than 2°) this may cause the appliance to be unbalanced and stop working.

Notice when installing:



- Do not install the dryer in the open air (outside) or in a place easily damaged by rain/water.
- Do not place the back of dryer near curtains.
- Do not place the dryer near gas appliances, especially when they are in use.

Flex tube fixing:

- Connect the end of the vent hose with the locating lugs (see below image) into the rear of the dryer and twist clockwise to lock in to place.

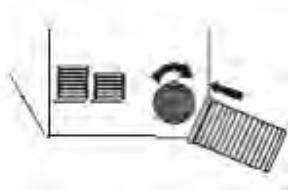

- The other end of flex tube will be extended outside either through an open door/window or vented through a wall. If venting through the wall please refer to the below pictures for the correct positioning of the vent hose.

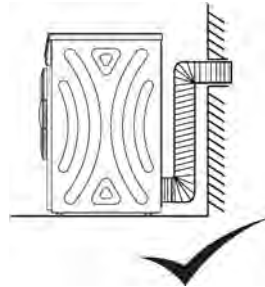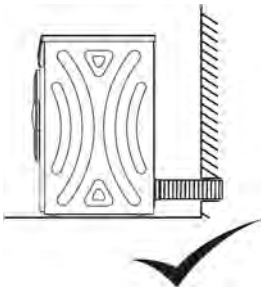

OPERATIONS


■ Quick Start

Note!


Before using, please make sure its installed properly.



plug in

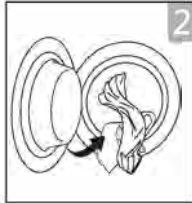

load

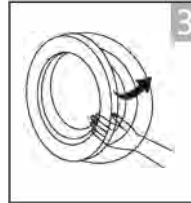

close door

Drying



on



select function
or default



start

After Drying


Buzzer beep or "0:00" on display.



unload



clean filter

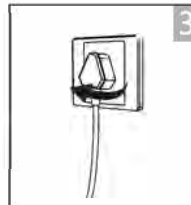












unplug

OPERATIONS

■ Before Drying

1. Before drying, thoroughly spin the laundry in a washing machine. High spin speed can reduce the drying time and save energy.
2. For uniform drying results, sort the laundry according to fabric type and drying appropriate drying programme.
3. Before drying, please close zips, hooks and eyelets, button up, tie fabric belts, etc.
4. Do not over dry the clothes, over drying will tend to cause more creases in the fabric.
5. Do not dry articles containing rubber or similar elastic materials.
6. Do not dry any clothes after a dry-clean process.
7. Clean the lint filter after each use to avoid the extension of drying time and increased energy consumption.













The reference weight of dry clothes (each)

 Mixed-fabric clothes (about 800g)	 Jacket (about 800g cotton)	 Jeans (about 800g)	 Towel quilt (about 900g cotton)
 Single bedsheet (about 600g cotton)	 Work clothes (about 1120g)	 Sleepwear (about 200g)	 Long sleeve shirt (about 300g cotton)
 Short sleeve shirt (about 180g cotton)	 Short pants (about 70g cotton)	 Socks (about 50g mixed-weave)	

📌 Note!


- Never overload.
- Not suitable for silk or woollen textiles.

Please pay attention to the drying guidelines on clothing labels as per the below chart.

 Machine dry	 Tumble dry normal	 Do not tumble dry	 Do not machine dry
 Line dry / hang to dry	 Drip dry	 Dry flat	 Dry in the shade
 Dry clean	 Do not dry clean	 Dry clean normal cycle with any solvent	 Dry clean normal cycle petroleum solvent only

OPERATIONS

■ Control Panel

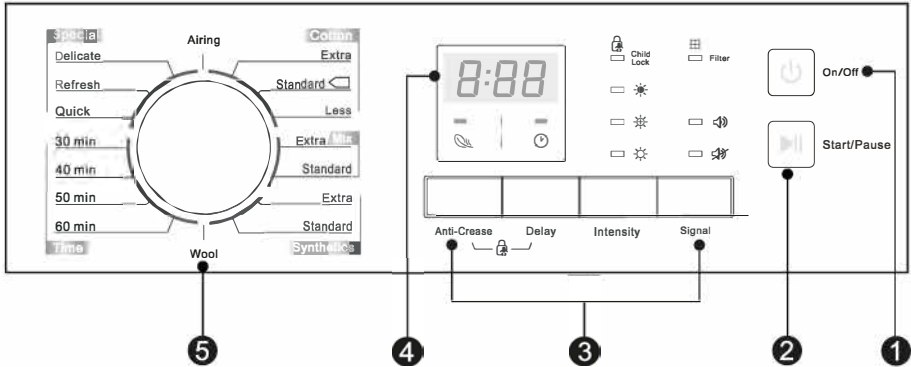

OPERATIONS

1 On/Off

Product is switched on or off.

2 Start/Pause

Press the button to start or pause the drying cycle.

3 Option

These buttons are used for setting additional functions.

4 Display

This display shows the setting, estimated remaining time and status messages of your dryer.



5 Programmes

Different drying cycles can be selected according to the user's needs and drying efficiency.




OPERATIONS

Options

Signal

Press the signal button to either activate or de-activate the buzzer. Once selected the corresponding LED will show on the display panel  ,  . The buzzer will sound when finishing the cycle if it has been selected.

Intensity

Press the button to adjust the dryness level of the laundry. The Intensity setting has three levels of dryness    . The drying time increases by 3 minutes in every level.

1. The intensity level can only be selected before the programme is started.
2. Press the intensity button repeatedly to select the desired level, the LED will display to show what level has been selected.

Delay

Press the delay button to delay the start of the selected drying programme for up to 24 hours. Press the button repeatedly to select between 1-24 hours. Once the number of hours has been selected press the start/pause button to commence the countdown process. If you wish to cancel the delay time, press the button until the display reverts back to the programme time.

Anti-Crease


Press the Anti-Crease button to select this function. At the end of the drying cycle, the anti-crease operates for 30 minutes (default) or 120 minutes if Anti-Crease is selected. The Anti-Crease LED will illuminate when the anti-crease function is selected. This function helps reduce the amount of creasing.

Child Lock

Press the Anti-Crease and Delay buttons  simultaneously until the child lock LED illuminates.

To cancel the child lock repeat the above process and the LED will turn off.

Note!

- Clean the filter, cabinet and inner drum on a regular basis.
- Clean the filter when the "Filter" light is flashing, after the dryer has stopped.
-  This symbol indicates the energy efficiency test programme "standard cotton programme", which is most suitable to dry a normal cotton load at the rated load capacity.

OPERATIONS

■ Drying Programmes Table

MVSD7W

Programme		Weight (max) 7.0kg	Application/Properties	Delay	Intensity
Cotton	Extra	7.0kg			
	Standard				
	Less				
Mixed	Extra	7.0kg	For mixed fabrics made from cotton and synthetics.	Y	Y
	Standard				
Synthetics	Extra	3.5kg	For thick or multi-layer synthetic fabrics to be dried completely .	Y	Y
	Standard	3.5kg	To dry thin synthetic textiles, which are not ironed, such as easy care shirts, baby clothes or socks.		
Special	Delicate	—	To dry delicate laundry that is suitable for drying or laundry which is advised to be hand-washed at a lower temperature.	Y	N
	Refresh	—	To refresh clothes kept at closed environment for a long time or to remove odors. Min. 20 min to max. 150 min.(in 10 min. steps)		
	Quick	—	For washing which is to be dried quickly, eg, made of acrylic fibres or for individual small items. Also for subsequent drying.		
	30 min	—	Timed dry 30 min.		
Time	40 min	—	Timed dry 40 min.	Y	N
	50 min	—	Timed dry 50 min.		
	60 min	—	Timed dry 60 min.		
Airing	—	—	To air clothes without blowing hot air.	Y	N
Wool	—	—	For machine washable wool items .	Y	N

MAINTENANCES

■ Cleaning And Care


Filter clean

- Clean the lint filter after each use.
- Remove the filter by pulling straight up.
- Gently open the filter taking care not to break it.
- Remove the lint by hand or with a damp cloth.
- Once cleaned and thoroughly dry close the filter and refit in to the dryer.



Cleaning cabinet and inner drum

- Use a soft damp cloth when cleaning the cabinet and inner drum.
- Do not rinse any surfaces with water.
- Do not use any scouring pads or harsh cleaning products.
- Do not use any chemicals or alcohol wipes when cleaning the dryer
- Make sure to open the front door for aeration after cleaning the inner drum.

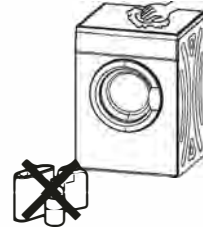

Safety reset

1. This dryer has a safety cut out switch which is activated by temperature.
2. The safety reset button is on the back of the dryer. If your dryer is not heating this button must be reset before the dryer can heat again. You may need to wait 10 minutes for the dryer to cool down before being able to reset the button.
3. The most common reason for the dryer to overheat is a blocked filter.
4. Clean the lint filter after each load to prevent overheating of the dryer

The cut out switch may operate for the following reasons:

1. Lint filter is blocked.
2. Exhaust outlets blocked at the back of the dryer.
3. Poor ventilation in the room it is situated, or in the drum due to overloading.
4. Lightweight garment eg. handkerchief, sucked over the filter.

MAINTENANCES

Safety Reset Button

Use your finger or a pencil to press the button in until you feel it click.



■ Troubleshooting

Issue	Cause	Solution
Will not start/dry	<ul style="list-style-type: none"> ● Power cut. ● The power plug is not plugged in correctly ● Overloading. ● The safety cut out has tripped. 	<ul style="list-style-type: none"> ● Wait for the power to return. ● Check the socket/plug is not damaged and the plug is correctly fitted. ● The clothes in the dryer after being spun must not exceed 7kg. ● Reset the cut out as shown in the above picture..
Appliance is hot to touch	<ul style="list-style-type: none"> ● The lint filter is dirty/clogged. ● The exhaust duct is dirty/trapped or kinked. 	<ul style="list-style-type: none"> ● Make sure to clean the lint filter after every use. ● Clean out the rear vent/vent hose regularly.
Clothes are too dry/hot to touch	<ul style="list-style-type: none"> ● The drum is overloaded ● Clothes removed before the programme has finished. ● Use of the incorrect programme. ● Temperature is too high. 	<ul style="list-style-type: none"> ● Make sure the drum is not overloaded and the clothes have room to move around freely. ● Do not remove clothes before the programme has finished as they will not have completed a cool down cycle. ● Observe the maintenance label on clothes ● Use the correct programme for the fabric being dried.
Clothes shrinking	<ul style="list-style-type: none"> ● Too dry. 	<ul style="list-style-type: none"> ● Observe the maintenance label on clothes. If the fabric is liable to shrink, use a delicate programme and remove the clothes while slightly damp and hang up until fully dry. Make sure to leave the door open to allow the dryer to cool down after removing the items.
Hairball on clothes	<ul style="list-style-type: none"> ● It is normal for synthetic fibre and permanent press fibre to cause hairballs. This is due to the fabrics rubbing during the programme. 	<ul style="list-style-type: none"> ● Use fabric softener sheets to lubricate fibres. Dry clothes inside out to help reduce the bobbling effect.

MAINTENANCES

Error Codes

Error code	description	Criteria	Action	Failure indication
E3	Temperature Sensor error	Temperature Sensor is open circuit or PCB fault	Stop the program and call 01759 487839 for service	LED 3H and 6H flashing
E4	Temperature Sensor error	Temperature Sensor has a short circuit or PCB fault	Stop the program and call 01759 487839 for service	LED 3H and 6H flashing
E33/ E36	Temperature Sensor error	Temperature Sensor is open or short circuit	Stop the program and call 01759 487839 for service	

■ Technical Specifications

Model	MVSD7W
Parameter	
Dimension (H*W*D)	840*595*580(mm)
Rated input power	2000W
Rated voltage	220-240V~
Rated frequency	50Hz
Weight of product	33kg
Rated capacity	7.0kg(Dry clothes)
Ambient temperature	+5°C~+35°C

Note!

The rated capacity is the maximum capacity, make sure that the clothes which are loaded in to the appliance do not exceed the rated capacity at any time.

This appliance is not designed to be operated in outhouses or garages with temperatures below +5°C. Doing so may invalidate your guarantee and stop the appliance from functioning correctly.

MAINTENANCES

■ Product Fiche

Model		MVSD7W
Rated Capacity		7kg
Dryer Type		Air-Vented
Energy efficiency class		C
Weighted annual energy consumption (AE _c)	①	519.1kWh / year
Automatic or non-automatic		Automatic
EU Ecolabel		N/A
Energy consumption of the standard cotton programme		
Weighted energy consumption of the standard cotton programme at full and partial load		3.22kWh
Energy consumption of the standard cotton programme at full load		4.49kWh
Energy consumption of the standard cotton programme at partial load		2.27kWh
Power consumption of the off-mode (P _o)		0.46 W
Power consumption of the left-on mode (P _l)		0.49 W
Duration of the left-on mode		10 min
Programme time of the 'Standard Cotton programme'	②	
Weighted programme time of the standard cotton programme at full and partial load		104min
Programme time of the standard cotton programme at full load		145min
Programme time of the standard cotton programme at partial load		75min
Sound power level for the standard cotton programme at full load		69dB

Remarks:

- ① Energy consumption per year is based on 160 drying cycles of the standard cotton cycle programme at full and partial loads, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is loaded and used.
- ② The "standard cotton programme" used at full and partial loads is the standard drying programme to which the information in the label and fiche relates. This programme is suitable for drying normal wet cotton laundry and that it is the most efficient programme in terms of energy consumption for cotton.

Here For You

After-sales assistance

If you continue to experience problems with your appliance, please call the Montpellier customer service helpline on: **01759 487839**

D`YUgY \ Uj Y` U`` nci f` dfcXi Wñ XYHU]`g` Uj U]`UV`Yž`]bWi X]b[` h Y` a cXY` bi a VYfž gYf]U` bi a VYfž cf][]bU` gU`Yg`]bj c]W` fWYUf` m gl` ck]b[` a cXY` bi a VYfžXUH` cZ di fW Ugy` UbX` nci f` fYHU]`Yf]g` XYHU]`g` VYZ`fYfY[]ghYf]b[`UZU` `H`

The service call cannot progress without this information.

Your 2 year Manufacturer's guarantee

THIS DOES NOT AFFECT YOUR STATUTORY RIGHTS.

Your new Montpellier appliance carries a free guarantee which protects you against the cost of repairs during the first 24 months from date of purchase provided that:

Any claim is accompanied by evidence of the model reference, model serial number and proof of purchase, such as a Sales Receipt, showing that the appliance was purchased within the 24 months prior to the date of claim.

What is not covered under the Guarantee

- Any appliance not correctly installed and operated in accordance with the manufacturer's instructions
- Any appliance that is used for anything other than domestic purposes.
Any defect caused by accident, misuse, unauthorised modification or inexperienced repair.
- Cost of Call-out where a fault cannot be found with the appliance.
Cost of Call-out for work covering routine maintenance, such as, but not exclusively, cleaning of filters or defrosting.
- Cost of Call-out for work required to correct the alignment of doors following door reversal procedures carried out by you.
Use of the appliance by anyone other than the Householder.
Use in any commercial environment.
- Consumable items, such as, but not exclusively, fuses in plugs, bulbs and breakable items which require routine replacement.
Repair costs incurred that have not been authorised by Montpellier service and/or carried out by a non-approved Montpellier engineer.
- Montpellier Appliances do not accept claims for consequential loss, rusting, corroding, delivery damage or scratches.

YOUR GUARANTEE IS VALID ONLY IN THE UK & REPUBLIC OF IRELAND

To register your appliance simply complete the card in your appliance pack and return it with a stamp affixed. Alternatively you can register online at www.montpellier-appliances.com/support

SERVICE HELP-LINE

Should your appliance develop a fault, please call the Montpellier customer service helpline on:

01759 487839

D`YUgYfYa Ya VYf]c\ Uj YU` nci f` dfcXi WñXYHU]`g` Uj U]`UV`Yž`]bWi X]b[` h Y` a cXY` bi a VYfž gYf]U` bi a VYfžXUH` cZ di fW Ugy` UbX` nci f` fYHU]`Yf]g` XYHU]`g` VYZ`fYfY[]ghYf]b[`UZU` `H`

Montpellier Domestic Appliances Ltd.
Unit 1, Tewkesbury Retail Park, Northway Lane,
Tewkesbury, Gloucestershire GL20 8JU

www.montpellier-appliances.com



The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.