

# Montpellier

THE PERFECT BALANCE OF FUNCTION AND STYLE

LAUNDRY - DISHWASHING - COOKING - COOLING

## Installation and Operating Instructions



## Built in Single Fan Oven PSFO59FX - Stainless Steel

Please read these instructions carefully before attempting to install or use this appliance.  
We recommend that you keep these instructions in a safe place for future reference.

# Welcome

---

Thank you for choosing this Montpellier Built in Oven.

Our Ovens has been designed to provide you with the best combination of style, reliability and performance to give you years of trouble-free use.

You may be familiar with a similar product, but please take time to read these instructions carefully before installing or using your Built in Oven to ensure you get the most from your purchase.

We recommend that you keep this manual in a safe place for future reference.



**2**  
**YEAR**  
**GUARANTEE**  
— PARTS & LABOUR —  
ACROSS ALL OUR MODELS  
**Montpellier**  
www.montpellier-appliances.com

Your Built in Oven is covered by a comprehensive two year Parts & Labour Guarantee. In the unlikely event that you experience a problem with your Oven, you can rest assured that you are fully protected against the cost of repairs for the first 24 months . Please note that any claim must be accompanied by the model reference number, serial number and proof of purchase.

To activate your guarantee, you will need your product serial number. This can be found on the rear of the machine.

There are two ways to register your Guarantee:

- **Online:** Visit the Support page on our website and complete the online Product Registration form. [www.montpellier-appliances.com](http://www.montpellier-appliances.com)
- **By Post:** Simply detach and fill in the form provided, attach a stamp and send it in the post. Don't forget to include your e-mail address so that we can send confirmation through to you.



**Note:** We are unable to take registrations over the phone.

---

# TABLE OF CONTENTS

Safety instructions.....	4
How to save energy.....	5
Unpacking.....	5
Description of the appliance.....	6
Installation.....	8
Operation.....	10
Prior first use.....	10
Electronic programmer.....	10
Oven.....	15
Cleaning and maintenance.....	17
Operation in case of emergency .....	19
Baking in the oven.....	20
Technical information.....	26

## SAFETY INSTRUCTIONS

The appliance becomes very hot during operation. Take care not to touch the heating elements inside the oven.

**WARNING:** Accessible parts may become hot during use. To avoid burns young children should be kept away.

Mains lead of adjacent appliances may be damaged by hobs or stuck between the oven doors, and produce short circuit, therefore keep them at safe distance from the appliance.

Never put pans weighing over 15Kg on the opened door of the oven.

Do not use the oven in the event of a technical fault, once a technical fault caused, disconnect the power and report the fault to the service centre to be repaired.

Never clean the oven with the high-pressure steam cleaning device, as it may provoke short circuit.

Do not use harsh abrasive cleaners or sharp metal scrapers to clean the door glass as they can scratch the surface, which could then result in the glass shattering.

The rules and provisions contained in this instruction manual should be strictly observed. Do not allow anybody who is not familiar with the contents of this instruction manual to operate the oven. During use the appliance becomes hot, care should be taken to avoid touching heating elements inside the oven.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

**WARNING:** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.

**WARNING:** The appliance and its accessible parts become hot during use.

Care should be taken to avoid touching heating elements.

Children less than 8 years of age shall be kept away unless continuously supervised

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

**WARNING:** Accessible parts may become hot during use.

Young children should be kept away

During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven



## HOW TO SAVE ENERGY



Using energy in a responsible way not only saves money but also helps the environment. So let's save energy! And this is how you can do it:

Make use of residual heat from the oven. If the cooking time is greater than 40 minutes, switch off the oven 10 minutes before the end time. Important when using the timer, set appropriately shorter cooking times according to the dish being prepared.

Make sure the oven door is properly closed.

Heat can leak through spillages on the door seals. Clean up any spillages immediately.

Do not install the oven in the direct vicinity of refrigerators/freezers. Otherwise energy consumption increases unnecessarily.

## UNPACKING



During transportation, protective packaging was used to protect the appliance against any damage.

After unpacking, please dispose of all elements of packaging in a way that will not cause damage to the environment.

All materials used for packaging the appliance are environmentally friendly; they are 100% recyclable and are marked with the appropriate symbol.

Caution!

During unpacking, the packaging materials (polythene bags, polystyrene pieces, etc.) should be kept out of reach of children.

## DISPOSAL OF THE APPLIANCE




Old appliances should not simply be disposed of with normal household waste, but should be delivered to a collection and recycling centre for electric and electronic equipment.

A symbol shown on the product, the instruction manual or the packaging shows that it is suitable for recycling.

Materials used inside the appliance are recyclable and are labeled with information concerning this. By recycling materials or other parts from used devices you are making a significant contribution to the protection of our environment.

Information on appropriate disposal centres for used devices can be provided by your local authority.

## DESCRIPTION OF THE APPLIANCE

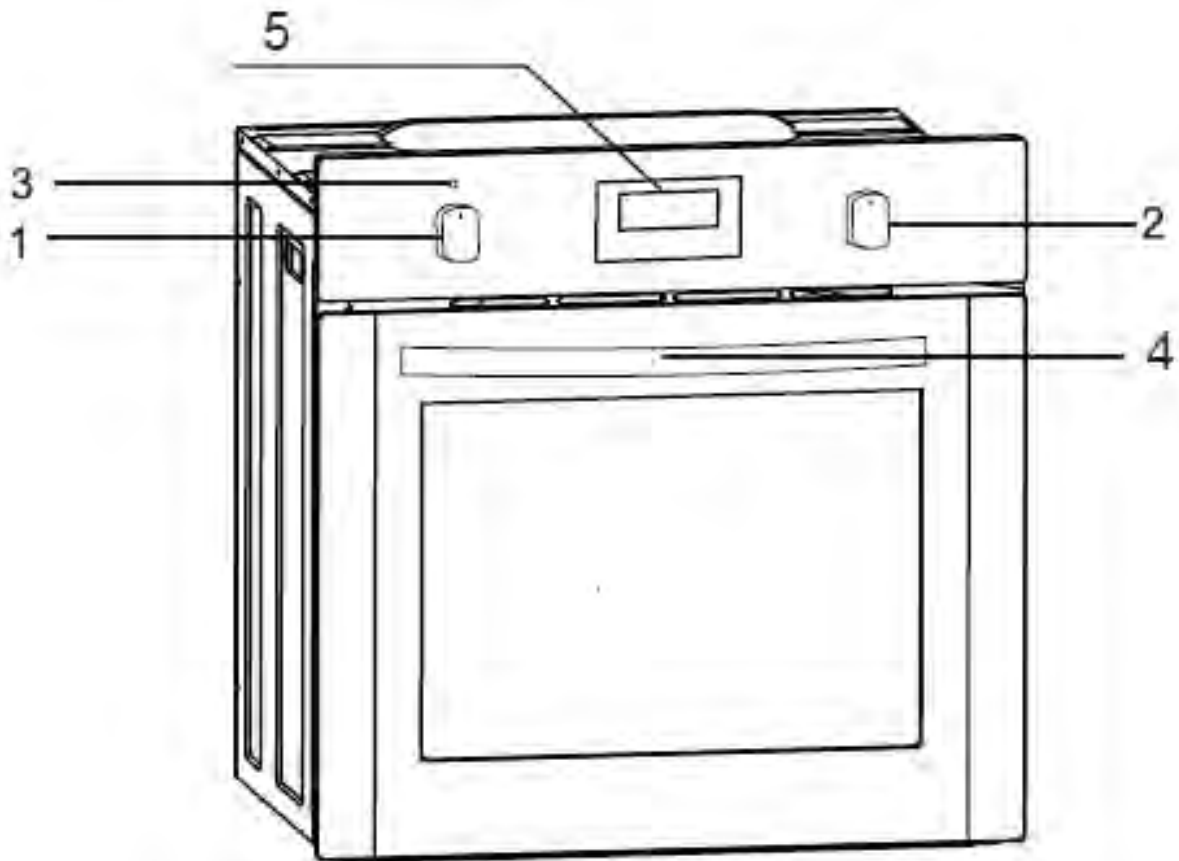

- 1 Temperature control knob
- 2 Oven function selection knob
- 3 Oven temperature signal light
- 4 Oven door handle
- 5 Electronic programmer

# INSTALLATION

## Installing the oven

The kitchen should be dry and have effective ventilation according to the existing technical provisions

Main lead behind the oven must be placed in such manner to avoid touching the back panel of the oven because of the heat it develops during operation


Remove any packaging materials(foils, artificial foam, nails, etc. from the reach of children, because they represent potential danger. Children may swallow small parts,or suffocate with foils.

This is a built-in oven, which means that its back wall and one side wall can be placed next to a high piece of furniture or a wall. Coating or veneer used on fitted furniture must be applied with a heat resistant adhesive(100°C),This prevents surface deformation or detachment of the coating. If you are unsure of your furniture' s heat resistance, you should leave approximately 2cm of free space around the oven. The wall behind the oven should be resistant to high temperatures. During operation, the back & side can warm up to around 50°C above the ambient temperature.


Make an opening with the dimensions given in the diagram for the oven to be fitted

The appliance must be earthed.

Insert the oven completely into the opening without allowing the four screws in the places shown in the diagram to fall out.

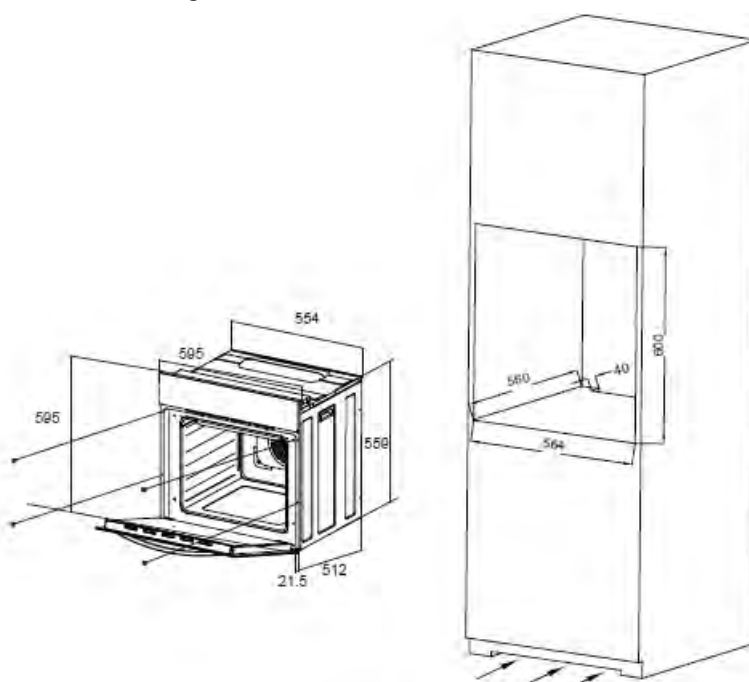

## INSTALLATION

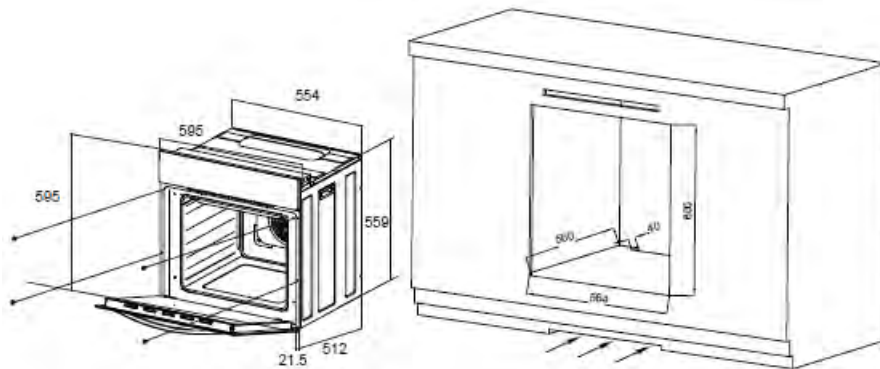

### Electrical connection


#### Warning!

All electrical work must be carried out by a suitably qualified and authorized electrician. No alterations or willful changes in the electricity supply should be carried out.

- Before attempting the connection, check whether the voltage indicated on the rating plate corresponds to the actual mains voltage.
- Mains lead should be minimum 1.5m long.
- Earthing wire should be installed in such manner to be the last one pulled out in case the safety relief device of the mains lead should fail.
- Mains lead behind the oven must be placed in such manner to avoid touching the back panel of the oven because of the heat it develops during operation.
- The cable of correct size rating must be used cable type H05VV-F 3×1.5 mm<sup>2</sup>. the grounding wire shall be longer than the other wires.
- The means for disconnection from the supply mains having a contact separation in all poles that provides full disconnection under over voltage category iii shall be provided in the fixed wiring in accordance with the wiring rules.

#### Connection (by authorised electrician)

- Using the screwdriver open the connector cover at the rear of the appliance. Release two locks located at either side of the connector bottom.
- Mains lead must be led through the relief safety device, protecting the mains lead cable from disconnection.
- Tighten the relief device securely and close the connector cover.

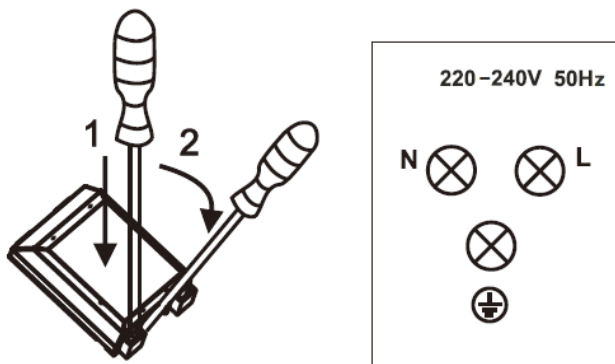

## Colour code

L=exterior live wires, usually coloured black, brown. N=neutral

The colour is usually blue.

Beware of the correct N-connection!

 E=earthing wire, The colour is green/yellow.

## OPERATION


### ▷ Prior first use

- Remove packaging, clean the interior of the oven.
- Take out and wash the oven fittings with warm water and a little washing-up liquid.
- Switch on the ventilation in the room or open a window.
- Heat the oven (to a temperature of 250 °C, for approx. 30 min) remove any stains and wash carefully.

Caution!

When heating the oven for the first time, it is normal phenomenon to give off smoke and peculiar smell. This will disappear about 30 min later.

### ▷ Electronic programmer

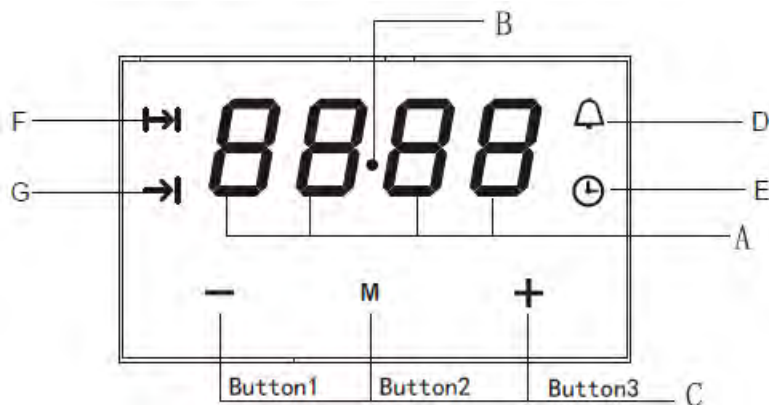


A-Display field      B- Seconds Icon  
C- Buttons          D- Timer  
E- Current time      F- Cooking time  
G- End of cooking time


### M - Function

**-** - To decrease the numbers on the digital display

**+** - To increase the numbers on the digital display

## Setting the time

1. At power on, displayed "12.00", and  flashes.

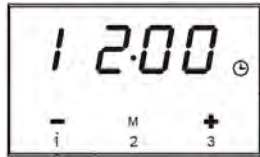


2. The current time can be set with button 1 and 3, 5 seconds after the time has been set, the new data will be saved.

## Timer


The timer can be activated at any time and any function, The timer can be set from 1 minute to 23 hours and 59 minutes;

To set the timer you should:


1. Press button 2, flashing 'Δ'. Enter the timer setting.

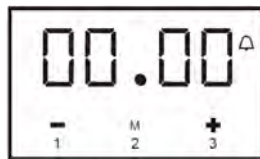

2. Set the timer using buttons 1 and 3.

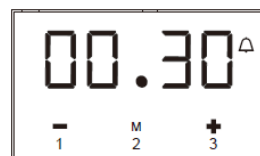


3. 5 seconds after the time is set, or directly press the button 2, the signal function 'Δ' is on. Your setting is saved.

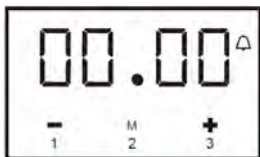

4. When the set time is up the alarm signal will be activated and the signal function start flashing again.



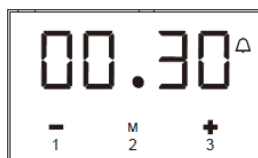




5. Press any button, the signal function 'Δ' and alarm signal will go off, or the alarm signal will be turned off automatically after 2 minutes.

### Caution!

Besides timer alarm, any other alarms can be turned off by pressing any button. If the alarm signal is not turned off manually, it will be turned off automatically after 2 minutes.

### Semi-automatic operation

If the oven is to be switched off at a given time, or after defined period, you should:

1. Set the oven function knob and the temperature regulator knob to the setting at which you want the oven to operate.
2. Press the function button, the oven will begin to work and the function signal  flashing.
3. Press button 1 or 3 to adjust the cooking time, within a range from 1 minutes to 10 hours.
4. Or press buttons " M " twice, then the display will show flashing . Set the end time by buttons 1 and 3.
5. The set time is introduced to the memory after 5 seconds.
6. When the set time has passed, the oven is switched off automatically, the alarm is activated.
7. Press any button, the alarm signal and the icon " " will go off. Or the alarm signal will be turned off automatically after 2 minutes.

### Caution!

#### ● The cooking time and end of cooking time range

Cooking time range:  $0 < t \leq 10$  hours

End of cooking time range: current time  $<$  end of cooking time  $\leq$  current time + 10 hours

End of cooking time = current time + cooking time


- When using the semi-automatic operation, set either the cooking time or the end of cooking time.

●If you set the cooking time to 0 or set the cooking time be the current time, the auto function will be off.

●After the auto function be off, the cooking time to 0, end of cooking time and current time remains the same.

**For example:**


The current time is 2:00, want to oven work of 3 hours, end of cooking time is set to be 5:00 (2:00+3:00=5:00).

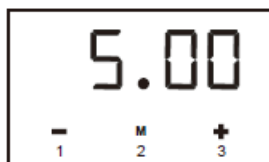

There are two methods to achieve this setting:

First method:


1. Set the cooking time using buttons 1 and 3.

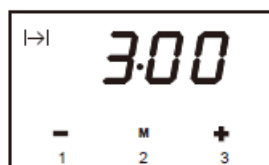

2. End of cooking time automatically change to 5:00.

Second method:


1. Set the end of cooking time using buttons 1 and 3.

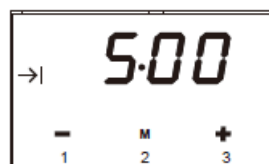





 
2. Cooking time automatically change to 3:00. 5seconds after the setting, the auto function is on . 3hours later, the current time shows "5:00" the alarm signal is activated.

### Automatic operation

If the oven is to be switched on for a specified period of time and switched off at a fixed hour then you should set the cooking time and the end of cooking time:

1. Set the oven function knob and the temperature regulator knob to the setting at which you want the oven to operate.
2. Press button 2, the oven will begin to work and the function  flashing signal.


3. Press button 1 and 3 to adjust the cook time, within a range from 1 minute to 10 hours.
4. And press button 2, then the display will show flashing . Set the cooking time using buttons 1 and 3,
5. The set time is introduced to the memory after 5 seconds, the function signals  and  always on.
6. When the set time has passed, the oven is switched off automatically, the alarm signal is activated, and the signal function  will go off.
7. Press any button, the alarm signal and  the icon will all go off. Or the alarm signal will be turned off automatically after 2 minutes.

**Caution!**


**Work time = end of cooking time – cooking time**

**For example:**


If the current time is 2:00; cooking time set to be 3 hours; end of cooking time set to be 10:00, the work time will be 7:00 (7:00=10:00-3:00).

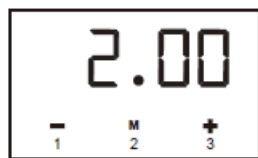


1. Set the cooking time to be "3:00" with button 1 and 3.

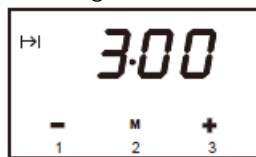


2. Set the end of cooking time to be 10:00 with the button 3.

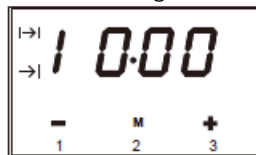


3. 5 seconds after setting, the auto function is on.

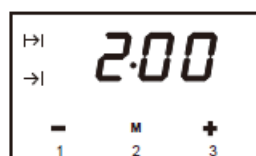

4. When it up to 7:00, the oven will begin to work

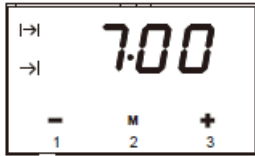

5. When it up to 10:00, the alarm signal is activated, the oven is switched off automatically.

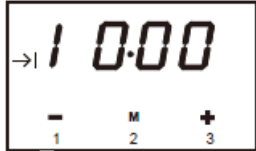

### Caution!

- End of cooking time > current time  
+ cooking time <= 10hours
- At least more than one minute cooking time, cooking time and end of cooking time must be set.
- If the cooking time set to be 0 or the end of cooking time set to be the current time, the auto function will be off.
- After the auto function be off, the cooking time to 0, end of cooking time and current time remains the same.

### Oven.

Oven is controlled by the function knob and the temperature control knob.

### Caution!

When selecting any heating function the oven will be switched on only after the temperature has been set by the temperature control knob.

### Possible settings of the oven function knob



#### Bottom and top heaters on

Setting the knob to this position allows the oven to be heated conventionally.



#### Bottom heater

At this oven function knob position, the oven activates the bottom heater.



#### Full Grill

This function allows a higher temperature at the top of the cooking area, which causes more intense browning of the dish and permits larger portions to be grilled.

### Warning!

When using function Grill it is required that the oven door is closed.

### Warning!

When the grill is in use accessible parts can become hot. It is best to keep children away from the

Oven.



#### **Fan, bottom and top heaters on**

At this knob position the oven executes the cake function. Conventional oven with a fan.

#### **Caution!**

When the functions with fan have been selected but the temperature knob is set to zero only the fan will be on. With this function you can cool the dish or the oven chamber.



#### **Circular Heater Fan**

At this function ,allows the oven to be heating up in a forced way with the thermofan, which is in the central part of the oven chamber.

Heating the oven up in this way permits even heat circulation around the dish in the oven.

The advantage of this heating method is:

Reduction of overheating-up time and of the initial heating stage.

Possibility to bake at two cooking levels simultaneously.

Reduction in the amount of fats and juices coming out of meat dishes, which results in an improvement in taste.



#### **Fan(Defrost)**

At this function , the fan only works. You can cool the dish or the oven chamber or defrost food.



#### **Fan,grill element**

When the knob is turned to this position, the oven activates the grill and fan function. In practice, this function allows the grilling process to be speeding up and an improvement in the taste of the dish. You should only use the grill with the oven door shut.

#### **Caution!**

When the functions with fan have been selected but the temperature knob is set to zero only the fan will be on.

With this function you can cool the dish or the oven chamber.


## **CLEANING AND MAINTENANCE**

### **Oven guide levels**

Baking pans and accessories (oven grid, baking tray, etc) may be inserted into the oven in 5 guiding levels.

Appropriate levels are indicated in the tables that follow.

Always count levels from the bottom upwards!

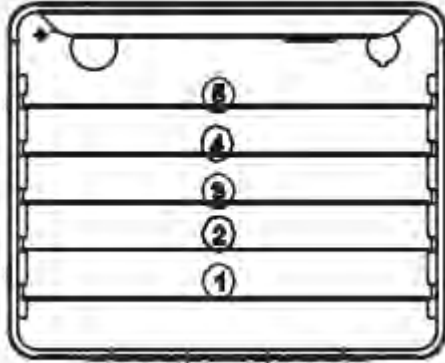

By ensuring proper cleaning and maintenance of your oven you can have a significant influence on the continuing fault-free operation of your appliance.

Before you start cleaning, the oven must be switched off and you should ensure that all knobs are set to the "0" position. Do not start cleaning until the oven has completely cooled.

### Oven

- The oven should be cleaned after each use.
- Cool the oven completely before cleaning.
- Never clean the appliance with pressurized hot steam cleaner.
- The oven chamber should only be washed with warm water and a small amount of washing-up liquid.

#### ● Steam cleaning

-pour 250ml of water (1 cup) into a bowl placed in the oven on the first level from the bottom.

-Close the oven door.

-Set the temperature knob to 100°C, and the function knob to the bottom heater position.

-Heat the oven chamber for approximately 30 minutes.

-Open the oven door, wipe the chamber inside with a cloth or sponge and wash using warm water with washing-up liquid.

- After cleaning the oven chamber wipe it dry.

### Caution


Do not use cleaning products containing abrasive materials for the cleaning and maintenance of the glass front panel.



## Replacement of the oven light Bulb

Before any maintenance is started involving electrical parts, the appliance must be disconnected from the power supply. If the oven has been in use, let the oven cavity and the heating elements cool down before attempting any maintenance.

- Unscrew the protective cover. We recommend that you wash and dry the glass cover at this point.
- Carefully remove the old bulb and insert the new bulb suitable for high temperatures (300°C) having the following specifications: 220-240V, 50Hz, 25W, G9 fitting.
- Refit the protective cover.

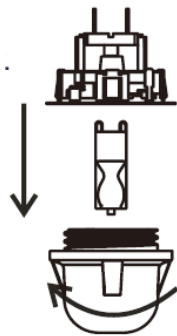

### IMPORTANT

Never use screwdrivers or other utensils to remove the light cover. This could damage the enamel of the oven or the lampholder. Remove only by hand

### IMPORTANT

Never replace the bulb with bare hands as contamination from your fingers can cause premature failure. Always use a clean cloth or gloves.

### Please note:

The bulb replacement is not covered by your guarantee


## Door removal

In order to obtain easier access to the oven chamber for cleaning, it is possible to remove the door.


To do this, tilt the safety catch part of the hinge upwards. Close the door lightly, lift and pull it out towards you.

In order to fit the door back on to the cooker, do the reverse. When fitting, ensure that the notch of the hinge is correctly placed on the protrusion of the hinge holder.

After the door is fitted to the oven, the safety catch should be carefully lowered down again. If new the safety catch is not set it may cause damage to the oven when closing the door.

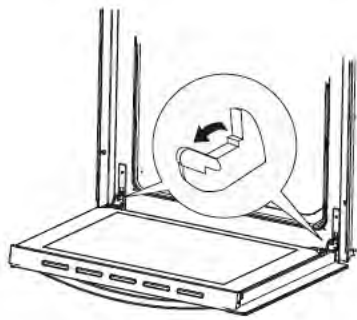

Tilting the hinge safety catches

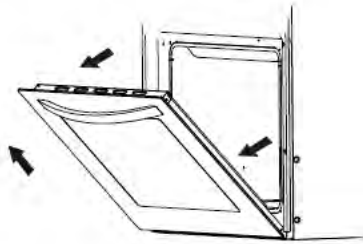


Door removal

### Operation in case of emergency

#### Removal of the internal glass panel

Unscrew and unfasten the plastic latch that is in the corner at the top of the door. Next take out the glass from the second blocking mechanism and remove. After cleaning, insert and block the glass panel, and screw in the blocking mechanism.

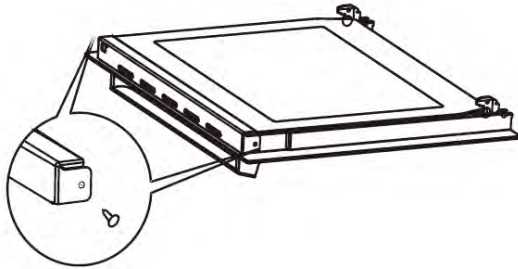

### OPERATION IN CASE OF EMERGENCY

In the event of an emergency, you should:

- Switch off all working units of the oven
- Call the service centre
- Some minor faults can be fixed by referring to the instructions given in the table below. Before calling the customer support centre or the service centre check the following points that are presented in the table.

PROBLEM	REASON	ACTON
1.The appliance does not work	Break in power supply	Check the household fuse box;if there is a blown fuse replace it with a new one
	Choose wrong function	Check if function knob.temperature knob is set to the correct position.
2.The programmer display is flashing "0.00"	The appliance was disconnected from the mains or there was a temporary power cut.	Set the current time(see use of the programmer)
3.The oven lighting does not work	The bulb is loose or damaged.	Tighten up or replace the blown bulb(see cleaning and maintenance)

## BAKING IN THE OVEN

### Baking pastry

Most appropriate position for baking is the application of both upper and lower heater,or the hot air.

#### Warning!

- The baking parameters given in Tables are approximate and can be corrected based on your own experience and cooking preferences;
- In case you may not find any particular type of cake in the tables, use the information available for the next most similar type of cake.

### Baking with upper and lower elements

- Use only a single guide level.
- This baking position is especially suitable for baking dry pastry, bread and teacakes. Use dark baking pans. Light pans reflect heat and pastry is not adequately browned.
- Always place baking pans on the grid rack. Remove the grid only if baking in the flat biscuit tray, supplied with the appliance.
- Preheating shortens the baking time. Do not put the cake in the oven until proper temperature is obtained.

### Baking tips

#### Is cake baked?

Pierce the cake with a wooden skewer at the thickest part, if the dough does not stick to it, the cake is baked. You may switch off the oven and use the remaining heat.

#### Cake has fallen

Check the recipe. Use less liquid next time. Follow the mixing times, especially when using electric kitchen mixers.

#### Cake is too light on the bottom



Use dark baking pan next time, or place the pan one level lower, or switch on the lower heater a while before the completion.

Cheese cake is undercooked

Next time reduce the baking temperature and extend the baking time. **Warnings regarding the baking tables**

- The tables indicate the temperature range. Always select lower temperature first. You may always increase the temperature in case pastry needs more baking.
- Baking times are indicative only.
- The asterisk indicates that the oven requires preheating.

## BAKING IN THE OVEN

Type of pastry	Guide level(from down upwards)	Temp ( °C ) 	Guide level(from down upwards)	Temp ( °C ) 	Baking time (in min)
Sweet pastry					
Sponge cake/ marble cake	2	170-180	2	150-170	60-80
Victoria sponge	2	160-180	2	150-170	65-80
Base for a layer cake	2-3	170-180	2-3	150-170	20-30
Sponge layer cake	2	170-180			30-40
Fruit cake(crispy base)			2-3	160-180	60-70
Cheesecake(shortcrust)			2	140-150	60-90
Teacake	2	160-180	2	150-170	40-60
Bread(e.g.wholegrain bread)	2	210-220	2	150-170	50-60
Fruit cake(crispy base)	3	170-180	2	160-200	35-60
Fruit cake(with yeast)			2	160-170	30-50
Crumble cake	3	160-170		150-170	30-40
Sponge roll	2	180-200			10-15
Pizza(thin base)	3	220-240			10-15
Pizza(thick base)	2	180-210			30-50
Buns	3	160-170	2	150-160	10-30
Puffpastry	3	180-190	2	170-190	18-25
Meringues	3	90-110		80-90	
Choux buns			2	170-190	35-45

### Roasting:

Best results are obtained with the engagement of both upper and lower elements. Best heating mode for each type of roasting pan is indicated by bold print in the Roasting Tables.

### Tips regarding roasting pans:

- For best results, use light enamel pans, temperature resistant glass pans, clay dishes or cast iron dishes.



- As stainless steel dishes reflect the heat, they are not recommended.
- If you cover your roast or wrap it in foil, it will preserve its juices and the oven will remain clean.
- The roast will be cooked quicker if it is left uncovered. Large roasts can be placed directly on the grid with the oven tray below for catching the juices and melted fat.

#### Attention when roasting!

Roasting tables indicate suggested temperatures, guide level and roasting times. Roasting time largely depends upon the type of meat, its size and quality. So you may expect some variations

- Roasting of large chunks of meat may produce excessive steaming and condensation on the oven door. This is quite normal, and does not affect the operation of the oven. However, after the completion of roasting wipe the oven door and the glass thoroughly.
- Add as much liquid as necessary to prevent burning of juice, dripping from meat. Roast must be checked regularly and liquid added if necessary.
- At approximately the middle of the indicated time turn the roast round, especially if you use the deep roast dish.
- When roasting on the grill grid, place the grid in the deep roasting pan and insert both into the sliding guide. The bottom pan will intercept dripping fat.
- Never leave roast to cool in the oven, as it might produce condensation and corrosion of the oven.

#### Roasting Table

Type of meat	Guide level(from bottom up)	Temp ( °C ) 	Roasting time (in min)	Temp ( °C ) 	Roasting time(in min)
Beef					Per 1 cm
Roast beef or file rare			3	250	12-15
Oven warmed up juicy("medium")			3	250	15-25
Oven warmed up "well done"			3	210-230	25-30
Oven warmed up Roast joint	2	160-180	2	200-220	120-140
Pork					
Roast joint	2	160-180	2	200-210	90-140
Ham	2	160-180	2	200-210	60-90
Fillet			3	210-230	25-30
VEAL	2	160-170	2	200-210	90-120
LAMB	2	160-180	2	200-220	100-120
VENISON	2	175-180	2	200-220	100-120
POULTRY					
Chicken	2	170-180	2	220-250	50-80
Goose(approx.2kg)	2	160-180	2	190-200	150-180

Fish	2	175-180	2	210-220	50-80
------	---	---------	---	---------	-------

## Grilling


- Take extra precautions when grilling. Intensive heat from infrared element makes the oven and the accessories extremely hot. Use protective gloves and barbecue accessories!
- Perforated roast may produce spurting of hot grease(sausages).Use long grill tongs to prevent skin burns and protect your eyes.
- Supervise the grill at all time. Excessive heat may quickly burn your food and provoke fire!
- Do not let the children in the vicinity of the grill.

Grill heater is especially suitable for the preparation of low-fat sausages, meat and fish fillets and steaks, and for browning and crisping the roast skin.

## Tips for grilling

- Grilling should be carried out with the oven door closed.
- Grilling tables indicate the recommended temperature, guide levels and grilling times,which may vary according to the weight and quality of meat
- Grill element should be pre-heated for 3 minutes.
- Oil the grill grid before placing food on it, to avoid food sticking to the grid.
- Place the meat upon the grid, then place the grid upon the grease interception pan.Insert both trays into the oven guides.
- Turn the meat round after half of the grilling time has expired. Thinner slices will require only one turn, for larger chunks you might need to repeat the procedure. Always use barbecue tongs to avoid losing excessive juice from meat.
- Dark beef meat is grilled quicker than lighter pork or veal.
- Clean the grill, the oven and the accessories each time after use.

## Grill table

Type of meat for grill	Weight (in grams)	Guide level (from bottom up)	Temp (°C) 	Grill time (in min.)
<b>Meat and sausages</b>				
2 beefsteaks, rare	400	5	240	14-16
2beefsteaks, medium	400	5	240	16-20
2 beefsteaks, well done	400	5	240	20-23
2 pork scrag fillets	350	5	240	19-23
2 pork chops	400	5	240	20-23
2 veal staeks	700	5	240	19-22
4 lamb cutlets	700	5	240	15-18
4 grill sausages	400	5	240	9-14
2 slices of meat	400	5	240	9-13



cheese				
1 chicken, halved	1400	3	240-250	28-33(1.side) 23-28(2.side.)
<b>Fish</b>				
Salmon fillets	400	4	240	19-22
Fishin aluminium foil	500	4	230	10-13
<b>Toast</b>				
4 slices of white bread	200	5	240	1,5-3
2 slices of whole meal	200	5	240	2-3
Toast sandwich	600	5	240	4-7
<b>Meat/poultry</b>				
Chicken	1000	3	180-200	60-70
Pork roast	1500	3	160-180	90-120
Pork scrag	1500	3	160-180	100-180
Pork knuckle	1000	3	160-180	120-160
Roast beef beef fillet	1500	3	190-200	40-80

#### TECHNICAL INFORMATION

<b>Model</b>	<b>PSFO59FX</b>	
<b>Voltage rating</b>	<b>220-240V 50Hz</b>	
<b>Total power</b>	<b>2000W</b>	
<b>Top element</b>	<b>850W</b>	
<b>Grill element</b>	<b>1100W</b>	
<b>Bottom element</b>	<b>1150W</b>	
<b>Circular element</b>	<b>1600W</b>	
<b>Fan</b>	●	

# Here For You

---

## After-sales assistance

If you continue to experience problems with your Built in Oven, please call the Montpellier customer service helpline on: **01759 487839**.

Please have all your product details available, including the model number, serial number, date of purchase, and your retailer's details before registering a fault.

The service call cannot progress without this information.

## Your 2 year Manufacturer's guarantee

THIS DOES NOT AFFECT YOUR STATUTORY RIGHTS.

Your new Montpellier appliance carries a free guarantee which protects you against the cost of repairs during the first 24 months from date of purchase provided that:

Any claim is accompanied by evidence of the model reference, model serial number and proof of purchase, such as a Sales Receipt, showing that the appliance was purchased within the 24 months prior to the date of claim.

## What is not covered under the Guarantee

- Any appliance not correctly installed and operated in accordance with the manufacturer's instructions.
- Any appliance that is used for anything other than domestic purposes.
- Any defect caused by accident, misuse, unauthorised modification or inexpert repair.
- Cost of Call-out where a fault cannot be found with the appliance.
- Cost of Call-out for work covering routine maintenance, such as, but not exclusively, cleaning of filters or defrosting.
- Cost of Call-out for work required to correct the alignment of doors following door reversal procedures carried out by you.
- Use of the appliance by anyone other than the Householder.
- Use in any commercial environment.
- Consumable items, such as, but not exclusively, fuses in plugs, bulbs and breakable items which require routine replacement.
- Repair costs incurred that have not been authorised by Montpellier and/or carried out by a non-approved Montpellier engineer.

## YOUR GUARANTEE IS VALID ONLY IN THE UK & ROI .

To register your appliance simply complete the card in your appliance pack and return it with a stamp affixed or alternatively you can register online at [www.montpellier-appliances.com/support](http://www.montpellier-appliances.com/support)

## SERVICE HELP-LINE

Should your appliance develop a fault, please call the Montpellier customer service helpline on: **01759 487839**.

Please remember to have all your product details available, including the model number, serial number, date of purchase and your retailer's details before registering a fault.

Your service call cannot progress without this information.

---

**Montpellier Domestic Appliances Ltd.**

Unit 1, Tewkesbury Retail Park, Northway Lane,  
Tewkesbury, Gloucestershire GL20 8JU

[www.montpellier-appliances.com](http://www.montpellier-appliances.com)



The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.