

# Montpellier

THE PERFECT BALANCE OF FUNCTION AND STYLE

LAUNDRY - DISHWASHING - COOKING - COOLING

## Installation and Operating Instructions



### **Freestanding 21 litre Combi Microwave**

**MCM21WSC/SSC**

White/Silver

Please read these instructions carefully before attempting to install or use this appliance.  
We recommend that you keep these instructions in a safe place for future reference.

# Welcome

---

Thank you for choosing this Montpellier Freestanding Combi Microwave.

Our Microwaves have been designed to provide you with the best combination of style, reliability and performance to give you years of trouble-free use.

You may be familiar with a similar product, but please take time to read these instructions carefully before installing or using your Microwave to ensure you get the most from your purchase.

We recommend that you keep this manual in a safe place for future reference.

Your Microwave is covered by a comprehensive two year Parts & Labour Guarantee. In the unlikely event that you experience a problem with your Microwave, you can rest assured that you are fully protected against the cost of repairs for the first 24 months. Please note that any claim must be accompanied by the model reference number, serial number and proof of purchase.

To activate your guarantee, you will need your product serial number. This can be found on the rear of the machine.

There are two ways to register your Guarantee:

- **Online:** Visit the Support page on our website and complete the online Product Registration form. [www.montpellier-appliances.com](http://www.montpellier-appliances.com)
- **By Post:** Simply detach and fill in the form provided, attach a stamp and send it in the post. Don't forget to include your e-mail address so that we can send confirmation through to you.



**Note:** We are unable to take registrations over the phone.

---

A red rectangular graphic with white text. At the top is a large '2', followed by 'YEAR' in a bold sans-serif font, then 'GUARANTEE' in a larger bold sans-serif font. Below this is a horizontal line with 'PARTS & LABOUR' in the center. Underneath is 'ACROSS ALL OUR MODELS' in a smaller font. At the bottom is the 'Montpellier' logo in a stylized font, with the website 'www.montpellier-appliances.com' below it.

**2**  
**YEAR**  
**GUARANTEE**  
— PARTS & LABOUR —  
ACROSS ALL OUR MODELS  
**Montpellier**  
www.montpellier-appliances.com

# PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

## ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

## Specifications

Model:	MCM21SSC / MCM21WSC
Rated Voltage:	240V~/50Hz
Rated Input Power(Microwave):	1300W
Rated Output Power(Microwave):	800W
Power of hot air convection(Grill):	1200W
Oven Capacity:	21L
Turntable Diameter:	Ø270mm
External Dimensions:	484x336x280mm

The appliances are not intended to be operated by means of an external timer or separate remote-control system.  
This appliance is intended to be used in domestic household and similar applications only !!:

# IMPORTANT SAFETY INSTRUCTIONS

## WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

1. **Warning:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.
2. **Warning:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
3. **Warning:** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understand the hazards of improper use.
4. **Warning:** When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated. (only for grill series)
5. Only use utensils suitable for use in microwave ovens.
6. The oven should be cleaned regularly and any food deposits should be removed.
7. Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY".
8. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
9. If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
10. Do not overcook food.
11. Do not use the oven cavity for storage purposes. Do not store items, such as bread, cookies, etc. inside the oven.
12. Remove wire twist-ties and metal handles from paper or plastic containers/bags before placing them in the oven.
13. Install or locate this oven only in accordance with the installation instructions provided.
14. Eggs in the shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
15. Use this appliance only for its intended uses as described in manual. Do not use corrosive chemicals or vapors in this appliance. This oven is especially designed to heat. It is not designed for industrial or laboratory use.
16. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
17. Do not store or use this appliance outdoors.



18. Do not use this oven near water, in a wet basement or near a swimming pool.
19. The temperature of accessible surfaces may be high when the appliance is operating. Keep cord away from heated surface, and do not cover any events on the oven.
20. Do not let cord hang over edge of table or counter.
21. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
22. The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
23. Microwave heating of beverages can result in delayed eruptive boiling, therefore take care when handling the container.
24. The appliance is not intended for use by persons (including children) with reduced physical , sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. (for market beyond European market)
25. Children should be supervised to ensure that they do not play with the appliance. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. (for European market.)
26. The microwave oven shall not be placed in a cabinet.
27. The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire. The microwave oven is intended to be used freestanding.  
The appliance must be placed against the wall.  
Don't immerse the appliance in water or other liquid when cleaning.  
The appliance shall not be cleaned with a steam cleaner.

# To Reduce the Risk of Injury to Persons

## Grounding Installation

### DANGER

Electric Shock Hazard Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

### WARNING

Electric Shock Hazard Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

### CLEANING

Be sure to disconnect the oven from the power supply.


1. Clean the inside of the oven after using with a slightly damp cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. If a long cord set or extension cord is used:
  - 1)The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
  - 2)The extension cord must be a grounding-type 3-wire cord.
  - 3)The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

Plug



# UTENSILS

## CAUTION

### Personal Injury Hazard

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven." There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

### Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.

## Materials you can use in microwave oven

### Utensils Remarks

Aluminum foil	Shielding only. Small smooth pieces can be used to cover thin parts of meat or poultry to prevent overcooking. Arcing can occur if foil is too close to oven walls. The foil should be at least 1 inch (2.5cm) away from oven walls.
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

# Materials to be avoided in microwave oven


Utensils	Remarks
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.

## SETTING UP YOUR OVEN

### Names of Oven Parts and Accessories


Remove the oven and all materials from the carton and oven cavity.  
Your oven comes with the following accessories:

- Glass tray 1
- Turntable ring assembly 1
- Instruction Manual 1

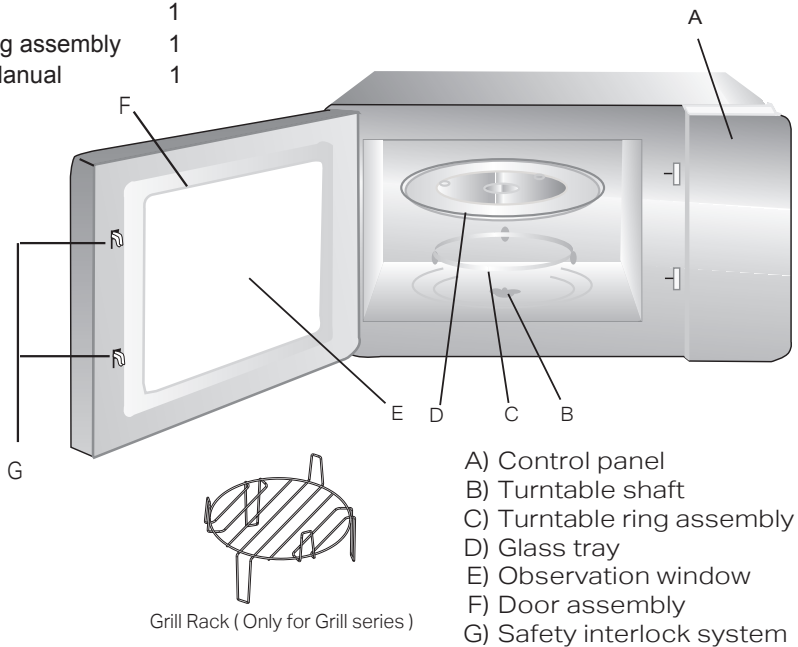

Shut off oven power if the door is opened during operation.

## Turntable Installation

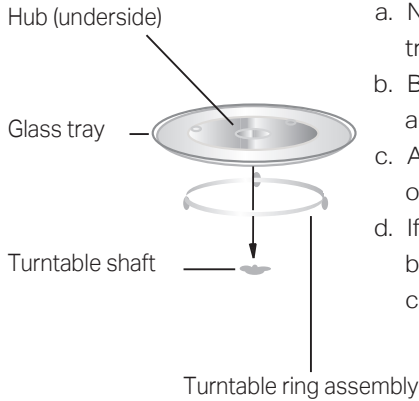

- Never place the glass tray upside down. The glass tray should never be restricted.
- Both glass tray and turntable ring assembly must always be used during cooking.
- All food and containers of food are always placed on the glass tray for cooking.
- If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.


## Countertop Installation

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

**Cabinet:** Remove any protective film found on the microwave oven cabinet surface. **Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.**

## Installation

1. Select a level surface that provide enough open space for the intake and/or outlet vents.

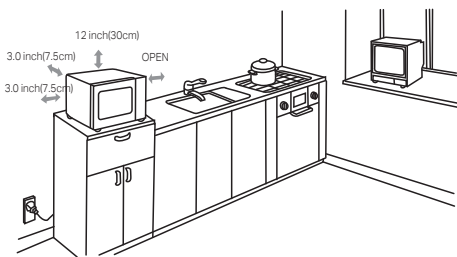

A minimum clearance of 3.0 inches (7.5cm) is required between the oven and any adjacent walls. One side must be open.

- (1) Leave a minimum clearance of 12 inches (30cm) above the oven.
- (2) Do not remove the legs from the bottom of the oven.

- (3) Blocking the intake and/or outlet openings can damage the oven.
  - (4) Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.
2. Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.

**WARNING:** Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

The accessible surface may be hot during operation.




# Operation Instructions

## 1. Clock Setting

When the microwave oven is electrified, the LED will display "0:00", buzzer will ring once.

1) Press " **Timer/ Clock** " twice, the hour figures will flash.

---

2) Turn "  " to adjust the hour figures, the input time should be within 0--23.

---

3) Press " **Timer/ Clock** ", the minute figures will flash.


---

4) Turn "  " to adjust the minute figures, the input time should be within 0--59.

---

5) Press " **Timer/ Clock** " to finish clock setting. ":" will flash, and the time will light.

Note: 1) If the clock is not set, it would not function when powered.

2) During the process of clock setting, if you press " **STOP/Cancel**  ", the oven will go back to the previous status automatically.

## 2. Timer

1) Press " **Timer/Clock** " once, and the LED will display " 0:00 ".

---

2) Set timer. (Consult the instruction of clock setting.)

---


3) Press " **START/+30sec.** " to start the timer.

---

4) The buzzer will ring 5 times when the time count down.

## 3. Microwave Cooking

Press " **Microwave** " the LED will display "P100". Press **Microwave** for times to choose the power you want, and "P100", "P80" "P50", "P30" or "P10" will display for each.


Then turn added turn "  " to set cooking time from 0:05 to 95:00. Press " **START/+30sec.** " again to start cooking.

1) Press " **Microwave** " once, the screen display "P100".

---

2) Press " **Microwave** " once again to choose 80% microwave power.

---

3) Turn "  " to adjust the cooking time until the oven displays "20:00".

---

4) Press " **START/+30sec.** " to start cooking .

**Note:** the step quantities for the adjustment time of the coding switch are as follow:

0---1 min	: 5 seconds	1---5 min	: 10 seconds
5---10 min	: 30 seconds	10---30 min	: 1 minute
30---95 min	: 5 minutes		

## Preheating Cooking

- 1) Press " **Convection/Grill/Combi.** " twice to choose "140", "160", "180", "G", "C1", "C2"


---

- 2) Then press " **START/+30sec.** " to start preheating.

---

- 3) When heated to the 160 degree, the buzzer will beep 2 times.


---

- 4) Open the door, put in the food, then turn "  " to set cooking time from 0:05 to 95:00.  
Stop working automatically after 5 minutes if no food is put in.  
Finish when you hear four times " bi ".

---


- 5) Press " **START/+30sec.** " to start cooking .

## No Preheating Cooking

- 1) Turn "  " to set cooking time from 0:05 to 95:00 .
- 

- 2) Press " **START/+30sec.** " to start cooking .

## 6. Combi Cooking

Press " **Convection/Grill/Combi.** " five times, the LED will display "C1" , and press " **Convection/Grill/Combi.** " for times to choose the power you want, and "C1" or "C2" will display for each added press. Then turn "  " to set cooking time from 0:05 to 95:00.


Press " **START/+30sec.** " again to start cooking.

- 1) Press " **Convection/Grill/Combi.** " once, the screen display " 140 " .

---

- 2) Press " **Convection/Grill/Combi.** " five time to choose combi. 1 mode, and the screen displays "C1".

---

- 3) Turn "  " to adjust the cooking time until the oven displays "10:00".

---


- 4) Press " **START/+30sec.** " to start cooking .

## "Convection/Grill/Combi." Pad instructions


Combine the cooking parts.	C1 Microwave plus hot wind	C2 Microwave plus hot wind
Microwave heating time	( 50% )	( 30% )
Hot air heating time.	( 50% )	( 70% )

### 7. Quick Start


- 1) In waiting state, Press " **START/+30sec.** " to start cooking with 100% power, each added press will increase 30 seconds cooking time up to 95 minutes.
- 2) In microwave, grill, combi. cooking or time defrost state, each press of " **START/+30sec.** " can increase 30 seconds of cooking time.

- 3) In waiting state, turn "  " anti-clockwise to set cooking time with 100% microwave power, then press " **START/+30sec.** " to start cooking.


### 8. Defrost by Weight

- 1) Press " **Defrost** " once, and the oven will display "dEF1".
- 2) Turn "  " to select the weight of food from 100 to 2000 g.
- 3) Press " **START/+30sec.** " to start defrosting.

### 9. Defrost By Time

- 1) Press " **Defrost** " twice, and the oven will display "dEF2".
- 2) Turn "  " to select the defrost time.
- 3) Press " **START/+30sec.** " to start defrosting.

### 10. Menu


- 1) Press " **Menu** " to choose the menu, and "A-1" to "A-8" will display, which means cake, pizza, soup, chicken, pasta, vegetable, potato and reheat.
- 2) Turn "  " to choose the default weight as the menu chart.
- 3) Press " **START/+30sec.** " to start cooking.



Example: If you want to use "Menu" to cook vegetable for 400g.

1) Press " **Menu** " six times till "A-6" display.

---

2) Turn "  " to select the weight of vegetable till "400" display.

---

3) Press " **START/+30sec.** " to start cooking.

The menu chart:

Menu	Weight	Display
A-1 Cake	500 g	500 g
A-2 Pizza	200 g	200 g
	400 g	400 g
A-3 Soup	200 g	200 g
	400 g	400 g
	600 g	600 g
A-4 Chicken	1000 g	1000 g
A-5 Pasta	50+450 g	50 g
	100+800 g	100 g
	150+1200 g	150 g
A-6 Vegetable	200 g	200 g
	400 g	400 g
	600 g	600 g
A-7 Potato	1	250 g
	2	500 g
	3	750 g
A-8 Reheat	200 g	200 g
	400 g	400 g
	600 g	600 g

## 11. Inquiring Function

- 1) In cooking state, press " **Timer/Clock** ", the current time will be displayed 3 seconds.
- 2) In states of microwave, press " **Microwave** " the current power will be displayed 3 seconds.
- 3) In states of grill and combination cooking, press " **Convection/Grill/Combi** " the current menu will be displayed 3 seconds.

## 12. Child Lock Function.

Lock: In waiting state, press " **STOP/Cancel** " for 2 seconds, there will be a long beep denoting entering the children-lock state and the locked indicator will display if the time has been set, otherwise, the LED will display " **---** ".

Lock quitting: In locked state, press " **STOP/Cancel** " for 3 seconds, there will be a long "beep" denoting that the lock is released.

## Troubleshooting

Normal	
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal.
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal.
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on cool place like oven door. It is normal.
Oven started accidentally with no food in.	It is forbidden to run the unit without any food inside. It is very dangerous.

Trouble	Possible Cause	Remedy
Oven can not be started.	(1) Power cord not plugged in tightly.	Unplug. Then plug again after 10 seconds.
	(2) Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat.	(4) Door not closed well.	Close door well.
Glass turntable makes noise when microwave oven operates	(5) Dirty roller rest and oven bottom.	Refer to "Maintenance of Microwave" to clean dirty parts.



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.




The accessible surface may be hot during operation.

## "Microwave" Pad instructions

Order	Display	Microwave Power
1	P100	100%
2	P80	80%
3	P50	50%
4	P30	30%
5	P10	10%


### 4. Grill Cooking

Press " **Convection/Grill/Combi.** " five times, the LED will display "G", and press

" **Convection/Grill/Combi.** " for times to choose the power you want, and "G", "C1" or "C2" will display for each added press. Then turn  to set cooking time from 0:05 to 95:00.

Press " **START/+30sec.** " again to start cooking.

1) Press " **Convection/Grill/Combi.** " Five times, the screen display "G".


2) Turn  to adjust the cooking time until the oven displays "10:00".

3) Press " **START/+30sec.** " to start cooking.

**Note:** If half of the grill time passes, the oven sounds three times, and this is normal. In order to have a better effect of grilling food, you should turn the food over, close the door, and then if no operation the oven will continue cooking.

### 5. Convection Cooking

Press " **Convection/Grill/Combi.** " once, the LED will display "140", and press

" **Convection/Grill/Combi.** " for times to choose the temperature you want, and "140", "160", "180", "G", "C1", "C2" will display for each added press. Then turn  to set cooking time from 0:05 to 95:00.

Press " **START/+30sec.** " again to start cooking.

# Here For You

---

## After-sales assistance

If you continue to experience problems with your Microwave, please call the Montpellier customer service helpline on: **03333 234 473**.

Please have all your product details available, including the model number, serial number, date of purchase, and your retailer's details before registering a fault.

The service call cannot progress without this information.

## Your 2 year Manufacturer's guarantee

THIS DOES NOT AFFECT YOUR STATUTORY RIGHTS.

Your new Montpellier appliance carries a free guarantee which protects you against the cost of repairs during the first 24 months from date of purchase provided that:

Any claim is accompanied by evidence of the model reference, model serial number and proof of purchase, such as a Sales Receipt, showing that the appliance was purchased within the 24 months prior to the date of claim.

## What is not covered under the Guarantee

- Any appliance not correctly installed and operated in accordance with the manufacturer's instructions.
- Any appliance that is used for anything other than domestic purposes.
- Any defect caused by accident, misuse, unauthorised modification or inexpert repair.
- Cost of Call-out where a fault cannot be found with the appliance.
- Cost of Call-out for work covering routine maintenance, such as, but not exclusively, cleaning of filters or defrosting.
- Cost of Call-out for work required to correct the alignment of doors following door reversal procedures carried out by you.
- Use of the appliance by anyone other than the Householder.
- Use in any commercial environment.
- Consumable items, such as, but not exclusively, fuses in plugs, bulbs and breakable items which require routine replacement.
- Repair costs incurred that have not been authorised by Montpellier service and/or carried out by a non-approved Montpellier engineer.
- Montpellier Appliances do not accept claims for consequential loss, rusting, corroding, delivery damage or scratches.

## YOUR GUARANTEE IS VALID ONLY IN THE UK.

To register your appliance simply complete the card in your appliance pack and return it with a stamp affixed or alternatively you can register online at **[www.montpellier-appliances.com/support](http://www.montpellier-appliances.com/support)**

## SERVICE HELP-LINE

Should your appliance develop a fault, please call the Montpellier customer service helpline on: **03333 234 473**.

Please remember to have all your product details available, including the model number, serial number, date of purchase and your retailer's details before registering a fault.

---

**Montpellier Domestic Appliances Ltd.**

Unit 1, Tewkesbury Retail Park, Northway Lane,  
Tewkesbury, Gloucestershire GL20 8JU

[www.montpellier-appliances.com](http://www.montpellier-appliances.com)



The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.